

Operating Instructions

MEW01228

Revision 1

Web512 V2.6.x for Web-server II, 1598

Author: Jan Pettersson	Date of issue: 2009-09-21	Date of rev: 2011-08-12
------------------------	---------------------------	-------------------------

This page has deliberately been left blank.

Table of contents

1	Introduction	5
2	Definitions / Explanations	6
3	General description	7
3.1	Web-server II, 1598	8
4	Functions	9
4.1	Login	10
4.2	Sound Off, Help & Print	10
4.2.1	Sound Off	10
4.2.2	Help	11
4.2.3	Print	11
4.3	Tester4	11
4.4	Status	12
4.4.1	Control unit	12
4.4.2	Alarm	13
4.4.3	Pre-warning	14
4.4.4	Co-incident	15
4.4.5	Faults	15
4.4.6	Disablements	15
4.4.7	Interlockings	15
4.4.8	Service signals	16
4.4.9	Doors Opened	16
4.4.10	Zones in Test	16
4.5	Fault List	17
4.6	Disablement	17
4.6.1	Zone Address.	18
4.6.2	Zone	18
4.6.3	Device type	18
4.6.4	Inter. Output (Interlocking Output.)	18
4.6.5	Loop unit Output	19
4.6.6	Relay Output	19
4.6.7	Voltage Output	19
4.6.8	RE8 Output (Re0-Re7.)	19
4.6.9	GFBP Output	20
4.6.10	Control Unit Loop (COM loop 0-3.)	20
4.6.11	Loop unit Loop (Loop unit, zone line input.)	20
4.6.12	DET8 Loop (DET8 zone line input 0-7).	20
4.6.13	BS4 Loop (BS4 loop 0-3.)	21
4.6.14	General	21
4.6.15	By Time Channel	21
4.6.16	Alert annunciation	21
4.7	Sensor list	23
4.7.1	Search by Tech. No.	23

4.7.2	Search by Zone - Address	23
4.7.3	Search by Limit	24
4.8	Event log	25
4.8.1	General	25
4.8.2	Alarm	25
4.8.3	Interlocking	26
4.8.4	Web Event	26
4.9	Operation; Daily	27
4.9.1	Daily - Disablement	27
4.9.2	Password (Access code)	28
4.9.3	Interlocking	28
4.9.4	Misc	30
4.9.5	Zone Test	30
4.9.6	Gateway	30
4.9.7	Web links	31
4.10	Operation; Maintenance	32
4.10.1	Maintenance – Disablement	32
4.10.2	Password (Access code)	33
4.10.3	Misc	33
4.11	Operation; Service	35
4.11.1	Service – Misc.	35
4.11.2	Service – Act. Outputs	36
4.11.3	Service – Statistic	37
4.11.4	Password (Access code)	39
4.11.5	Fire Drill	39
4.11.6	FTP / Telnet	40
4.12	Logout	41
4.13	E-mails	41
4.14	Gateway function	41
5	Web512 II Config Tool V2.6.x	42
5.1	Sites	42
5.2	Web	44
5.2.1	TCP/IP (Ethernet IP)	44
5.2.2	NTP Server	44
5.2.3	Custom logo & text	44
5.2.4	Text	45
5.2.5	Alarm sound	45
5.3	General e-mail	46
5.3.1	General e-mail configuration	46
5.3.2	E-mail properties	46
5.4	Language	50
5.4.1	Select language for web pages	50
5.4.2	Select web link for Help text	50
5.5	Gateway	51
5.5.1	Type of gateway	51
5.5.2	SIA	51

5.5.3	Tateco configuration _____	51
5.5.4	COM port configuration _____	51
5.6	Users _____	53
5.6.1	User settings _____	53
5.7	Web Link _____	54
5.8	CU Name _____	55
5.9	FTP/SSL _____	56
5.9.1	Change user info for FTP login _____	56
5.9.2	Select SSL Certificates _____	56
5.10	Misc _____	57
5.10.1	Event Log _____	57
5.10.2	Misc. settings _____	58
5.10.3	EBL Talk on Ethernet _____	58
5.11	About _____	59
6	Site download to Web-server II _____	60
7	S/W download to Web-server II _____	61
8	Installation / Commissioning _____	62
8.1	LED indicators _____	62
8.2	Starting up the web-server _____	62
9	Connections _____	64
10	Revision history _____	65

1 Introduction

This document describes **Web512 V2.6.x for Web-server II 1598**.

Web-server II 1598 is the hardware.

The functions are depending on which software that is downloaded to the Web-server II.

The functions are also depending on which configuration data that is created and downloaded to the Web-server II.

The software (Web512) is downloaded at the same time as the configuration data to the Web-server II via a Config Tool (a PC program).

The Config Tool is depending on the EBL system and the EBL software version.

This document describes the following software:

Web512 V2.6.x for Web-server II 1598.

To create the configuration data and to download it as well as the software to the Web-server II, the following Config Tool shall be used:

Web512 II Config Tool V2.6.x.

The Web-server II is used when one EBL512 control unit or an EBL512 system with two or more control units shall be connected to Internet / an intranet (LAN) and/or as a Gateway, as follows:

- For presentation of the EBL512 status in a PC (web browser).
- For remote control of the EBL512 (via encrypted and safe two-way communication).
- As an e-mail client.
- As a Gateway.

NOTE!

The Web-server II 1598 has replaced the Web-server 1588, which is no longer manufactured. The Config Tools for Web-server 1588 cannot be used for Web-server II 1598. Config tools for Web-server II 1598 have to be used, e.g. **Web512 II Config Tool V2.6.x**.

2 Definitions / Explanations

Definitions / explanations / abbreviations / etc. frequently used or not explained elsewhere in the document.

C.i.e. Control and indicating equipment (=control unit; C.U.)

C.U. Control unit (=Control and indicating equipment)

S/W Software

H/W Hardware

System Two or more control units connected to a TLON Network.

Circular log / list

The log / list re-starts when it is "full". The first events will be overwritten, i.e. a circular log / list shows the xx latest events.

Straight log / list

The log / list stops when it is full and has to be erased before the logging can start again, i.e. a straight log shows the xx earliest events.

LAN Local Area Network.

3 General description

The **Web-server II** (1598) can be used with one, two, three or four of the following functions:

1. As a web-server when one EBL512 control unit or an EBL512 system with two or more control units shall be connected to Internet / an intranet (LAN), for presentation of EBL512 status in a PC using the web browser *Microsoft Internet Explorer*. See page 9.
2. As a web-server for remote control of EBL512 via encrypted and safe two-way communication (HTTPS). See page 9.
3. As an e-mail client to send e-mails in case of special events (e.g. fire alarm, fault, etc.), see page 46.
4. As a Gateway to a separate system, i.e. to transmit and present fire alarm information in another (PC) system. See chapter "Gateway", page 51.

NOTE! Pos. 2 and pos. 3 (above) cannot be used separately, only together with pos. 1.

The Web-server II has to be configured and the Web-server II software has to be downloaded via the Config Tool **Web512 II Config Tool V2.6.x**. See also chapter "Introduction", page 5.

NOTE! Remote control is only valid for system EBL512 software version ≥ 2.5 .

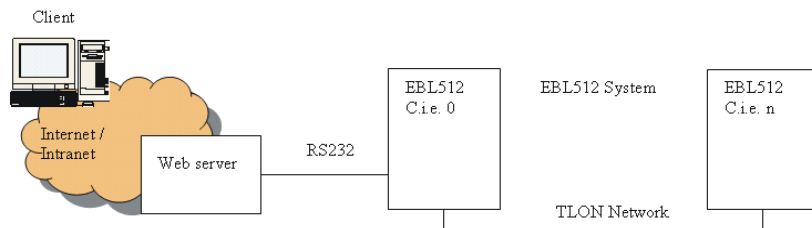


Figure 1. A PC is connected to an EBL512 system via internet / an intranet (LAN) and the Web-server II, 1598.

3.1 Web-server II, 1598



Figure 2. Web-server II, 1598.

The Web-server II consists of a light grey plastic cabinet, which shall be vertically mounted on a DIN rail.¹

The Web-server II has four interfaces.


For connections and technical data, see Technical Description for Web-server II 1598 (MEW01035).

¹ Symmetric 35 mm DIN rail. Not supplied with the Web-server II.

4 Functions

The following chapters describes all Web-server II functions.

The site's **start page** (before login) might look as follows:

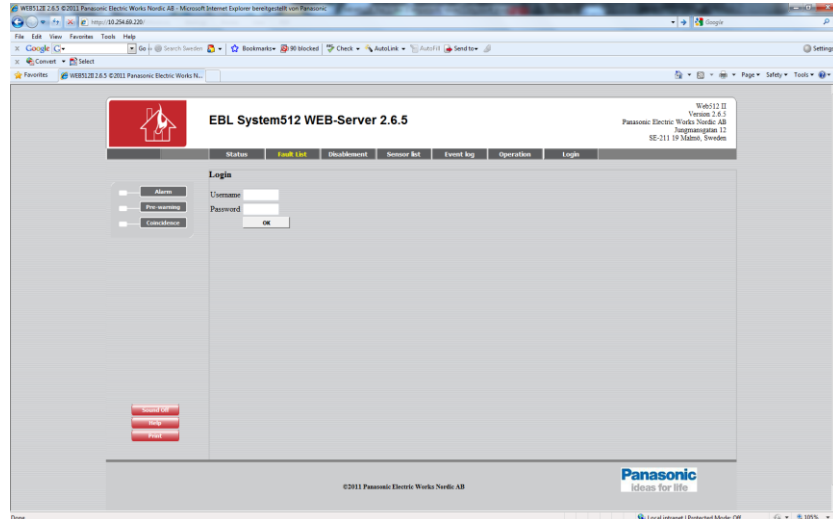

NOTE! The look might vary depending on screen resolution, settings etc.

Up to the right: A predefined text string (custom text) with data about the actual system, see chapter "Text", page 45.

Down to the right: An image (custom logo), see chapter "Logo", page 44.

A number of buttons (hyperlinks to other pages).

Depending on if "Anonymous login" is allowed or not, **User name** and **Password** are required or not required, to see the status information.

Even if the Web-server II is to be used for status information only (User level 1), it is recommended to use **User name** and **Password** (i.e. "Anonymous login" is not recommended).

For remote control and access to corresponding information, a **User name** and a **Password** are always required for **User level 2** (Daily), **User level 3** (Maintenance) and **User level 4** (Service).

The Web-server II has to be configured via the PC tool **Web512 II Config Tool V2.6.x**, see page 42.

User level 1 (Status information only.)

User level 2 (Daily)

User level 3 (Maintenance)

User level 4 (Service)

4.1 Login


Username: Type the user name for the User level respectively.

Password: Type the user password for the User level respectively.

Click **OK** to open the **Status – Summary** view.

NOTE! It is possible to have a "User lockout" for one hour after three unsuccessful login attempts.

After login the site might look as follows:

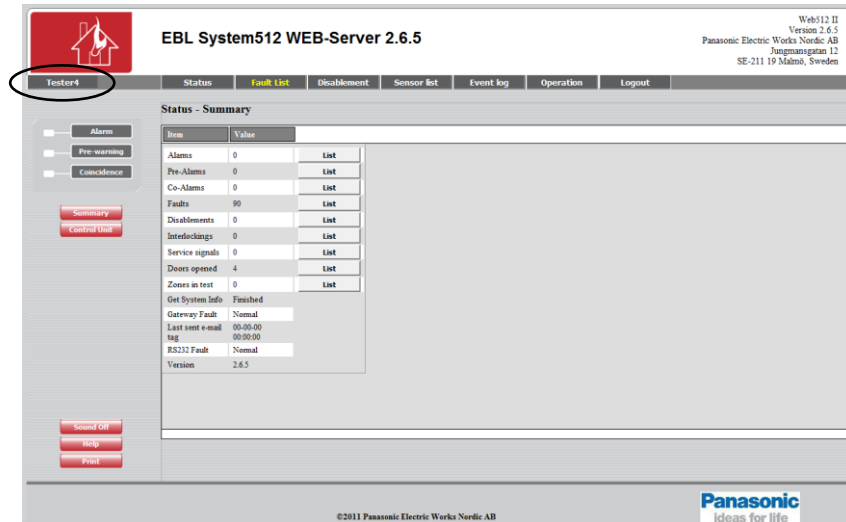

The login User name (in this example "Tester4") will be shown up to the left.

Depending on the login User name and Password (i.e. depending on User level), different buttons can be used, which give access to remote control and/or information.

Regarding Logout, see chapter "Logout", page 41.

4.2 Sound Off, Help & Print



4.2.1 Sound Off

NOTE! This button is only visible if a sound file is downloaded and also Enabled, see chapter "Alarm sound", page 45.

When a fire alarm is activated the buzzer/speaker in the PC is used for a sound alert.

Click **Sound Off** to silence the buzzer/speaker in the PC (until a new fire alarm is activated).

4.2.2 Help

Click **Help** to open a help text. Regarding the user definable URL (web link) for the help text, see chapter "Language", page 50.

4.2.3 Print

Click **Print** to open a "Print" dialog box. Select a printer, do the required settings and click **Print** to start the printing.

You will get a print-out, **on the selected printer**, of **the information shown in the open view / list**. An example:

Web512 II
Version 2.6.5
Panasonic Electric Works Nordic
AB
Jungmansgatan 12
SE-211 19 Malmö, Sweden

EBL System512 WEB-Server 2.6.5

Status - Summary

Item	Value
Alarms	0
Pre-Alarms	0
Co-Alarms	0
Faults	90
Disablenents	0
Interlockings	0
Service signals	0
Doors opened	4
Zones in test	0
Get System Info	Finished
Gateway Fault	Normal
Last sent e-mail tag	00-00-00 00:00:00
RS232 Fault	Normal
Version	2.6.5

4.3 Tester4

NOTE! **Tester4** is in this example only! The **User Name** that you used for login will be shown here.

Click **Tester4** to open the **Web user – Change password** view:

The screenshot shows a web interface titled "Web user - Change password". On the left, there is a vertical sidebar with buttons for "Alarm", "Pre-warning", "Coincidence", "Summary", and "Control Unit". The main content area contains three input fields labeled "Old password", "New password", and "Verify password", each followed by a small white button. A larger "Change" button is positioned at the bottom right of the main area.

The **Password** for any valid **User Name** can be changed.

Old password: Type the old password.

New password: Type the new password.

Verify password: Type the new password.

Click **Change** to carry out the change.

4.4 Status

After log in

or

In any other view click **Status** or **Summary** to see the **Status – Summary** view.

Item	Value	
Alarms	0	List
Pre-Alarms	0	List
Co-Alarms	0	List
Faults	0	List
Disabilities	0	List
Interlockings	0	List
Service signals	0	List
Doors opened	0	List
Zones in test	0	List
Get System Info	Finished	
Gateway Fault	Normal	
Last sent e-mail tag	00-00-00 00:00:00	
RS232 Fault	Normal	
Version	2.6.2	

Depending on the log in **User level** (which is depending on **User name** and **Password**), different buttons can be used, which give access to remote control and information or information only.

The page is continuously updated (approx. each 10th sec.).

In case of inconsistency between the Web-server II and the EBL512 system a synchronization has to be done via EBL512 (menu H8/S10).² See also chapter "Synchronize", page 34. After restart of the Web-server II is always a synchronization done (automatically).

Regarding **User name** and **Password**, see chapter "Functions", page 9.

User level 1 is for presentation of the actual EBL512 status only.

The user can, after log in on User level 1, view the **Status – Summary information shown above**.

The different **Items** and **Values** (number of alarms etc.) as well as each button are described on the following pages.

4.4.1 Control unit

Click **Control Unit** to open the **Status – Control Unit** view:

Control Unit	Name	Sync.Status	
00	Central 0	Finished	System Info
01	Central 1	Finished	System Info

Sync. Status, see chapter "Synchronize", page 34.

² If more than one EBL512 are available the synchronization can be done via Win512 (the PC with Win512 can be connected to one EBL512 c.i.e. and the Web-server II to another).

Sync. Status = Finished = The control unit info for the system (system) have been picked up by the Web-server II.

4.4.1.1 System Info

Click **System Info** to open the **Status – System Information** view:

Status - System Information	
Item	Value
CU	00
Version	2.6.4
SSD	70
SSW	3
SSI	3
MAXLOOPS	512
Checksum	BF12
Textstruct	4
Text version	71

System Information, e.g. software version (2.6.4) and maximum number of addresses that can be used (MAX LOOPS 512).

Click **Control Unit** to return the **Status – Control Unit** view.

Click **Summary** to return to the **Status – Summary** view.

4.4.1.2 Gateway Fault

Value = Normal = There is no Web-server II ↔ external equipment communication fault.

Value = Error = There is a Web-server II ↔ external equipment communication fault.

4.4.1.3 Last sent e-mail tag

Value = Date and time when the last e-mail was sent. (Also showing if the communication Web-server II ↔ SMTP server was OK at that time.)

4.4.1.4 RS232 Fault

Value = Normal = There is no Web-server II ↔ EBL512 communication (RS232) fault.


Value = Error = There is a Web-server II ↔ EBL512 communication (RS232) fault.

4.4.1.5 Version

Web512 **S/W** version.

4.4.2 Alarm

In case of a fire alarm (**Value** > 0 and red indication), click **Alarm** or **List** to view the **Alarm** view / list.

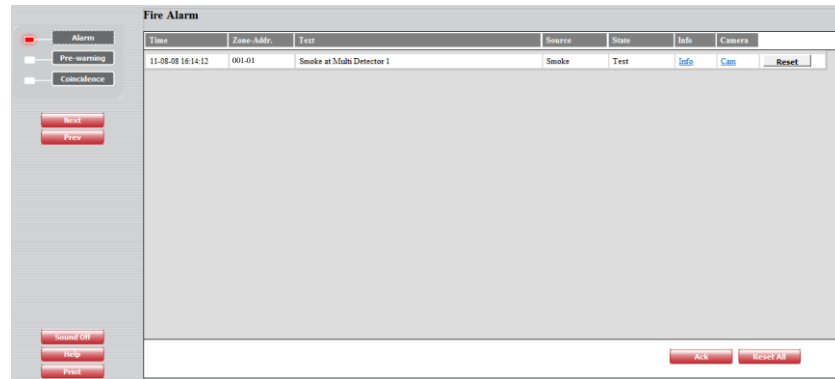

The **Time** (date & time), **Zone – Address** and **Text** (alarm text) are displayed.

Source = Smoke, Heat, Multi, MCP, Exting. system or Other.

State = Heavy smoke / heat, Test, Isolated and Alert Annunciation alarm acknowledged / not acknowledged. ³ (Alert Annunciation alarm – see below)

Info: A hyperlink to open a document, a drawing etc. for more information regarding the alarm point.

Camera: A hyperlink to a web camera.

Click **Reset** to reset the fire alarm respectively. (Require log-in on **User level 3** or higher.)

Click **Reset All** to reset all fire alarms. (Require log-in on **User level 3** or higher.)


If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

NOTE!
Ack (to the left of **Reset All**) can only be used when an Alert Annunciation alarm is activated. Click **Ack** to acknowledge the Alert Annunciation alarm.

4.4.3

Pre-warning

In case of a pre-warning (**Value** > 0 and yellow indication), click **Pre-warning** or **List** to view the **Pre-warning Alarm** view / list.

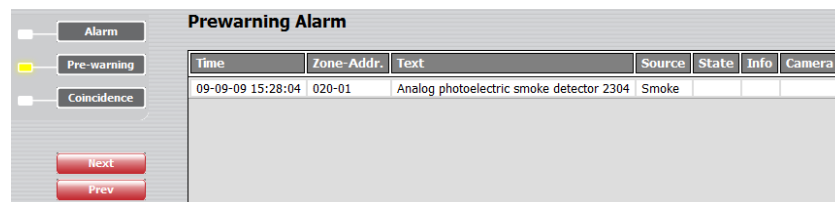

The **Time** (date & time), **Zone – Address** and **Text** (alarm text) are displayed.

Source = Smoke, Heat, Multi or Other.

³ In Australian convention also Acknowledged alarm.

State = -


Info: A hyperlink to open a document, a drawing etc. for more information regarding the alarm point.

Camera: A hyperlink to a web camera.

If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

4.4.4 Co-incident

In case of a co-incident alarm (**Value** > 0 and yellow indication), e.g. one "two-address dependent alarm", click **Co-incident** or **List** to view the **Co-incident Alarm** view / list.

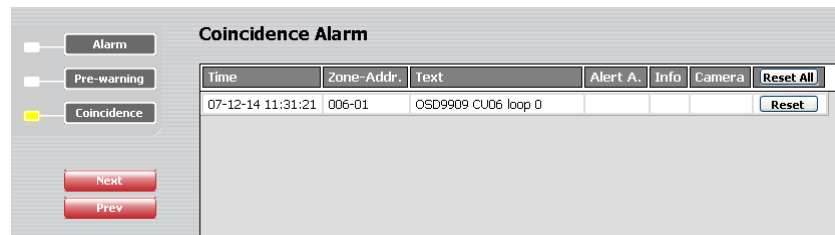

The **Time** (date & time), **Zone – Address** and **Text** (alarm text) are displayed.

Source = Smoke, Heat, Multi, MCP or Other.

State = -

Info: A hyperlink to open a document, a drawing etc. for more information regarding the alarm point.

Camera: A hyperlink to a web camera.

Click **Reset All** to reset all co-incident alarms. (Require log-in on **User level 3** or higher.)

Click **Reset** to reset the co-incident alarm respectively. (Require log-in on **User level 3** or higher.)

If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

4.4.5 Faults

In case of one or more faults (**Value** > 0), click **Faults** or **Fault List** (yellow font colour) or **List** to view the **Fault list** view.

See chapter "Fault List", page 17.

4.4.6 Disablements

In case of one or more disablements (**Value** > 0), click **Disablement** (yellow font colour) or **List** to view the **Disablement – Summary** view.

See chapter "Disablement", page 17.

4.4.7 Interlockings

In case of one or more activated interlocking input / output (**Value** > 0), click **List** to view the **Activated Interlocking Comb.** view.

4.4.8 Service signals

Like menu H4/U6 and menu H8/S4 respectively.

In case of one or more detectors having activated service signal (**Value** > 0), click **List** to see the **Status – Service List** view.

Status - Service List		
Time	Tech.No	Zone-Addr.

Click **Acknowledge** (require login on **User level 4**) to acknowledge the service signal for the detector respectively.

4.4.9 Doors Opened

Like menu H4/U3.

In case of one or more open doors (**Value** > 0), click **List** to see the **Status – Doors Opened** view / list.

Status - Doors Opened					
Time	Control Unit	Type	Board.No	FBP.No	
07-12-17 10:36:52	00	Control Unit			
07-12-17 10:37:00	01	Control Unit			
07-12-18 09:10:19	00	1587	0	0	

4.4.10 Zones in Test

Test mode, see chapter "Zone Test", page 30.

In case of one or more test mode alarms (**Value** > 0), click **List** to see the **Test mode Alarm** view / list.

Testmode Alarm						
Time	Zone-Addr.	Text	Source	State	Info	Camera
11-08-09 11:19:43	001-01	Alarm from local MCP	MCP			

The **Time** (date & time), **Zone – Address** and **Text** (alarm text) are displayed.

Source = Smoke, Heat, Multi, MCP, Exting. system or Other.

Info: A hyperlink to open a document, a drawing etc. for more information regarding the alarm point.

Camera: A hyperlink to a web camera.

Click **Send Mail** to send an e-mail. (E-mail addresses are programmed via the Config tool.)

Click **Clear** to clear the list.

4.5 Fault List

In case of one or more faults (**Value** > 0), click **Fault List** (yellow font colour) or **Faults** (in the **Status – Summary** view) to view the **Fault List** view.

Time	Zone-Addr.	Text	Status	Info	Camera	Ack
12-19 10:25	001-02	FAULT: No reply techn.no. 000002	Serviced	Info	Cam	<input type="checkbox"/>
12-19 10:25	002-02	FAULT: No reply techn.no. 010003	Acknowledged	Info	Cam	<input type="checkbox"/>
12-19 10:25	001-03	FAULT: No reply techn.no. 000003		Info	Cam	<input type="checkbox"/>

The **Time** (date & time), **Zone – Address** (when applicable), **Text** (fault message) and **Status** (Serviced / Acknowledged / Not Serviced and not Acknowledged) are displayed.

Info: A hyperlink to open a document, a drawing etc. for more information regarding the fault.

Camera: A hyperlink to a web camera.

Click **Ack** to acknowledge the selected fault(s). (Require log-in on **User level 2** or higher.)

If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

4.6 Disablement

In case of one or more disablements (**Value** > 0), click **Disablement** (yellow font colour) or (in the **Status – Summary** view) to see the **Disablement – Summary** view:

Item	Value	
Zone Address	0	List
Zone	0	List
Device Type	0	List
Inter.Output	0	List
Loop unit Output	0	List
Relay Output	0	List
Voltage Output	0	List
RES Output	0	List
GFBP Output	0	List
Control Unit Loop	0	List
Loop unit Loop	0	List
DET3 Loop	0	List
BS4 Loop	0	List
General	0	List
By Time Channel	0	List
Alert annunciation	0	List

The different **Items** (types) and **Values** (number of disablements for the type respectively) are shown.

Value > 0 indicates disablement(s). Click the **List** button respectively to see the disablement, including additional information.

4.6.1 Zone Address.

Click **List** to view the **Disablement list – Zone Address** view / list.

Disablement list - Zone Address						
Time	Zone-Addr.	Re-enable time	Reason	Info	Camera	
08-01-30 08:27:50	001-03		menu	Info	Cam	ReEnable

The **Time** (date & time), **Zone – Address**, **Re-enable time** and **Reason** (e.g. via the menu) are displayed.

Info: A hyperlink to open a document, a drawing etc. for more information regarding the fault.

Camera: A hyperlink to a web camera.

Click **ReEnable** to re-enable the disablement respectively. (Require log-in on **User level 2** or higher.)

If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

Click **Summary** to return to the **Disablement – Summary** view.

4.6.2 Zone

Click **List** to view the **Disablement list – Zone** view / list.

Disablement list - Zone		
Time	Zone	Re-enable time
08-01-30 08:25:25	001	ReEnable

Click **ReEnable** to re-enable the disablement respectively. (Require log-in on **User level 2** or higher.)

If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

Click **Summary** to return to the **Disablement – Summary** view.

4.6.3 Device type

Click **List** to view the **Disablement list – Device Type** view / list.

Disablement list - Device Type					
Time	Control Unit	Reason	Type		
08-01-30 08:31:02	01	menu	FTR		ReEnable
08-01-30 08:31:01	00	menu	FTR		ReEnable
08-01-30 08:30:58	01	menu	ATR		ReEnable
08-01-30 08:30:58	00	menu	ATR		ReEnable
08-01-30 08:30:15	01	menu	Alarm Devices		ReEnable
08-01-30 08:30:15	00	menu	Alarm Devices		ReEnable

Click **ReEnable** to re-enable the disablement respectively. (Require log-in on **User level 2** or higher.)

If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

Click **Summary** to return to the **Disablement – Summary** view.

4.6.4 Inter. Output (Interlocking Output.)

Click **List** to view the **Disablement list – Interlocking** view / list.

Disablement list - Interlocking		
Time	Area-Point	
08-01-30 08:38:27	003-01	ReEnable

Click **ReEnable** to re-enable the disablement respectively. (Require log-in on **User level 2** or higher.)

If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

Click **Summary** to return to the **Disablement – Summary** view.

4.6.5

Loop unit Output

Click **List** to view the **Disablement list – Loop unit Output** view / list.

Disablement list - Loop unit Output							
Time	Control Unit	Loop	Address	Type	Output	Reason	
08-01-30 08:48:10	01	0	007	Control	00	menu	ReEnable

Click **ReEnable** to re-enable the disablement respectively. (Require log-in on **User level 2** or higher.)

If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

Click **Summary** to return to the **Disablement – Summary** view.

4.6.6

Relay Output

Click **List** to view the **Disablement list – Relay Output** view / list.

Disablement list - Relay Output					
Time	Control Unit	Type	Output	Reason	
08-01-30 08:52:29	01	Control	01	menu	ReEnable

Click **ReEnable** to re-enable the disablement respectively. (Require log-in on **User level 2** or higher.)

If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

Click **Summary** to return to the **Disablement – Summary** view.

4.6.7

Voltage Output

Click **List** to view the **Disablement list – Voltage Output** view / list.

Disablement list - Voltage Output					
Time	Control Unit	Type	Output	Reason	
08-01-30 08:55:55	00	Alarm Devices	00	menu	ReEnable

Click **ReEnable** to re-enable the disablement respectively. (Require log-in on **User level 2** or higher.)


If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

Click **Summary** to return to the **Disablement – Summary** view.

4.6.8

RE8 Output (Re0-Re7.)

Click **List** to view the **Disablement list – RE8 Output** view / list.

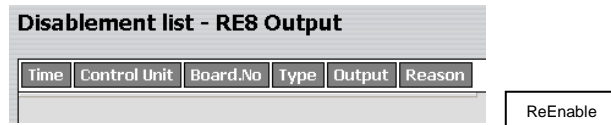

Click **ReEnable** to re-enable the disablement respectively. (Require log-in on **User level 2** or higher.)


If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

Click **Summary** to return to the **Disablement – Summary** view.

4.6.9

GFBP Output

Click **List** to view the **Disablement list – GFBP Output** view / list.

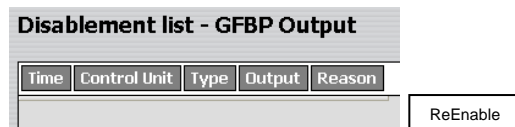

Click **ReEnable** to re-enable the disablement respectively. (Require log-in on **User level 2** or higher.)


If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

Click **Summary** to return to the **Disablement – Summary** view.

4.6.10

Control Unit Loop (COM loop 0-3.)

Click **List** to view the **Disablement list – Control Unit Loop** view / list.

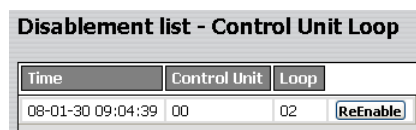

Click **ReEnable** to re-enable the disablement respectively. (Require log-in on **User level 2** or higher.)


If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

Click **Summary** to return to the **Disablement – Summary** view.

4.6.11

Loop unit Loop (Loop unit, zone line input.)

Click **List** to view the **Disablement list – Loop Unit Loop** view / list.

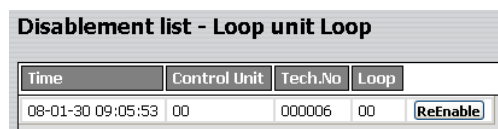

Click **ReEnable** to re-enable the disablement respectively. (Require log-in on **User level 2** or higher.)

If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

Click **Summary** to return to the **Disablement – Summary** view.

4.6.12

DET8 Loop (DET8 zone line input 0-7).

Click **List** to view the **Disablement list – DET8 Loop** view / list.




Click **ReEnable** to re-enable the disablement respectively. (Require log-in on **User level 2** or higher.)

If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

Click **Summary** to return to the **Disablement – Summary** view.

4.6.13 **BS4 Loop (BS4 loop 0-3.)**

Click **List** to view the **Disablement list – BS4 Loop** view / list.

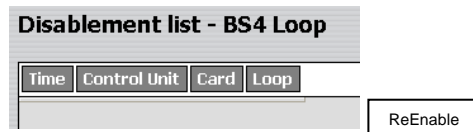


Click **ReEnable** to re-enable the disablement respectively. (Require log-in on **User level 2** or higher.)

If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

Click **Summary** to return to the **Disablement – Summary** view.

4.6.14 **General**

Click **List** to view the **Disablement list – General** view / list.

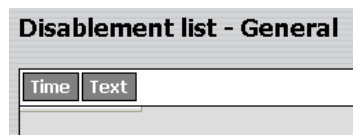


In this version only information that something is disabled via time channel. To see what is disabled, see Time Channel below.

If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

Click **Summary** to return to the **Disablement – Summary** view.

4.6.15 **By Time Channel**

Click **List** to view the **Disablement list – Time Channel** view / list.

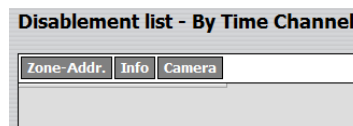

Like menu H4/U2.

Zones and alarm points (Zone-Addr.) disabled via time channel.

If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

Click **Summary** to return to the **Disablement – Summary** view.

4.6.16 **Alert annunciation**

Click **List** to view the **Disablement list – Alert annunciation** view / list.

The Alert annunciation function can be disabled via menu H8/S6.

Disablement list - Alert annunciation	
Time	Text
09-09-10 09:38:01	Alert annunciation function turned off by menu

Click **Summary** to return to the **Disablement – Summary** view.

4.7 Sensor list

NOTE! Log in on User level ≥ 2 is required.

Click **Sensor list** to see the **Sensor Information** view.

Status	Fault List	Disablement	Sensor list	Event log	Operation	Logout
--------	------------	-------------	-------------	-----------	-----------	--------

Sensor Information

Search by Tech.No.
Tech.No:

Search by Zone.Addr.
Zone-Addr.:

Search by Limit
Control Unit:
Limit(%):

4.7.1 Search by Tech. No.

Tech. No.

The search will start as from the specified technical number.

Click **Search** to start the searching.

Sensor list									
Tech.No	Zone-Addr.	Type	Momentary	Weekly	Per-Factor	Min/Max	Info	Camera	
080001	010-01	Smoke	0.0 %/m	0.1 %/m	0.00	1.0 %/m / 1.0 %/m			
080002	010-03	Smoke (Multi)	0.0 %/m	0.1 %/m	0.00	1.0 %/m / 1.0 %/m			
		Heat (Multi)	0°C			0°C / 0°C			
087001	011-01	Aut.	0						
090001	080-01	Smoke	0.0 %/m	0.1 %/m	0.00	0.1 %/m / 0.1 %/m			
090002	080-02	Smoke	0.0 %/m	0.1 %/m	0.00	0.1 %/m / 0.1 %/m			
090003	080-03	Smoke	0.0 %/m	0.1 %/m	0.00	0.1 %/m / 0.1 %/m			
090004	080-04	Smoke	0.0 %/m	0.1 %/m	0.00	0.1 %/m / 0.1 %/m			
090005	080-05	Smoke	0.0 %/m	0.1 %/m	0.00	0.1 %/m / 0.1 %/m			
090006	080-06	Smoke	0.0 %/m	0.1 %/m	0.00	0.1 %/m / 0.1 %/m			
090007	080-07	Smoke	0.0 %/m	0.1 %/m	0.00	0.1 %/m / 0.1 %/m			

A sensor (analog detector) list in technical number order.

If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

Click **Sensor Menu** to return to the **Sensor Information** view.

Click **By Service** to start the searching only for detectors having activated service signal. The sensors (analog detectors) will be listed in technical number order.

4.7.2 Search by Zone - Address

Zone – Addr.

The search will start as from the specified Zone – Address.

Click **Search** to start the searching.

Sensor list									
Tech.No	Zone-Addr.	Type	Momentary	Weekly	Per-Factor	Min/Max	Info	Camera	
080001	010-01	Smoke	0.0 %/m	0.1 %/m	0.00	1.0 %/m / 1.0 %/m			
080002	010-03	Smoke (Multi)	0.0 %/m	0.1 %/m	0.00	1.0 %/m / 1.0 %/m			
		Heat (Multi)	0°C			0°C / 0°C			
087001	011-01	Aut.	0						

A sensor (analog detector) list in technical number order, starting at the specified Zone-Address.

If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

Click **Sensor Menu** to return to the **Sensor Information** view.

4.7.3

Search by Limit

Control unit and Limit

The search will start as from the specified Control Unit and Limit (obscuration in % / m).

Click **Request** to start the searching.

Sensor list				
Tech.No	Zone-Addr.	Type	Momentary	Weekly
080001	010-01	Smoke	0.0 %/m	0.1 %/m
080002	010-03	Smoke (Multi)	0.0 %/m	0.1 %/m
		Heat (Multi)	0°C	

A sensor (analog detectors) list for the Weekly (week average) sensor values \geq the specified Limit.

If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

Click **Sensor Menu** to return to the **Sensor Information** view.

4.8 Event log

Click **Event log** to see the **Event log – General** view.

4.8.1 General

The **Event log - General** view / list (open as default):

Event log - General			
No.	Time	Text	Origin
1	11-08-11 01:00:00	Command: Set calendar and clock	Web512
2	11-08-11 00:00:04	Command: Set calendar and clock	Web512
3	11-08-10 14:30:26	Command: Set calendar and clock	Web512
4	11-04-29 14:55:19	Door open control unit 10	Control Unit 10
5	11-04-29 14:55:18	FAULT: Restart CU 10 code 03	Control Unit 10
6	11-04-29 14:55:24	FAULT: Supervised output 2, CU 10	Control Unit 10
7	11-04-29 14:55:24	FAULT: Supervised output 1, CU 10	Control Unit 10
8	11-04-29 14:55:24	FAULT: Supervised output 0, CU 10	Control Unit 10
9	11-05-02 14:32:51	FAULT: Earth fault (minus), CU 10	Control Unit 10
10	11-04-29 14:56:03	FAULT: Mains, output unit 100027	Control Unit 10
11	11-05-05 05:06:14	FAULT: Low battery capacity, CU 10	Control Unit 10
12	11-04-29 14:56:57	FAULT: Zone line input, tech.no 100028	Control Unit 10
13	11-05-30 17:09:41	FAULT: CU 10 has wrong information	Control Unit 10
14	11-06-29 13:38:59	FAULT: Cut-off COM-loop 0, CU 10	Control Unit 10
15	11-08-05 15:31:43	FAULT: CU 10 has no contact with CU 00	Control Unit 10
16	11-07-12 19:04:56	FAULT: No reply tech.no. 100001	Control Unit 10
17	11-07-12 19:05:00	FAULT: No reply board 3, loop 1, CU 10	Control Unit 10
18	11-07-12 19:05:13	FAULT: No reply tech.no. 100002	Control Unit 10
19	11-07-12 19:05:30	FAULT: No reply tech.no. 100003	Control Unit 10

The number of events and type of events logged here are depending on if the option **Use Extended Log** is selected in the **Web config tool** or not:

Selected: All events (except the web events) will be logged in the "General" event log. Up to 10000 events in the list.

Not selected: All events, except "Alarm", "Interlocking" and "Web" events will be logged in the "General" event log. Up to 999 events in the list.

"Alarm", "Interlocking" and "Web" events will be logged / presented in separate event logs, see below.

If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

Click **General** to return to the **Event log - General** view.

4.8.2 Alarm

Click **Alarm** to see the **Event log – Alarm** view / list:

Event log - Alarm			
No.	Time	Text	Origin
1	11-08-11 11:39:33	Command: Reset all alarms	Web512
2	11-08-11 11:39:16	Zone 010 in normal condition	Control Unit 08
3	11-08-11 11:39:26	Command: Reset zone 010	Web512
4	11-08-11 11:38:33	FIRE ALARM zone 080 address 01	Control Unit 09
5	11-08-11 11:38:09	FIRE ALARM zone 011 address 01	Control Unit 08
6	11-08-11 11:37:45	FIRE ALARM zone 010 address 03	Control Unit 08
7	11-08-11 11:37:45	FIRE ALARM zone 010	Control Unit 08
8	11-08-11 11:37:04	FIRE ALARM zone 010 address 01	Control Unit 08

All Fire alarms, co-incident alarms and pre-warnings will be logged. Up to 999 events in the list.

If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

Click **General** to return to the **Event log - General** view.

4.8.3

Interlocking

Click **Interlocking** to see the **Event log – Interlocking** view / list:

Event log - Interlocking			
No.	Time	Text	Origin
1	11-08-09 11:18:46	Interlocking output001/01 deactivated	Control Unit
2	11-08-09 11:18:29	Interlocking output001/01 activated	Control Unit
3	11-08-09 11:18:01	Interlocking output001/01 deactivated	Control Unit
4	11-08-09 11:14:44	Interlocking output001/01 activated	Control Unit
5	11-08-08 16:22:37	Interlocking output001/01 deactivated	Control Unit
6	11-08-08 16:14:13	Interlocking output001/01 activated	Control Unit

All Interlocking events will be logged. Up to 999 events in the list.

If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

Click **General** to return to the **Event log - General** view.

4.8.4

Web Event

Click **Web Event** to see the **Event log – Web Event** view / list:

Event log - Web Event				
No.	Time	Text	User	IP address
1	11-08-09 13:40:31	Login	Admin	62.134.44.21
2	11-08-09 13:40:09	Timeout	Admin	62.134.44.20
3	11-08-09 11:24:01	Login	Admin	62.134.44.20
4	11-08-09 11:20:25	Logout	Admin	62.134.44.20
5	11-08-09 11:17:56	Login	Admin	62.134.44.20
6	11-08-09 11:16:57	Logout	Admin	62.134.44.20
7	11-08-09 11:14:07	Login	Admin	62.134.44.20

All Web events (normally Login / Logout) will be logged incl. who did it (User name). Up to 100 events in the list.

If the list is "full" click **Next** to see the next list and **Prev** to see previous list.

Click **General** to return to the **Event log - General** view.

4.9 Operation; Daily


NOTE! Log in on User level 2, 3 or 4 is required.

The **Daily - Disablement** view is default (**User level 2**). See below.

The **Maintenance - Disablement** view. (**User level 3**). See page 32.

The **Service – Misc.** view. (**User level 4**). See page 35.

Click **Menu** to get access to the following buttons:

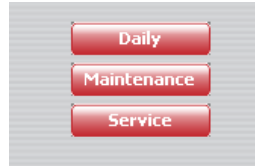


Click **Daily** to open / return to the **Daily - Disablement** view.

4.9.1 Daily - Disablement

Click **Daily** or **Operation** to see the **Daily - Disablement** view.

Click **Disablement** in any of the "daily" views below to return to the **Daily - Disablement** view.

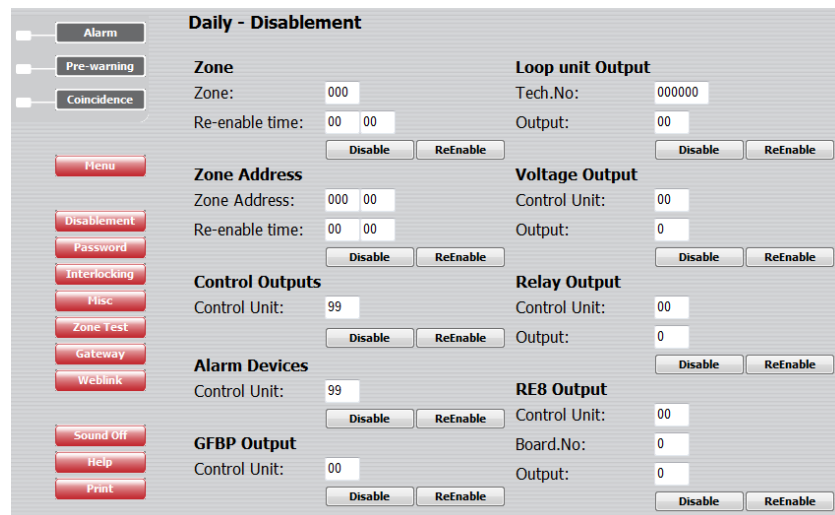

4.9.1.1 Zone

Like menu H2/B1 & B4.

A specified **Zone** can be disabled / re-enabled and a **Re-enable time** can be set.

4.9.1.2 Zone – Address

Like menu H2/B2 & B5.

A specified alarm point (**Zone-Address**) can be disabled / re-enabled and a **Re-enable time** can be set.

4.9.1.3 Control Outputs

Like menu H2/B8.

All control outputs type "control", "fire ventilation" and "extinguishing system" can be collectively disabled / re-enabled (all at the same time) in all control units (99) or in a specified control unit (00-29).

4.9.1.4

Alarm Devices

Like menu H2/B9.

All control outputs type "alarm device" can be collectively disabled / re-enabled (all at the same time) in all control units (99) or in a specified control unit (00-29).

4.9.1.5

GFBP Output

Like menu H2/B3 & B6.

The expansion board 1583, German Fire Brigade Panel output for extinguishing equipment, can be disabled / re-enabled in a specified control unit (00-29).

4.9.1.6

Loop unit Output

Like menu H2/B3 & B6.

A specified output (0-1) on a specified COM loop unit (technical number) can be disabled / re-enabled.

4.9.1.7

Voltage Output

Like menu H2/B3 & B6.

A specified voltage output (S0-S3) in a specified control unit (00-29) can be disabled / re-enabled.

4.9.1.8

Relay Output

Like menu H2/B3 & B6.

A specified relay output (R0-R1) in a specified control unit (00-29) can be disabled / re-enabled.

4.9.1.9

RE8 Output


Like menu H2/B3 & B6.

A specified relay output (RE0-RE7) on a specified expansion board 1581, 8 relays expansion board (0-5), in a specified control unit (00-29), can be disabled / re-enabled.

4.9.2

Password (Access code)

Click **Password** to see the **Daily – Change password** view.

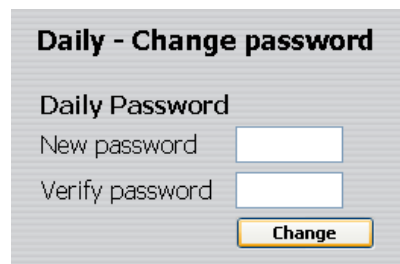

Daily - Change password

Daily Password

New password

Verify password

Like menu H10.


The access code (password) for **Daily duties**, four digits, can be changed. (EBL512 access level 2.)

Click **Change** to change the access code.

4.9.3

Interlocking

Click **Interlocking** to see the **Daily – Interlocking** view.

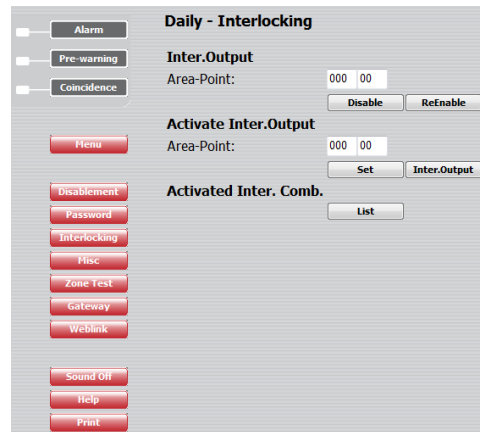

4.9.3.1 Inter. Output

Like menu H9/C4 & C5.


A specified interlocking combination (**Area-Point**) output can be disabled / re-enabled.

4.9.3.2 Activate Inter. Output

Like menu H9/C2 & C3.


A specified interlocking combination (**Area-Point**) output can be activated (set).

Click **Inter. Output** to see an activated **Interlocking** outputs list:

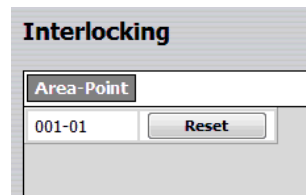

Click **Reset** to reset (de-activate) the output respectively.

4.9.3.3 Activated Inter. Comb.

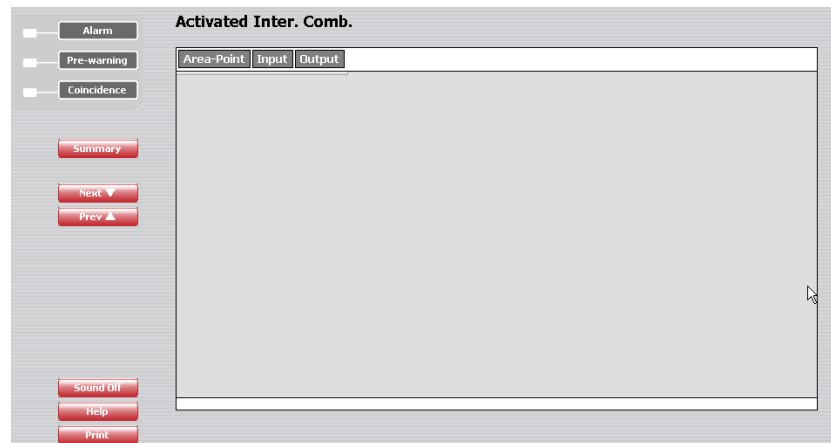


Like menu H9/C1 (except no text).

A list of activated interlocking combination (**Area-Point**) **Input** and **Output** respectively.

NOTE! A latched interlocking output has to be reset via menu H9/C3.

4.9.4 Misc

Click **Misc** to see the **Daily – Set Calendar and Time** view.

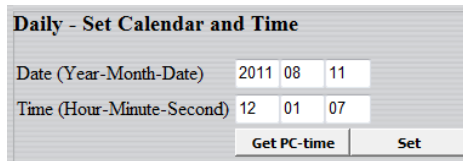

Daily - Set Calendar and Time						
Date (Year-Month-Date)	2011	08	11			
Time (Hour-Minute-Second)	12	01	07			
				Get PC-time	Set	

4.9.4.1 Set Calendar and Time

The **Date** (Year – Month – Date) can be typed or taken from your PC, see below.

The **Time** (Hour – Minute – Second) can be typed or taken from your PC, see below.


Click **Get PC time** to automatically get the date and time from your PC in the Date and Time field respectively.

Click **Set** to set the date and time shown in the Date and Time field respectively.

Regarding date & time, see also chapter "NTP Server", page 44.

4.9.5 Zone Test

Click **Zone Test** to see the **Zone Test** view.

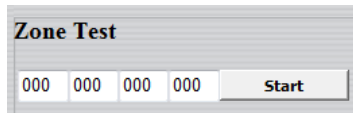


Zone Test				
000	000	000	000	Start

Like in menu H7.

One, two, three or four Zones can be set in test mode. Type the zone number in the white field respectively.

Click **Start** to start the test mode.

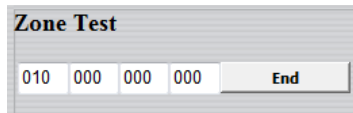

Zone Test				
010	000	000	000	End


Click **End** to end the test mode.

In the **Status – Summary** view, click **List** (Zones in test) to open the **Test mode Alarm** view / list. (See page 16.)

E-mail(s) can be sent (**Mail**) and the list can be cleared (**Clear**).

4.9.6 Gateway

Click **Gateway** to see the **Daily - EBLTalk Test** view.

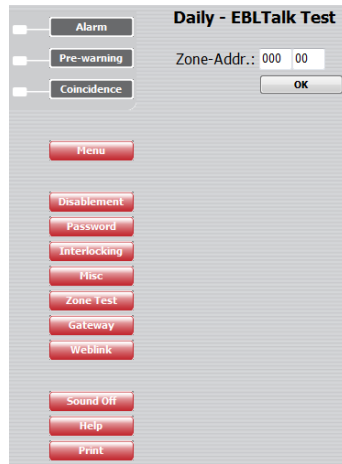

A "fire alarm" for a specified alarm point can be sent from the Web-server II (EBLTalk) for testing purposes. Type a Zone-Address and click **OK**.

NOTE!


The above is valid for the **EBLTalk** gateway function.

For the **Tateco** gateway function, instead there will be a **Daily - Tateco Test** view with the same test facility.

4.9.7

Web links

Weblink: Click to open the **Web link** list view:

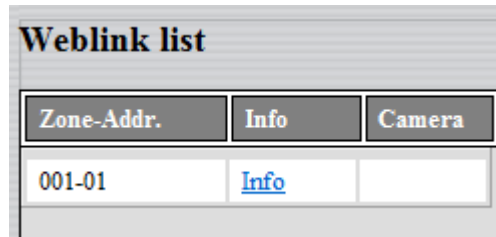

All web links are found in the list.

4.10 Operation; Maintenance

NOTE! Log in on User level 2, 3 or 4 is required.

The **Daily - Disablement** view is default (**User level 2**). See page 27.

The **Maintenance - Disablement** view. (**User level 3**). See below.

The **Service – Misc.** view. (**User level 4**). See page 35.

Click **Menu** to get access to the following buttons:




If required, click **Login** and Log in on User level 3 or 4.

Click **Maintenance** to open the **Maintenance - Disablement** view.

4.10.1 Maintenance – Disablement

The **Maintenance - Disablement** view:

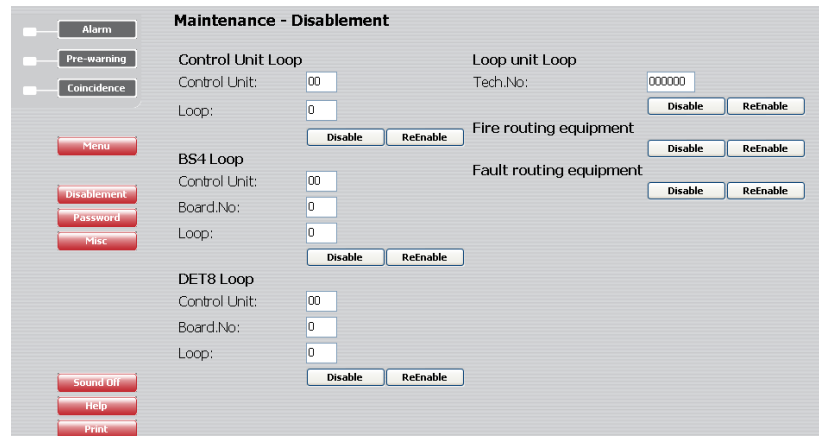

4.10.1.1 Control Unit Loop

Like menu H8/S2 & S3.

A specified **COM Loop** (0-3) in a specified **Control Unit** (00-29) can be disabled / re-enabled.

4.10.1.2 BS4 Loop

Like menu H8/S2 & S3.

A specified **BS4 Loop** (0-3) on a specified expansion board 1584, Autronica interface **Board** (0-3), in a specified **Control Unit** (00-29), can be disabled / re-enabled.

4.10.1.3 DET8 Loop (Zone line input)

Like menu H8/S2 & S3.

A specified zone line input, **Loop** (0-7) on a specified expansion board 1580, 8 zones expansion **Board** (0-5), in a specified **Control Unit** (00-29), can be disabled / re-enabled.

4.10.1.4 Loop unit Loop (Loop unit zone line input)

Like menu H8/S2 & S3.

The zone line input (0) on a specified COM loop unit / technical number (**Tech. No.**), can be disabled / re-enabled.

4.10.1.5 Fire routing equipment

Like menu H8/S1.

The **FIRE** (fire brigade tx) output for routing equipment can be disabled / re-enabled.


4.10.1.6 Fault routing equipment

Like menu H8/S1.

The **FAULT** (fault tx) output for routing equipment can be disabled / re-enabled.

4.10.2 Password (Access code)

Click **Password** to see the **Maintenance – Password** view.

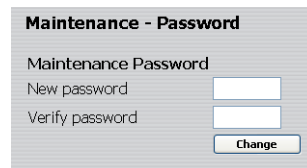


Like menu H8/S11.

The access code (password) for **Maintenance**, four digits, can be changed. (EBL512 access level 3.)

Click **Change** to change the access code.

4.10.3 Misc

Click **Misc** to see the **Maintenance – Misc.** view.

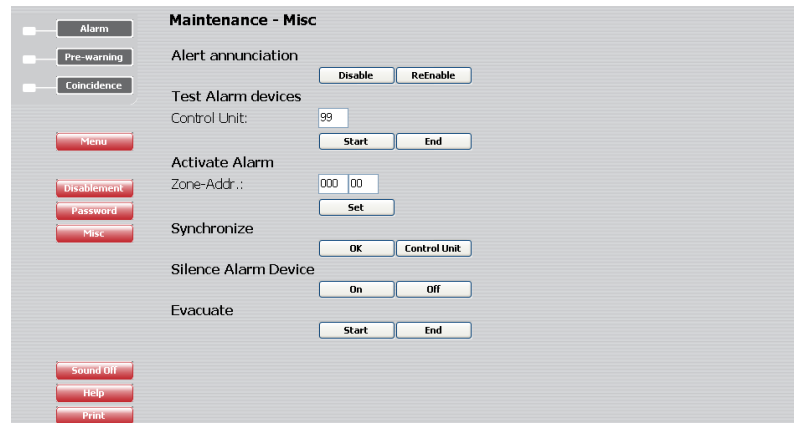

4.10.3.1 Alert Annunciation

Like menu H8/S6.

The Alert Annunciation function can be disabled / re-enabled.

4.10.3.2 Test Alarm devices

Like menu H8/S7.

All control outputs type "alarm device" can be collectively tested (all at the same time) in all control units (99) or in a specified control unit (00-29).

Click **Start** to start the test.

Click **End** to end the test.

4.10.3.3 Activate Alarm

Like menu H8/S9.


A specified alarm point (**Zone-Address**) can be set in fire alarm mode. Reset the fire alarm like any other fire alarm, see chapter Alarm, page 13.

4.10.3.4 Synchronize

Like menu H8/S10.

Click **OK** to start the synchronization.


Click **Control Unit** to open the **Status – Control Unit** view to see the **Sync. Status** for the control unit respectively.

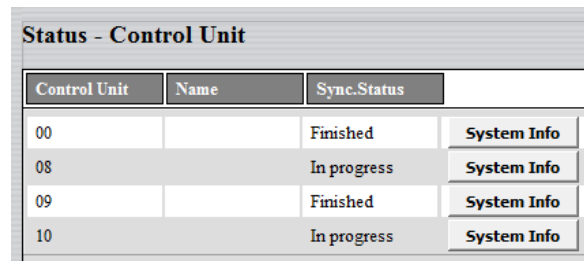

Control Unit	Name	Sync.Status	
00		Finished	System Info
08		In progress	System Info
09		Finished	System Info
10		In progress	System Info

Click **Misc** to return to the **Maintenance – Misc.** view.

Click **System Info** to see System Information, e.g. software version (2.6.4) and maximum number of addresses that can be used (MAX LOOPS 512).

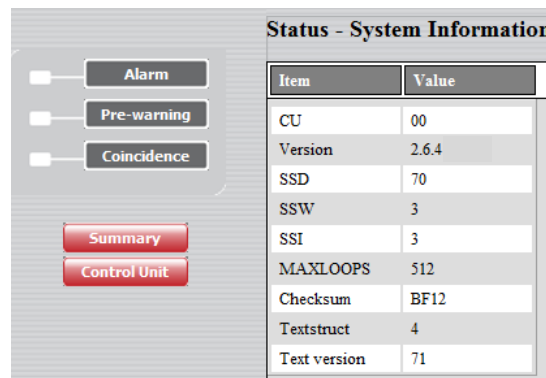

Item	Value
CU	00
Version	2.6.4
SSD	70
SSW	3
SSI	3
MAXLOOPS	512
Checksum	BF12
Textstruct	4
Text version	71

Click **Control Unit** to return to the **Status – Control Unit** view.

Click **Summary** to return to the **Status – Summary** view.

4.10.3.5 Silence Alarm Device

Like the "Silence alarm devices" button on the EBL512 front.

Click **Start** to silence the alarm devices.

Click **End** to end the silence function.

4.10.3.6 Evacuate

Like the "Evacuate" button on the EBL512 front.

Click **Start** to start the evacuate function.

Click **End** to end the evacuate function.

4.11 Operation; Service


NOTE! Log in on User level 2, 3 or 4 is required.

The **Daily - Disablement** view is default (**User level 2**). See page 27.

The **Maintenance - Disablement** view. (**User level 3**). See page 32.

The **Service – Misc.** view. (**User level 4**). See below.

Click **Menu** to get access to the following buttons:

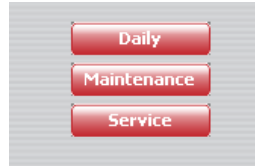


If required, click **Login** and Log in on User level 4.

Click **Service** to open the **Service – Misc.** view.

4.11.1 Service – Misc.

The **Service – Misc.** view:

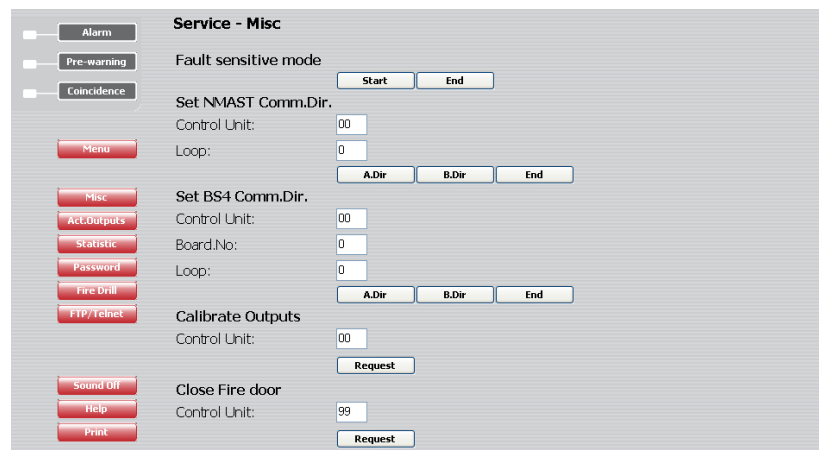

4.11.1.1 Fault sensitive mode

Like menu H5/A2.

Click **Start** to turn on the sensitive fault detection mode.

Click **End** to turn off the sensitive fault detection mode.

4.11.1.2 Set NMAST Comm. Dir. (Set COM loop Comm. Dir.)

Like menu H5/A3.

The communication direction for a specified COM **Loop** (0-3) in a specified **Control Unit** (00-29) can be locked.

Click **A Dir.** to lock the communication in the A-direction.

Click **B Dir.** to lock the communication in the B-direction.

Click **Both** to lock the communication in both directions at the same time.

4.11.1.3 Set BS4 Comm. Dir. (BS4 loop)

Like menu H5/A3.

The communication direction for a specified BS4 **Loop** (0-3) on a specified expansion board 1584, Autronica interface **Board** (0-3), in a specified **Control Unit** (00-29) can be locked.

Click **A Dir.** to lock the communication in the A-direction.

Click **B Dir.** to lock the communication in the B-direction.

Click **Both** to lock the communication in both directions at the same time.

4.11.1.4 Calibrate outputs

Like menu H5/A1.

Click **Request** to start the calibration of supervised outputs in all (99) control units or in a specified control unit (00-29).

4.11.1.5 Close Fire door

Click **Request** to collectively close all fire doors, i.e. programmable outputs with a control expression containing one or more trigger conditions **Fire Door Closing (zone – address)**, in all (99) control units or in a specified control unit (00-29).

4.11.2 Service – Act. Outputs

Click **Act. Outputs** to open the **Service – Act. Outputs** view:

The screenshot shows a web interface for 'Service - Act. Outputs'. On the left is a sidebar menu with buttons for 'Alarm', 'Pre-warning', 'Coincidence', 'Menu', 'Misc', 'Act. Outputs', 'Statistic', 'Password', 'Fire Drill', 'FTP/Telet', 'Sound Off', 'Help', and 'Print'. The main area is titled 'Service - Act. Outputs' and contains four sections, each with 'Set' and 'Reset' buttons:

- Loop unit Output:** Tech.No: 000000, Output: 00
- Voltage Output:** Control Unit: 00, Output: 0
- Relay Output:** Control Unit: 00, Output: 0
- REB Output:** Control Unit: 00, Board.No: 0, Output: 0

NOTE! A latched interlocking output has to be reset via menu H9/C3, i.e. **Reset** will not reset a latched interlocking output.

4.11.2.1 Loop unit Output

A specified **Output** (0-3) on a specified COM loop unit (**Tech. No.**) can be activated.

Click **Set** to activate the output.

Click **Reset** to de-activate the output.

4.11.2.2 Voltage Output

A specified voltage **Output** (S0-S3) in a specified **Control Unit** (00-29) can be activated.

Click **Set** to activate the output.

Click **Reset** to de-activate the output.

4.11.2.3

Relay Output

A specified relay **Output** (R0-R1) in a specified **Control Unit** (00-29) can be activated.

Click **Set** to activate the output.

Click **Reset** to de-activate the output.

4.11.2.4

RE8 Output

A specified relay **Output** (RE0-RE7) on a specified expansion board 1581, 8 relays expansion **Board** (0-5), in a specified **Control Unit** (00-29) can be activated.


Click **Set** to activate the output.

Click **Reset** to de-activate the output.

4.11.3

Service – Statistic

Click **Statistic** to see the **Service – Statistic** view:

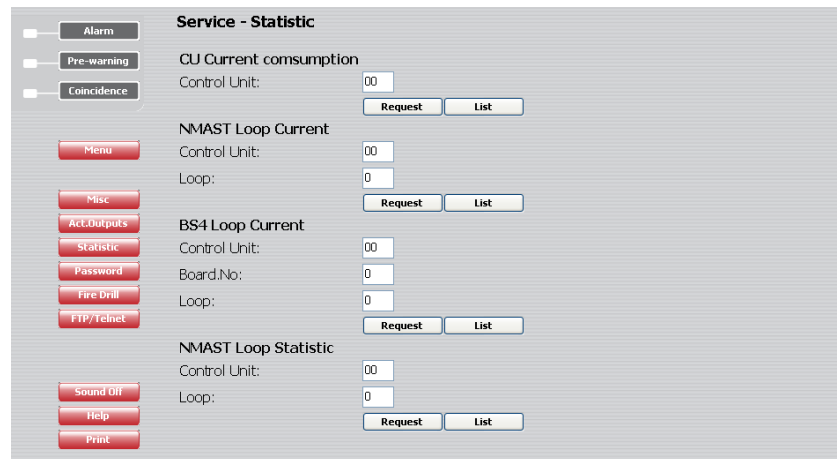

4.11.3.1

CU Current consumption

Like menu H5/A5.

The current consumption for a specified **Control Unit** (00-29) or for all control units in the system can be displayed.

Click **Request** to display the control unit current consumption and the charging current, for a specified control unit (00-29).

CU Current consumption

Item	Value
CU	00
System current	252 mA
Charge current	4 mA

Click **List** to display the current consumption and the charging current, for all control units in the system.

CU Current consumption

Control Unit	System current	Charge current
00	267 mA	4 mA
01	325 mA	0 mA

4.11.3.2

NMAST Loop Current (COM loop current consumption)

Like menu H5/A6.

The current consumption for a specified COM **Loop** (0-3) in a specified **Control Unit** (00-29) or all COM loops in all control units in the system can be displayed.

Click **Request** to display the current consumption for the specified COM loop (0-3) in the specified control unit (00-29).

Loop Current consumption	
Item	Value
CU	00
Loop	0
Current	2 mA

Click **List** to display the current consumption for all COM loops in all control units in the system.

Loop Current consumption				
Control Unit	Loop 0	Loop 1	Loop 2	Loop 3
00	2 mA	8 mA	2 mA	2 mA
01	2 mA	8 mA	8 mA	8 mA

4.11.3.3 BS4 Loop Current

Like menu H5/A6.

The current consumption for a specified BS4 **Loop** (0-3) on a specified expansion board 1584, Autronica interface **Board** (0-3), in a specified **Control Unit** (00-29) or all BS4 loops on all expansion boards 1584, Autronica interface board, in all control units in the system can be displayed.

Click **Request** to display the current consumption for the specified BS4 loop (0-3) on the specified expansion board 1584, Autronica interface board (0-3) in the specified control unit (00-29).

[BS4 Loop Current picture not available at the date of issue.]

Click **List** to display the current consumption for all BS4 loops on all expansion boards 1584, Autronica interface board, in all control units in the system.

[BS4 Loop Current picture not available at date of issue.]

4.11.3.4 NMAST Loop Statistic (COM loop statistics)

Like menu H5/A7.

The statistics for a specified COM **Loop** (0-3) in a specified **Control Unit** (00-29) or all COM loops in all control units in the system can be displayed.

Click **Request** to display the statistics for the specified COM loop (0-3) in the specified control unit (00-29).

Loop statistics	
Item	Value
CU	00
Loop	0
Poll	0129012
Parity	000017
Bit	000006
No reply	000017

Click **List** to display the statistics for all COM loops in all control units in the system.

Loop statistics					
Control Unit	Loop	Poll	Parity	Bit	No reply
00	0	0129132	000017	000006	000017
00	1	0596748	000018	000020	000000
00	2	0596721	000010	000016	000000
00	3	0596706	000034	000013	000000
01	0	0754660	000103	000023	000088
01	1	0112788	000006	000006	000000
01	2	0596799	000013	000018	000000
01	3	0596763	000040	000014	000000

4.11.4 Password (Access code)

The **Service – Change password** view:

Service - Change password

Service Password

New password

Verify password

PC Comm. Password

New password

Verify password

4.11.4.1 Service

Like menu H5/A11.

The access code (password) for **Service**, four digits, can be changed. (EBL512 access level 4.)

Click **Change** to change the access code.

4.11.4.2 PC communication

Like menu H5/A10.

The access code (password) for **PC-communication**, eight digits, can be changed. (EBL512 access level 5.)

Click **Change** to change the access code.

4.11.5 Fire Drill

Click **Fire Drill** to see the **Service – Fire Drill** view:

Service - Fire Drill

Fire Drill disablement

4.11.5.1 Fire Drill disablement

Click **Disable** to disable the outputs.

The following types of outputs will be disabled:

- ATR (alarm transmitter) Routing equipment - Fire brigade tx
- FTR (fault transmitter) Routing equipment - Fault tx
- Interlocking
- Extinguishing
- Ventilation
- Control

4.11.5.2

Activate Alarm

When the outputs are disabled, a zone or an alarm point (zone – address) can be set in alarm.



Type the **Zone – Address** and click **Set** to start the fire drill.

NOTE! The outputs type "Alarm device" will be activated, since they are not disabled during the fire drill.

The fire alarm has to be reset, see chapter "Alarm", page 13.

Click **Reset** to reset the fire alarm.

When no more fire drills shall be performed, click **ReEnable** to re-enable the outputs.

NOTE!


The disabled outputs can be listed, see chapter "Disablement", Device type, page 17.

Click **ReEnable** to re-enable the outputs of the type respectively.

4.11.6

FTP / Telnet

Click **FTP / Telnet** to see the **Service – FTP / Telnet** view:

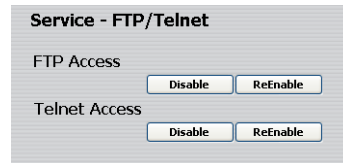

4.11.6.1

FTP Access

When a new site (incl. the Web-server II software) shall be downloaded to the Web-server II, an FTP Access User name and Password are always required.

To increase the safety, the FTP Access can be disabled as well. This means that even if correct FTP User name and Password are used there will be no FTP Access.

FTP Access has to be re-enabled before it is possible to use the FTP Access User name and Password at all.

Click **Disable** to disable the FTP Access possibility.

Click **ReEnable** to re-enable the FTP Access possibility.

4.11.6.2

Telnet Access

A Telnet Access User name and Password are always required.

To increase the safety, the Telnet Access can be disabled as well. This means that even if correct Telnet User name and Password are used there will be no Telnet Access.

Telnet Access has to be re-enabled before it is possible to use the Telnet Access User name and Password at all.


Click **Disable** to disable the Telnet Access possibility.

Click **ReEnable** to re-enable the Telnet Access possibility.

4.12 Logout

Click **Logout** to log out from the site.

A message will be displayed to confirm the logout.

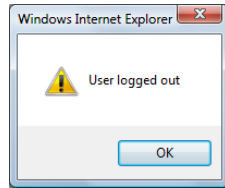

Click **OK** to close the message.

Regarding log in, see chapter "Login", page 10.

4.13 E-mails

E-mails can be sent in case of one or more of the specified event types listed below. An e-mail will be sent for each alarm, fault, etc. and there can be four e-mail receivers for each event type.

Access to an e-mail server (SMTP) is required to distribute the e-mails.

- Fire alarm
- Fault
- Disablement
- Service
- Pre-warning
- Test mode
- Web log
- None selected (default)

See chapter "General e-mail", page 46.

4.14 Gateway function


The Web-server II, 1598 can also work as a gateway, see chapter "Gateway", page 51.

5 Web512 II Config Tool V2.6.x

The Web-server II has to be configured via the PC tool, **Web512 II Config Tool V2.6.x**⁴. The configuration data, the site and the Web-server II software will, via TCP/IP⁵, be downloaded to the Web-server II (all at the same time).

All the Web512 II Config Tool tabs are listed below, including a short description.

5.1 Sites

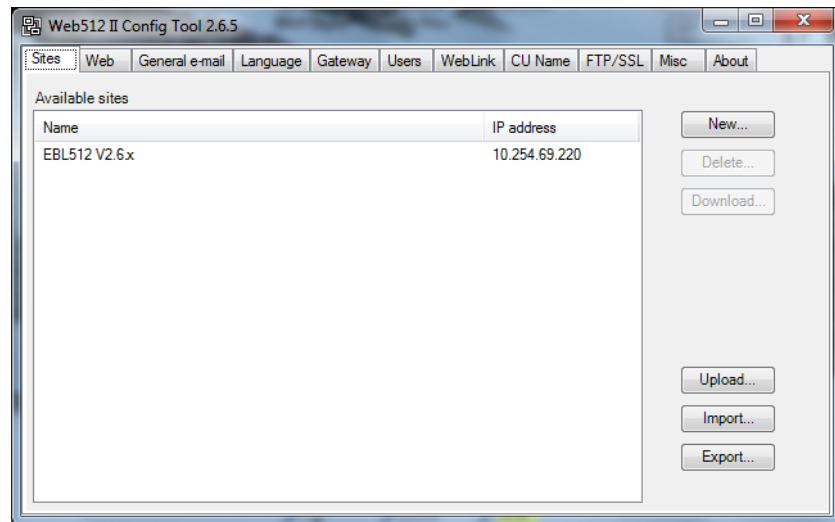

A site can be created (**New...**), deleted (**Delete...**), imported (**Import...**) and/or exported (**Export...**).

Available sites

A list showing already created sites. The sites created with *Web512 II Config Tool 2.6.5* will be saved in the folder:


<C:\Program Files\PEW Fire And Security Technology Europe AB\System 512\Web512 II Config Tool 2.6.5\Sites\>

A site (name) selected in the **Available sites** list can be downloaded to the Web-server II (**Download...**). See chapter "Site download to Web-server II", page 60.

A site can be uploaded from a Web-server II (**Upload...**).

⁴ During the installation of this PC tool, a message may be shown that **.NET Framework** has to be installed on your PC. More information and a free download are available on the Microsoft web site.


⁵ The Web-server II and the PC both have to be connected to the Local Area Network (LAN). As an alternative a "Crossed network cable" or a Hub can be used.

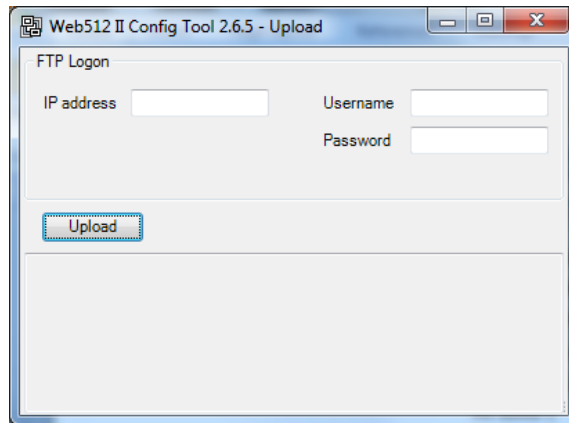

The Web-server II IP address is required and the FTP user name and password are required.

When the upload is complete, the site will be in the **Available sites** list with the name **backup**. The name can be edited.

5.2 Web

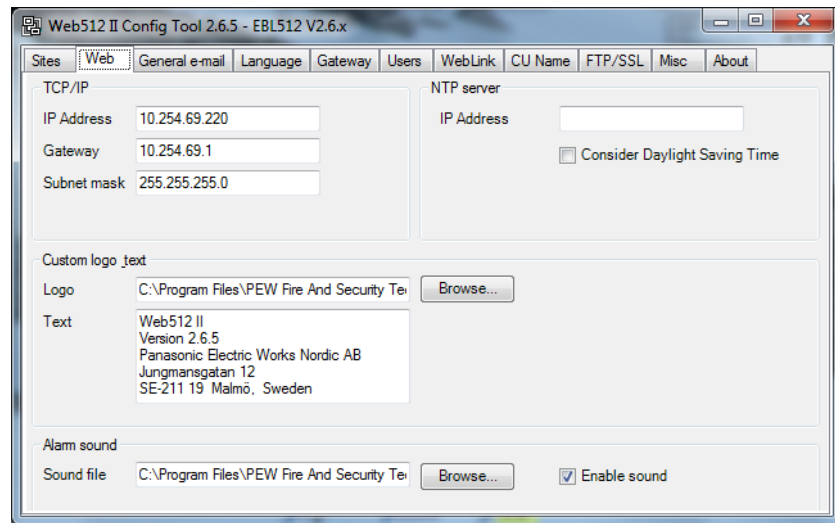

5.2.1 TCP/IP (Ethernet IP)

The following data is required:

- The web-server's IP address⁶
- Gateway IP address⁶
- Subnet mask⁶

5.2.2 NTP Server

Normally, at midnight every day, the Control Unit no. 00 in an EBL512 system will send out the date & time to synchronize the clock in all control units in the system as well as the clock in Web-server II.

For continuous correct time and synchronization of all the clocks an NTP⁷ server can be used. In this case, synchronization will be done one hour after midnight every day.

Address: The NTP server's IP address.

Consider Daylight saving time: Automatic changeover to **Daylight saving time** ("summer time") and return to normal time can be selected.

5.2.3 Custom logo & text

On all sites, in the corner down to the right, it is possible to have an image, e.g. a logotype and in the corner up to the right a custom text. (See page 9.)

5.2.3.1 Logo

If no file is selected, the Panasonic logo (see page 9) will be automatically displayed but any image that can be used in Microsoft

⁶ Provided via the Local Area Network (LAN) administrator.

⁷ NTP is a protocol designed to synchronize the clocks of computers over a network.

Internet Explorer can be used, e.g. *.bmp, *.gif, *.jpg and *.wmf (≤ 10 Kbytes and max. 210 x 56 pixels). Max. 8 characters in the file name.

5.2.4

Text

On all Web server pages in the upper corner to the right, it is possible to have an information text (≤ 500 characters) describing the actual system. It is recommended to write the following:

- Installation/System Name (e.g. the "Logical Name" in Win512)
- Installation/System Location
- Maintenance personnel Name
- Maintenance personnel Telephone Number

5.2.5

Alarm sound

When a fire alarm is activated you can use the buzzer/speaker in the PC for a sound alert.

One **Sound file** (FIRE.wav) is supplied and it is saved in the folder:
C:\Program Files\PEW Fire And Security Technology Europe AB\System 512\Web512 II Config Tool 2.6.5\Files\Sound\.

You can use any *.mid or *.wav file ≤ 5 Kbytes. The file name can have max. 8 characters.


The sound file can be **Enabled** or disabled.

When a sound file is **Enabled** a **Sound Off** button is visible on the Web-server II page (see page 10), else not.

Click **Sound Off** to silence the alarm sound.



5.3 General e-mail

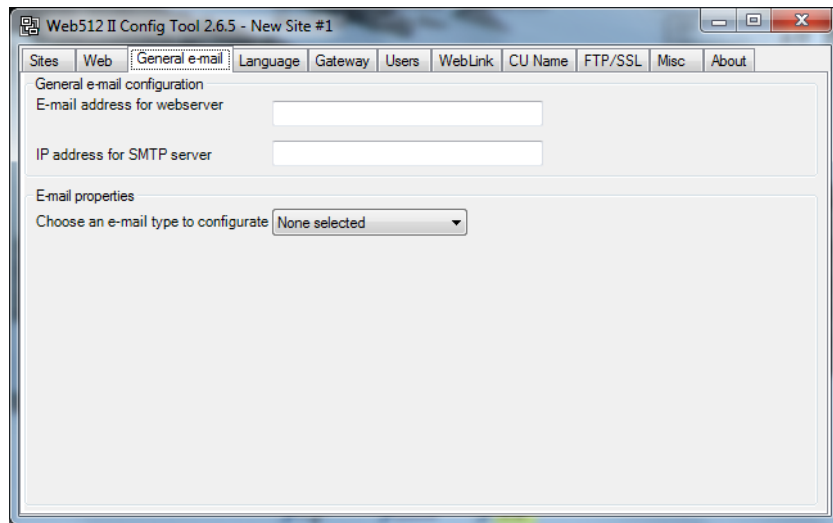

5.3.1 General e-mail configuration

E-mail address for web-server: An e-mail address (name) is required for sending e-mails (e.g. Web512@pewfste.com).

IP address for SMTP server: An SMTP server IP address is required.

5.3.2 E-mail properties


Different types are available. Every type that shall be used has to be separately configured.

If at least one receiver name is typed for the e-mail type respectively, an e-mail will be sent, else not.

Choose an e-mail type to configurate:

- Fire alarm (incl. Alert Annunciation alarms)
- Fault
- Disablement
- Service
- Pre-warning
- Test mode
- Web log
- None selected (default)

For the type respectively, **Receiver(s)**, **Subject** and **Body** data shall be typed.

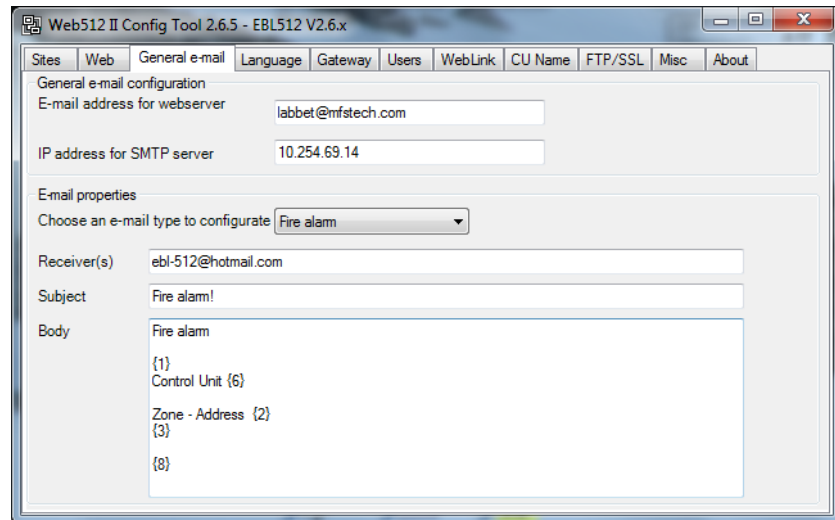

(Type **Fire alarm** selected.)

Receiver(s): Up to four e-mail receivers can be written, separated by a comma (,) or a semicolon (;).

Subject: An e-mail "Subject" text shall be written, e.g. "Fire alarm". The "Subject" text will be shown in the receivers e-mail Inbox list view, together with the name of the e-mail sender, date and size.

Body: An e-mail "Body" text shall be written. Up to 500 characters can be used, including some parameters (see below). In the receiver's e-mail, the parameters will be replaced with the information they represent.

NOTE! In the **Test mode** e-mail form the "Body" text will automatically be the list created during the tests, i.e. the "Body" field is not shown in the e-mail form. In the **Web log** e-mail form the "Body" text will automatically be created when there are 100 events in the log and the e-mail will be sent.

5.3.2.1.1

Fire alarm

Fire alarm (incl. Alert Annunciation alarms) e-mail.

Receiver(s), Subject and Body text shall be typed.

The following parameters can be used in the "Body" text:

- {1}** The custom text string that contains data about the system, according to chapter "Text", page 45.
- {2}** The alarm point's presentation number, i.e. **ZONE-ADDRESS** (e.g. **001-01**).
- {3}** The user definable text message (alarm text), shown in the fire alarm system, for the alarm point respectively.
- {6}** The actual EBL512 c.i.e. number, i.e. the c.i.e. to which the alarm point is connected (00-29).
- {8}** Date & time, i.e. MM-DD hh:mm:ss (month-day hour : minute : second), e.g. 11-24 12:34:56

5.3.2.1.2

Fault

Fault e-mail.

Receiver(s), Subject and Body data shall be typed.

The following parameters can be used in the "Body" text:

- {1} The custom text string that contains data about the system, according to chapter "Text", page 45.
- {4} The fault message shown in the fire alarm system.
- {6} The actual EBL512 c.i.e. number, i.e. the c.i.e. in which the fault is generated (00-29).
- {8} Date & time, i.e. MM-DD hh:mm:ss (month-day hour : minute : second), e.g. 11-24 12:34:56

NOTE! In the fault form there is the option: **Send e-mail when no connection to EBL512.** When this option is selected (default) and in case of no connection between the Web-server II and the EBL512 c.i.e. an e-mail will be sent to the same e-mail address(es) as for a fault e-mail and with the same body text. In this case the parameter {4} will be replaced with:

`FAULT: No connection between web-server and EBL512.`

5.3.2.1.3

Disablement

Disablement e-mail.

Receiver(s), Subject and Body data shall be typed.

The following parameters can be used in the "Body" text:

- {1} The custom text string that contains data about the system, according to chapter "Text", page 45.
- {5} The disablement text shown in the fire alarm system (i.e. the disabled alarm point, zone, loop, output, interlocking output, routing equipment, alarm device or control output).
- {6} The actual EBL512 c.i.e. number, i.e. the c.i.e. in which the disabled unit etc. is connected to (00-29).
- {8} Date & time, i.e. MM-DD hh:mm:ss (month-day hour : minute : second), e.g. 11-24 12:34:56

5.3.2.1.4

Service

Service signal e-mail.

Receiver(s), Subject and Body text shall be typed.

The following parameters can be used in the "Body" text:

- {1} The custom text string that contains data about the system, according to chapter "Text", page 45.
- {6} The actual EBL512 c.i.e. number, i.e. the c.i.e. in which the service signal is generated, i.e. where the dirty detector is connected (00-29).

- {7} The technical number for the dirty detector (000001-293127) (BS4 unit: 004001-297399).
- {8} Date & time, i.e. MM-DD hh:mm:ss (month-day hour : minute : second), e.g. 11-24 12:34:56

5.3.2.1.5

Prewarning

Pre-warning e-mail.

Receiver(s), **Subject** and **Body** text shall be typed.

The following parameters can be used in the "Body" text:

- {1} The custom text string that contains data about the system, according to chapter "Text", page 45.
- {2} The alarm point's presentation number, i.e. **ZONE-ADDRESS** (e.g. **001-01**).
- {3} The user definable text message (alarm text), shown in the fire alarm system, for the alarm point.
- {6} The actual EBL512 c.i.e. number, i.e. the c.i.e. to which the alarm point is connected (00-29).
- {8} Date & time, i.e. MM-DD hh:mm:ss (month-day hour : minute : second), e.g. 11-24 12:34:56

5.3.2.1.6

Test mode

Test mode alarm e-mail.

Receiver(s) and **Subject** shall be typed.

The "Body" text will be automatically created / listed during the test. An e-mail will be sent when you click the **Send mail** button. See chapter "Zones in Test", page 16.

5.3.2.1.7


Web log

Web log e-mail.

Receiver(s) and **Subject** shall be typed.

The "Body" text will be automatically created and an e-mail will be sent when there are 100 events in the web log. When the email is sent the web log will be automatically erased. **(Also if this email facility is not used, the 100 events will be erased – without any warning.)**

5.4 Language

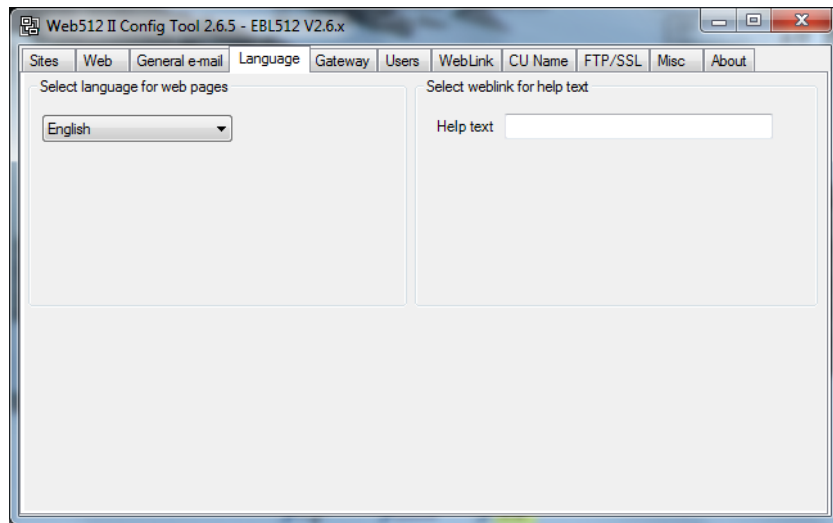

5.4.1 Select language for web pages


The language to be used on the site (web pages) shall be set.

Custom: The **Web512 II Config Tool 2.6.x** offers the user to make a translation to any language. The document **How to create a custom translation of Web512 II 2.6** is available on request.

5.4.2 Select web link for Help text

Help text: Type the web link (URL) for help text to be opened when you click the **Help** button on the Web-server II page, see page 10.

5.5 Gateway

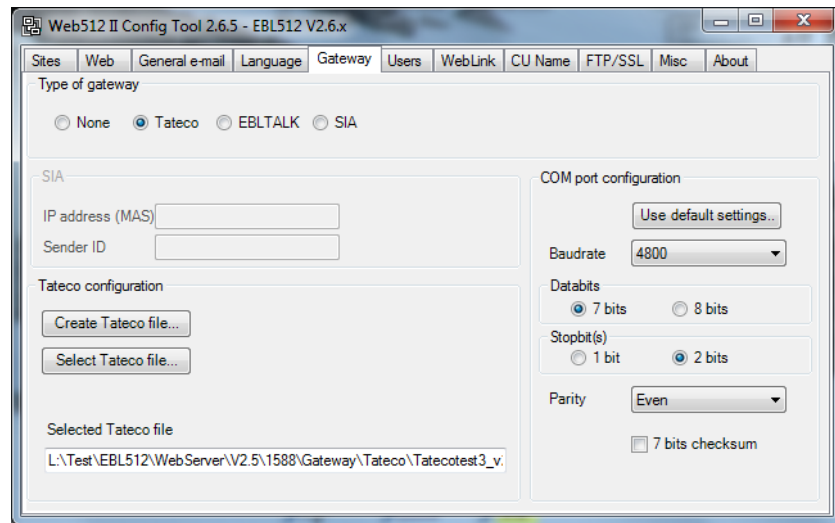

(**Tateco** selected.)

The Web-server II is not only a web-server but also a gateway.

5.5.1 Type of gateway

One of the following gateway types can be selected:

- **None** The Web-server II has no gateway function.
- **Tateco**. The Web-server II is also a gateway to an Ascom Tateco paging system, i.e. it will transmit and present fire alarm information in that system (like the former "Tateco" Data converter 2291).
- **EBL Talk**. The Web-server II is also a gateway to a separate PC system, i.e. it will transmit and present fire alarm information in that system (like the former "EBL Talk" Data Converter 2292). For more information see "EBL Talk Protocol" Technical Description (MEW00532).
- **SIA**. The web-server is also a gateway to a separate PC system using the SIA protocol.

5.5.2 SIA

An **IP address (MAS)** and a **Sender ID** are required. (Provided via the Local Area Network (LAN) administrator and/or SIA administrator.

5.5.3 Tateco configuration

When the Tateco configuration is selected, a new Tateco File has to be created or an existing Tateco File has to be selected.

See the **Web512 II Config Tool help** for more information.

5.5.4 COM port configuration

When **Tateco**, **EBL Talk** or **SIA** is selected (as Type of Gateway) the following configuration data have to be set (**bold**=default):

5.5.4.1 Baude rate


300, 600 - - **4800** - - 38400 in the drop-down list.

5.5.4.2 Databit(s)
7 bits or 8 bits.

5.5.4.3 Stopbit(s)
1 bit or 2 bits.

5.5.4.4 Parity
None, Odd or **Even** in the drop-down list.
7 bits checksum can be selected.

5.6 Users

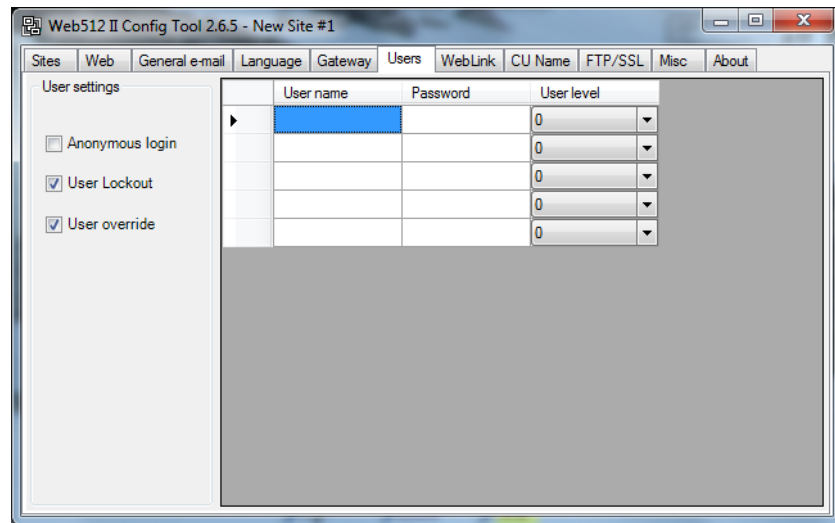

Even if the Web-server II is to be used for status information only (User level 1), it is recommended to have a **User name** and **Password** (i.e. "Anonymous login" is not allowed, see below).

For remote control and access to corresponding information, a **User name** and a **Password** are always required for **User level 2** (Daily), **User level 3** (Maintenance) and **User level 4** (Service).

5.6.1 User settings

User name and a **Password** for **User level 0** (Select this level to temporarily ignore this user, i.e. a user with this user level cannot log in to the web page.)

User name and a **Password** for **User level 1** (Status information only.)

User name and a **Password** for **User level 2** (Daily)

User name and a **Password** for **User level 3** (Maintenance)

User name and a **Password** for **User level 4** (Service)

The following **password** policy has to be followed:

Minimum length: 6 characters

At least one upper case letter

At least one lower case letter

At least one digit

The following characters can be used: **A-Z a-z 0-9**


Depending on if **Anonymous login** is allowed or not, **User name** and **Password** are not required or required to see the status information (User level 1).

When **User lockout** is selected, any user will be locked out for one hour, after entering a wrong password three times.

When **User override** is selected, a user with a higher user level than an already logged in user, can login and automatically log out the user with the lower user level.

5.7

Web Link

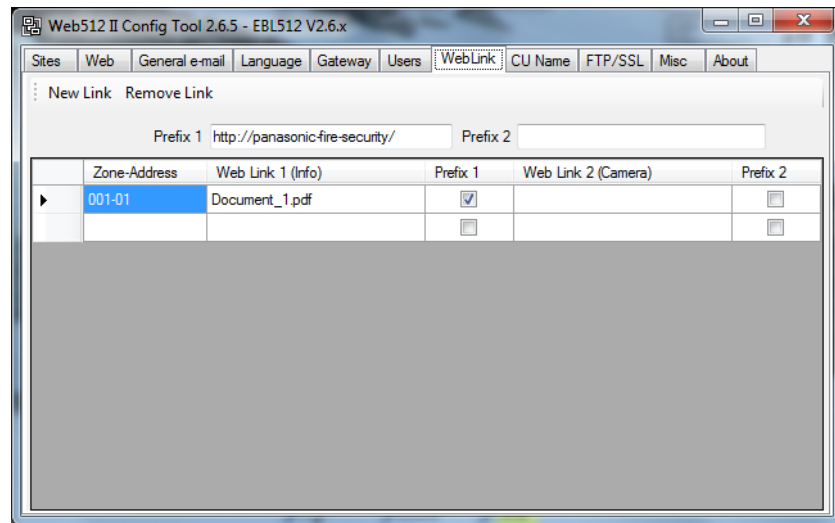

If e.g. a fire alarm is presented (see page 13), it is possible to click a hyperlink **Info** or **Camera** to get more information about the alarm point and/or to connect to a web camera. The alarm points and links are added / deleted in the **Web Link** tab.

Click **New Link** to add a row to the list.

Click **Remove Link** to remove a selected row from the list.

If many alarm points shall have the same link or if only the file name in a path is different for the different alarm point, the Prefix 1 can be used for Web Link 1 and Prefix 2 for Web Link 2.

Prefix 1: Type the prefix text in the cell.

Prefix 2: Type the prefix text in the cell.

Zone Address: Type the Zone Address for the alarm point (in the cell).

Web Link 1 (Info): Type a link (a path) to a document (e.g. a drawing) for more information regarding the alarm point.

NOTE! If for example the **Prefix 1** checkbox is **marked**, the Prefix 1 text will be automatically added before the Web Link 1 text when the site is downloaded to the Web-server II but the Prefix 1 text will never be displayed in the Web Link 1 cell.

Web Link 2 (Camera): Type a link (a path) to a web-camera (or a second document).

Example:

Prefix 1: <http://panasonic-fire-security/>


Web Link 1: Document_1.pdf **Prefix 1**

Will be **downloaded to the Web-server II** as follows:

http://panasonic-fire-security/Document_1.pdf

5.8

CU Name

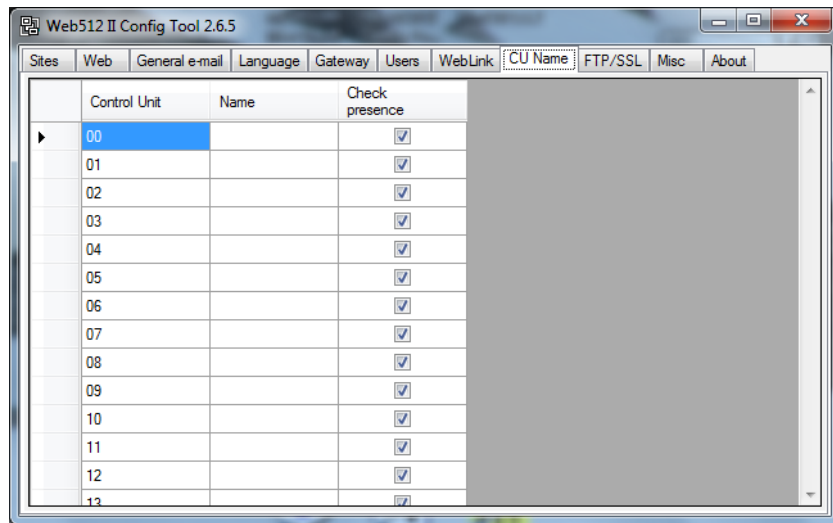

Instead of presenting each **Control Unit** as "Control Unit 00" etc. in the web page columns, the control units can have an informative **Name**, e.g. "Control Unit **Building X**".


Control Unit: 00 - 29

Name: Type the name for the control unit **respectively**. Max. 40 characters.

Check presence: The Web-server will download System information for all selected control units in the system. As default all control units (00-29) are selected. To speed up the download process, select only the existing control units. (Then if more control units are added **later**, the site has to be edited and downloaded to the Web-server.)

5.9

FTP/SSL

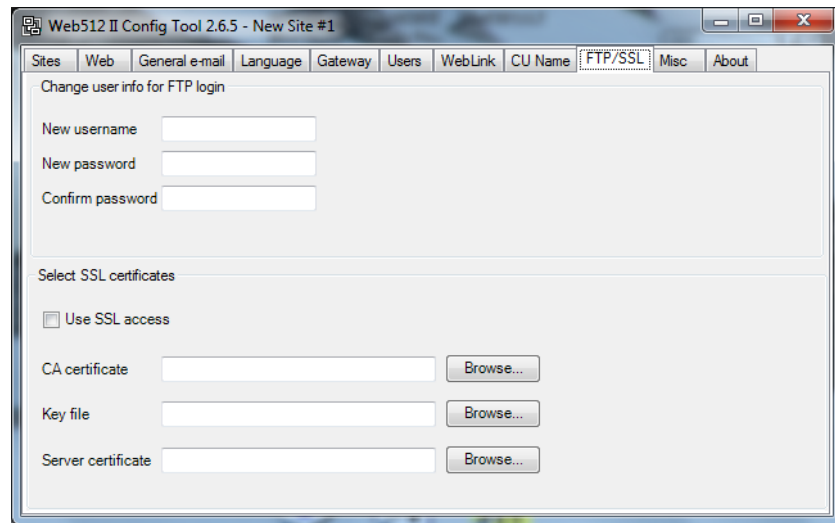

5.9.1

Change user info for FTP login

When the Web-server II shall be configured (programmed) via the PC program Web512 II Config tool, this is done via a Local Area Network LAN (or a crossed network cable or a hub). For safety reasons User name and Password are used. Both are **ftp** as default and could be changed via Web512 II Config tool.

New user name: Type the new name.

New password: Type the new password. (Only dots will be displayed.)

Confirm password: Type the new password. (Only dots will be displayed.)

NOTE! The new User name and Password are not valid until after download to the Web-server II and restart of the Web-server II.

5.9.2

Select SSL Certificates

When the Web-server II shall be used also for control of the EBL512 system, it is **highly recommended** to use the safe (encrypted) communication.

Use SSL access: Select this option to create a safe (encrypted) communication with the EBL512 system. If so, three files have to be downloaded (see below). These files have to be ordered from Panasonic Electric Works **Nordic** AB. Article no. 1599. Product name: SSL Certificate for Web-server.


CA certificate: Type the path and file name (e.g. intermed.pem) or use the **Browse** button.

Key file: Type the path and file name (e.g. privkey.pem) or use the **Browse** button.

Server certificate: Type the path and file name (e.g. cert.pem) or use the **Browse** button.

5.10

Misc

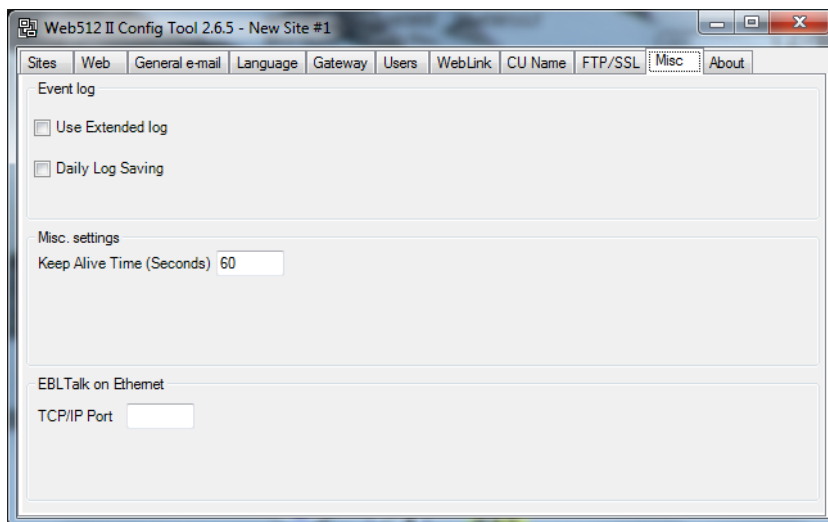

5.10.1

Event Log

The events are always presented in four different types of event logs, see below.

Use Extended Log:

This option is not selected as default.

1. **General;** All events except Alarm, Interlocking and Web events, see below. Max. 999 events. See also page 25.
2. **Alarm;** Fire alarms, Pre-warnings, Co-incident alarms and Alert Annunciation alarms. Max. 999 events. See also page 25.
3. **Interlocking;** Interlocking events. Max. 999 events. See also page 26.
4. **Web Event;** Web events. Max. 100 events. See also page 26.

When this option is selected the **General** log is extended to max. 10000 events.

1. **General;** All events, including Alarm, Interlocking and Web events. Max. 10000 events. See also page 25.
2. **Alarm;** Pre-warnings, Fire, heavy smoke/heat, Co-incident' Alert Annunciation, Delayed, Isolated, Acknowledged and Quiet alarms. Max. 999 events. See also page 25.
3. **Interlocking;** Interlocking events. Max. 999 events. See also page 26.
4. **Web Event;** Web events. Max. 100 events. See also page 26.

Daily Log Saving:

When this option is selected the logs ([see above](#)) will be saved **in a flash memory** in the Web-server at midnight every day.

NOTE! Normally all the events (see above) are saved in the Web-server. In case of a powerless Web-server all the events will be lost except the events saved in the Web-server's flash memory at midnight every day.

5.10.2 **Misc. settings**

Keep Alive Time (Seconds):

Default 60 s. After closing the site, there will be an automatic logout after the specified number of seconds. This is important if there are more users since only one at a time can be logged on.

5.10.3 **EBL Talk on Ethernet**


TCPIP / Port:

The connected equipment's port number has to be specified here.

NOTE! In order to use EBL Talk on Ethernet, **EBL Talk** has to be selected in the tab "Gateway", see page 51.

5.11

About

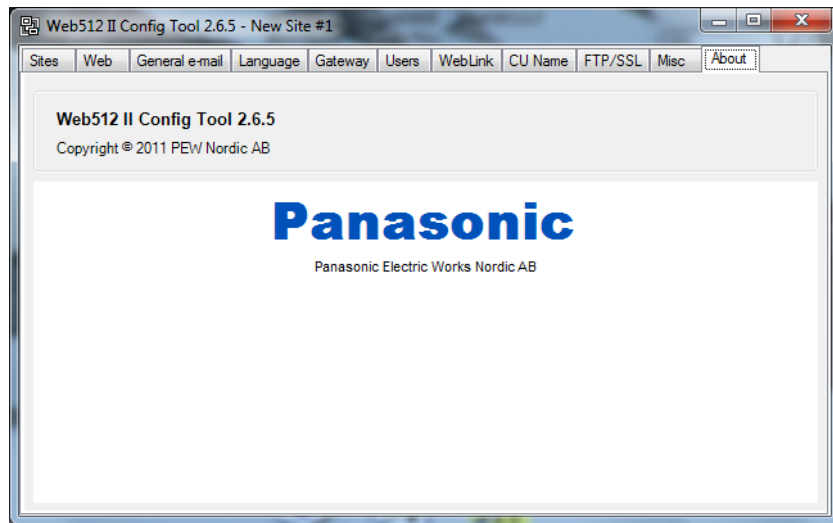

Here, as well as in the Title bar, you can see the Web512 II Config Tool version, i.e. **2.6.5**.


The Web512 II Config Tool has to have the same version as the EBL512 software version (i.e. the two first digits; **2.6.x**).

6 Site download to Web-server II

To download a site to the Web-server II, the PC (Web512 II Config Tool V2.6.x) and the Web-server II both have to be connected to a Local Area Network (LAN)⁸. In the **Web512 II Config Tool V2.6.x**, select the site to be downloaded, see page 42.

If gateway type "Tateco " is to be used, also a Tateco configuration file has to be selected, see page 51.

In the tab **Sites** click **Download** and this dialog box opens:

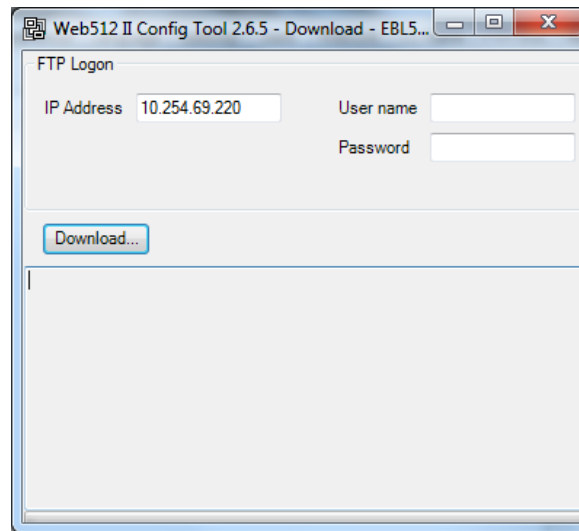

A **User name** and a **Password** for FTP login are required before the download can start.

Click **Download**. During the download information will be shown in the field below.

When the download is ready the Web-server II has to be restarted, i.e. turn off the power supply and then turn on the power supply again.

After restart (and in case of inconsistency between the Web-server II and the EBL512 system), the Web-server II database should be updated, i.e. a synchronization has to be done via EBL512 (menu H8/S10) or via the Web-server II, see page 34.

After restart the Web-server II clock should be set, see chapter "Set Calendar and Time", page 30.⁹ See also chapter "NTP Server", page 44.

⁸ As an alternative the PC can be connected directly to the Web-server II via a crossed network cable or a hub.

⁹ The clock is also set automatically once a day at midnight. Also menu H3 in EBL512 can be used and the command will then be sent when you leave menu H3 by pressing "Accept", see EBL512 Operating Instruction.

7 S/W download to Web-server II


New Web-server II software (S/W) cannot be downloaded separately.

The Web-server II software (S/W) will be automatically downloaded when the site is downloaded to the Web-server II via the **Web512 II Config Tool V2.6.x**, see page 60.

An old site (i.e. the file: xxxxxx.website) can be imported in a new **Web512 II Config Tool** version, saved and then downloaded.

The **Web server S/W** version¹⁰ has to correspond with the EBL512 software version, i.e. the **Web512 II Config Tool** version has to correspond with the EBL512 software version.

The **Web512 II Config Tool** version (i.e. the **Web512 S/W** version) is shown after the title in the title bar and in the **About** tab.

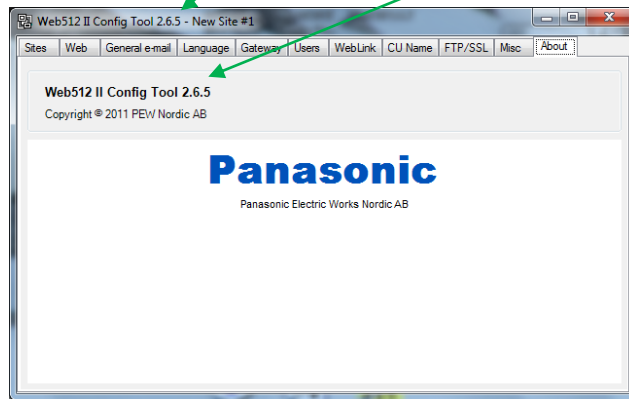

The **Site** version will be the same as the **Web512 II Config Tool** version and will be shown at the top of each web page.

A new **Web512 II Config Tool** version will always be delivered together with a new EBL512 software version.¹⁰

¹⁰ This is valid for the two first digits, e.g. **2.6.x**.

8 Installation / Commissioning

Web-server II, 1598 is used in the EBL512 system. It is intended for indoor use and in dry premises.

Web-server II shall be vertically mounted on a symmetric 35 mm DIN rail¹¹ outside and close (≤ 3 m) to an EBL512 c.i.e.

An RS232 cable, 3 m, with a 9 ways female "D" connector, is supplied to connect the Web-server II to an EBL512 c.i.e.

A cable, 3 m, with a plug-in connector (Molex 3.5), is supplied to connect the Web-server II to a power supply (i.e. to the EBL512 c.i.e. or external equipment).

The Web-server II has an RJ45 connector for a standard Ethernet CAT.5 cable, to be used to connect the Web-server II to Internet / an intranet (LAN). (The cable is not supplied.)

The web-server has a 9 ways male "D" connector (RS232C), to be used to connect the Web-server II to a separate PC system, etc. e.g. when a gateway function is used. (The cable is not supplied.)

See also chapters "Site download to Web-server II", page 60 and "S/W download to Web-server II", page 61 as well as chapter "Connections", page 64.

See also Web-server II 1598 Technical Description (MEW01035).

8.1 LED indicators

There are three LED:s on the Web-server II:

- **POWER:** Indicating that the power supply is connected and is working.
- **COM:** Indicating:
 - Ethernet connection (continuously)
 - Ethernet data exchange (blinking)
- **COM:** Not used.

8.2 Starting up the web-server

Some recommended actions when starting up the Web-server II:

1. The PC (Web512 II Config Tool) and the Web-server II have to be connected to the LAN.¹²
2. The Web-server II has to be connected to 24 V DC.

¹¹ The DIN rail is not supplied with Web-server II.

¹² As an alternative the PC can be directly connected to the Web-server II via a crossed network cable or a hub.

- 3.** In the PC program **Web512 II Config Tool V2.6.x** you have to prepare the S/W and site download as follows:
 - a.** In the "Site" tab page select a "site" (name) or click "New" to create a new site.
 - b.** In the "Web" tab page the web-server's future IP address¹³ has to be typed. Check this with your LAN administrator.
 - c.** Gateway IP address. Check this with your LAN administrator.
 - d.** Subnet mask. Check this with your LAN administrator.
 - e.** Type the "Custom logo & text" when required.
 - f.** Type the "User name" and "Password" for the "User level" respectively.
 - g.** Go back to the "Site" dialog box, select a site (IP address shall be visible) and click "Download".
 - h.** In the "Download" dialog box type the IP address. For FTP logon are a "User name" and a "Password" required. Default is "ftp" and "ftp" respectively. Click "Download".
- 4.** Download complete, restart (i.e. power down / up **the Web-server**).
- 5.** Set the date and time.
- 6.** The web-server should now be working okay. If not, **perform** a synchronization.

¹³ The web-server IP address can be checked / changed. A PC program ("CHIP Tool") is available on internet, free of charge.

9 **Connections**

For EBL512 see drawing 512-73.

See also Web-server II 1598 Technical Description (MEW01035).

10 Revision history

Revisions are when possible typed in red font colour.

Revision 1

Most of the pictures are updated.

4.1	Info added.
4.2.3	Info added.
4.4	Info added & revised.
4.4.2	Info added.
4.9.7	This paragraph is added.
5	Info deleted.
5.1	Info revised.
5.3.2.1.7	Info added.
5.4.2	Info deleted.
5.7	Info revised.
5.8	Info revised.
5.10.1	Info added.
6	Info deleted.
8.2	Info added (in pos. 4).
9	Info deleted.

This page has deliberately been left blank.

Panasonic ideas for life

Panasonic Electric Works Nordic AB
Jungmansgatan 12, SE-211 19 Malmö, Sweden
Tel: +46 (0)40 697 70 00 • Fax: +46 (0)40 697 70 99
info-fste@eu.pewg.panasonic.com • www.panasonic-fire-security.com

