



# Installation Instructions – Base 2324 and Detector 4352

## Mounting and Installation of base 2324 with detector 4352


**1** Remove Uniguard cover.

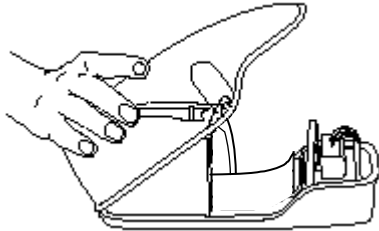


**2** Remove Uniguard block.

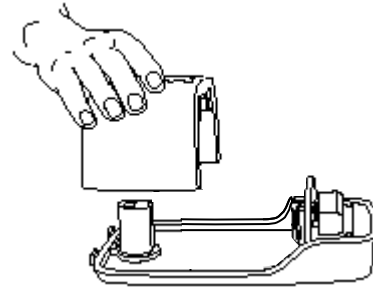

**3** Pull Uniguard ribbon cable through the base.

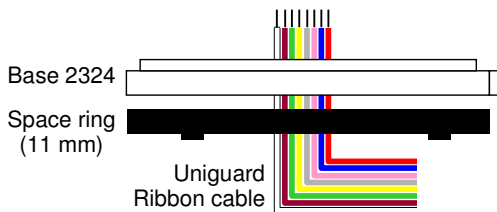

**4** Fix the base with 2 screws (4.2x25) to the Uniguard (bosses “U – U”). LED direction according to picture.

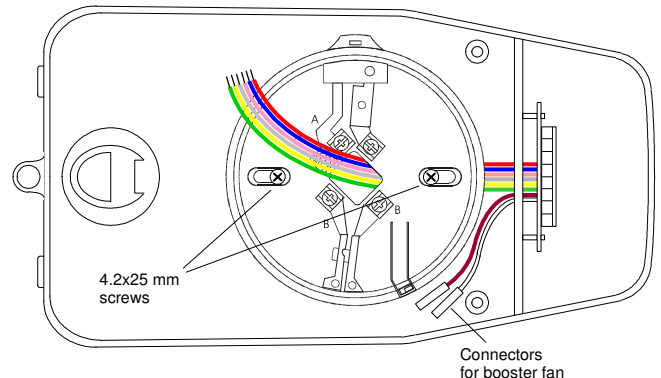

**5** Connect Uniguard wires to the base

Uniguard Connector/Cable	2324 Connectors
Red .....	B
Blue .....	A
Pink .....	B
Grey .....	A
Yellow .....	A
Green .....	L

**6** Mount detector 4352 in the base

**7** See “Installation Instructions – UNIGUARD” for installation of the complete unit.

### Wiring diagram

