



Installation Instructions – Base 3312 and Detector 4301

Mounting and Installation of base 3312 with detector 4301


1 Remove Uniguard cover.

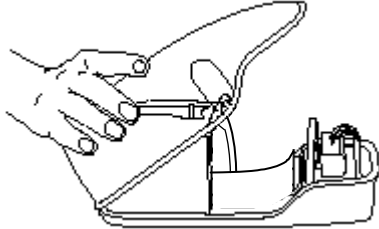


2 Remove Uniguard block.

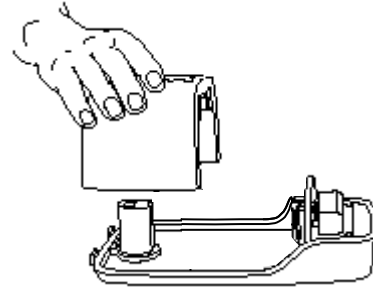

3 Pull Uniguard ribbon cable through the space ring and base.

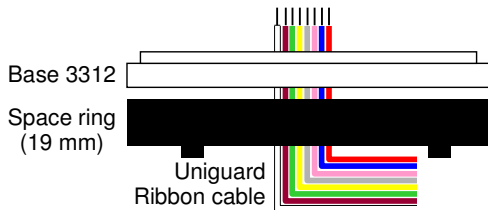

4 Fix the base with 2 screws (4.2x32) to the Uniguard (bosses “U – U”). LED direction according to picture.

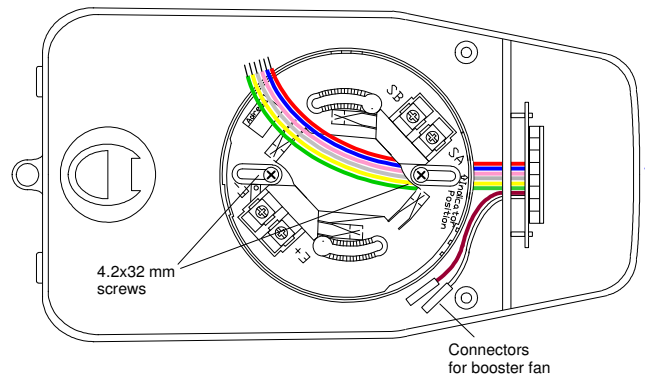

5 Connect Uniguard wires to the base

Uniguard Connector/Cable	3312 Connectors
Red	SA
Blue	SB
Pink	SA
Grey	SB
Yellow	E+
Green	E-

6 Mount detector 4301 in the base

7 See “Installation Instructions – UNIGUARD” for installation of the complete unit.

Wiring diagram

