

**EBLOne
V. 3.8.X**

**PLANNING
INSTRUCTIONS**

Fire alarm solutions

Table of Contents

1.	INTRODUCTION	9
2.	ABBREVIATIONS	11
3.	GENERAL DESCRIPTION	13
4.	EBLONE	15
5.	COM LOOP UNITS	17
5.1.	SUB-LOOP	19
5.2.	SHORT CIRCUIT ISOLATORS	19
5.2.1.	SEQUENCE NUMBER	20
5.2.2.	SHORT CIRCUIT / CUT-OFF ON THE COM LOOP	22
5.2.3.	BUILT-IN ISOLATORS	23
5.3.	SERIAL NUMBER	24
5.3.1.	COM LOOP UNITS WITH SERIAL NUMBER	25
5.4.	SUPPORTED FUNCTIONS TABLE	26
5.5.	UNITS FOR HAZARDOUS (EX) AREAS	27
5.6.	LOOP UNIT LOCATION	27
6.	ACCESSORIES	28
6.1.	LABEL HOLDER 3390	28
6.2.	LABELS 3391	28
7.	ALGORITHMS FOR ANALOG DETECTORS	29
7.1.	ADVANCED MODE ALGORITHMS	29
7.2.	NORMAL MODE ALGORITHMS – SMOKE DETECTORS	29
7.2.1.	SENSOR VALUE	29
7.2.2.	DECISION VALUE	29
7.2.3.	WEEK AVERAGE SENSOR VALUE	30
7.2.4.	ALARM ALGORITHMS – NORMAL MODE	31
7.3.	NORMAL MODE ALGORITHMS – HEAT DETECTORS	37
7.3.1.	CATEGORY A1 ALGORITHM	38
7.3.2.	CATEGORY A2 S ALGORITHM	38
7.3.3.	CATEGORY B S ALGORITHM	38
8.	GATEWAY – RS232 INTERFACE	39
9.	PROGRAMMABLE INPUTS	40
9.1.	CONTROL UNIT INPUT I1 - I2	41
9.1.1.	USED AS GENERAL INPUT	41
9.1.2.	USED AS BALANCED INTERFACE FOR ROUTING EQUIPMENT	41
9.2.	THE 4461 UNIT'S INPUTS Z / IN0, IN1 & IN2	42
9.3.	THE 4462 UNIT'S INPUTS Z / IN0 & IN2	42
9.4.	THE 4464 UNIT'S INPUT IN0	42
9.5.	INPUT PROGRAMMING	43
9.5.1.	TRIGGER CONDITIONS	43

9.5.2.	COMMENTS TO THE TRIGGER CONDITIONS (ABOVE):	44
9.6.	LOGIC	46
9.7.	TECHNICAL WARNING	46
10.	PROGRAMMABLE OUTPUTS	47
10.1.	CONTROL UNIT OUTPUT S1	48
10.2.	RE0 & RE1 OF THE 4461 UNIT	49
10.3.	VO0 – VO2 OF THE 4464 UNIT	49
10.4.	RE0 OF THE 4418 UNIT	49
10.5.	EXIT LIGHT / EMERGENCY LIGHT	49
10.6.	OUTPUT OF THE 3379 UNIT	50
10.7.	OUTPUT OF THE 4479 UNIT	50
10.8.	OUTPUT OF THE 4383 UNIT	50
10.9.	OUTPUT OF THE 4611 UNIT	50
10.10.	OUTPUT OF THE 4480 UNIT	50
10.11.	OUTPUT OF THE 4481 UNIT	50
10.12.	OUTPUT OF THE 4482 UNIT	51
10.13.	OUTPUT OF THE 4487 UNIT	51
10.14.	OUTPUT PROGRAMMING	51
10.14.1.	OUTPUT TYPE	51
10.14.2.	COMMENTS TO THE OUTPUT TYPES:	52
10.14.3.	LOGIC	52
10.14.4.	SUPERVISED / NOT SUPERVISED	53
10.14.5.	OUTPUT SIGNAL PERIOD	53
10.14.6.	CONTROL EXPRESSION	56
10.14.7.	TRIGGER CONDITIONS	57
10.14.8.	COMMENTS TO THE TRIGGER CONDITIONS	59
10.14.9.	LOGICAL OPERATORS	62
10.14.10.	CONTROL EXPRESSION THEORY	62
10.14.11.	CONTROL EXPRESSION EXAMPLES	65
10.14.12.	CONTROL GROUPS	66
11.	FUNCTIONS	67
11.1.	FIRE ALARM	67
11.1.1.	FIRE ALARM TYPE B	67
11.1.2.	FIRE ALARM TYPE A	67
11.2.	ALARM TEXTS	68
11.2.1.	CREATING THE ALARM TEXTS VIA EBLWin	68
11.3.	FIRE DOOR CLOSING	70
11.4.	INTERLOCKING FUNCTION	71
11.4.1.	PROGRAMMING OF INTERLOCKING FUNCTION	71
11.5.	2-ZONE / 2-ADDRESS DEPENDENCE	75
11.5.1.	TWO ZONE DEPENDENCE	75
11.5.2.	2-ADDRESS (-UNIT) DEPENDENCE	77
11.5.3.	RESET OF 2-ZONE / 2-ADDRESS DEPENDENCE (CO-INCIDENCE ALARM)	77

11.6.	DELAYED ALARM	78
11.6.1.	ABORT TEMPERATURE DELAY TIME	78
11.7.	ALTERNATIVE ALARM ALGORITHM	79
11.8.	EXTERNAL TIME CHANNELS	80
11.9.	SELF-VERIFICATION	80
11.10.	MINIMUM / MAXIMUM SENSOR VALUES	80
11.11.	ALERT ANNUNCIATION	81
11.12.	LOCAL ALARM ACKNOWLEDGEMENT (LAA)	82
11.13.	QUIET ALARM	84
11.14.	REAL TIME CLOCK (RTC)	85
11.14.1.	DAYLIGHT SAVING TIME	85
11.15.	EVACUATE	85
11.16.	ZONE GROUPS	86
11.17.	CALIBRATION OF SUPERVISED OUTPUTS	87
11.18.	SERVICE MODE	87
11.19.	SERVICE SIGNAL	88
11.20.	LIFETIME LIMIT SERVICE SIGNAL	89
11.21.	FAULT SIGNAL (FAULT CONDITION)	89
11.22.	CHECK LOOP	90
11.22.1.	SUB-LOOP	92
11.22.2.	CHECK LOOP OK	93
11.22.3.	LOOP VIEWER	94
11.22.4.	LOOP UNITS	94
11.22.5.	STATISTICS	95
11.22.6.	ONLY FAULTS	95
11.22.7.	ASSIGN SEQUENCE NUMBERS	95
11.22.8.	START	95
11.22.9.	CREATE SSD	95
11.22.10.	FAULTS - CHECK LOOP	96
11.23.	AUTO ADDRESS	103
11.23.1.	GENERAL	103
11.23.2.	LIMITATIONS	103
11.23.3.	WORKFLOW FOR NEW INSTALLATIONS	104
11.23.4.	ADD UNITS WITHOUT ISOLATORS	104
11.23.5.	FAULTS - ADD UNITS WITHOUT ISOLATORS	104
11.23.6.	FAULTS - AUTO ADDRESS	105
11.23.7.	RESET ADDRESSES	106
11.23.8.	FAULTS - RESET ADDRESSES	106
11.24.	REPLACE DETECTORS	106
11.24.1.	FAULTS - REPLACE DETECTORS	106
11.25.	EXTEND LOOP	107
11.25.1.	FAULTS - EXTEND LOOP	107
12.	DISABLEMENTS	108

12.1.	DISABLE ALARM POINTS AND OUTPUTS	108
12.1.1.	ENHANCED DISABLEMENT	108
12.1.2.	DISABLE ZONE	108
12.1.3.	DISABLE ZONE / ADDRESS	108
12.1.4.	DISABLE ZONE RANGE	108
12.1.5.	DISABLE CONTROL OUTPUT	108
12.1.6.	DISABLE / RE-ENABLE OUTPUT TYPE	109
12.2.	DISABLE INTERLOCKING OUTPUT	109
12.3.	DISABLE OUTPUTS FOR ROUTING EQUIPMENT	109
12.4.	DISCONNECT & RE-CONNECT LOOP / ZONE LINE INPUT	109
13.	TEST	110
13.1.	TEST MODE	110
13.2.	TEST ALARM DEVICES	110
13.3.	TEST OF OUTPUTS	110
13.4.	TEST OF ROUTING EQUIPMENT	111
14.	EBLWin	112
14.1.	CONTROL UNIT PROPERTIES	113
14.1.1.	GENERAL INFORMATION	113
14.1.2.	MISC	113
14.1.3.	CURRENT CONSUMPTION	113
14.1.4.	BATTERY	114
14.2.	CONTROL UNIT POP-UP MENU	115
14.2.1.	SOFTWARE VERSION	115
14.2.2.	SHOW EVENT LOG	115
14.2.3.	SHOW EXIT LIGHT EVENT LOG	115
14.2.4.	RESTART	116
14.2.5.	ADD GATEWAY 5088	116
14.2.6.	DELETE	116
14.2.7.	PROPERTIES	116
14.3.	SYSTEM PROPERTIES (SETTINGS)	117
14.3.1.	SYSTEM PROPERTIES DIALOG BOX	117
14.3.2.	NAME	117
14.3.3.	USER DEFINABLE TEXT	117
14.3.4.	SYSTEM PROPERTIES, PAGE 1	117
14.3.5.	SYSTEM PROPERTIES, PAGE 2	119
14.4.	SYSTEM POP-UP MENU	120
14.4.1.	PROPERTIES	120
15.	EBLWin MENUS	121
15.1.	THE FILE MENU	121
15.1.1.	NEW	121
15.1.2.	OPEN	121
15.1.3.	IMPORT FROM Win512	121
15.1.4.	REPORT	122
15.1.5.	SAVE	122

15.1.6.	SAVE AS	122
15.1.7.	PRINT LABELS	122
15.2.	THE VIEW MENU	123
15.2.1.	TREE VIEW	123
15.2.2.	DEVIATIONS	123
15.2.3.	SELECTED LOOP	124
15.2.4.	ZONES	124
15.2.5.	ALARM POINTS	124
15.2.6.	INTERLOCKING COMBINATIONS	124
15.2.7.	EXTERNAL FAULTS	125
15.2.8.	TECHNICAL WARNINGS	125
15.2.9.	EXTERNAL TIME CHANNELS	125
15.2.10.	CONTROL UNITS	126
15.2.11.	FIND	126
15.3.	THE SYSTEM MENU	127
15.3.1.	PROPERTIES	127
15.3.2.	TIME CHANNELS	127
15.3.3.	ALARM ALGORITHMS	129
15.3.4.	OUTPUT SIGNAL PERIODS	131
15.3.5.	NATIONAL HOLIDAYS	131
15.3.6.	TWO ZONE DEPENDENCE	132
15.3.7.	ZONE GROUPS	132
15.3.8.	SYSTEM INFORMATION	132
15.3.9.	EDIT ALARM TEXTS	133
15.3.10.	USER DATA	133
15.3.11.	CONTROL GROUPS	133
15.4.	THE TOOLS MENU	134
15.4.1.	VALIDATE	134
15.4.2.	LOG ON CONTROL UNIT	134
15.4.3.	DOWNLOAD SSD	134
15.4.4.	BACKUP SSD	134
15.4.5.	VERIFY SSD	134
15.4.6.	ERASE SSD	135
15.4.7.	RESET USER PASSWORDS	135
15.4.8.	DOWNLOAD SOFTWARE	135
15.4.9.	OPTIONS	135
15.4.10.	ADVANCED FUNCTIONS	135
15.4.11.	BACKUP EBLWEB CONFIGURATION	135
15.4.12.	DOWNLOAD EBLWEB CONFIGURATION	135
15.4.13.	DOWNLOAD EBLWEB SOFTWARE	135
15.5.	THE OPERATIONS MENU	136
15.5.1.	DISABLE / RE-ENABLE ZONES	136
15.5.2.	TESTMODE	136
15.6.	COM LOOP ICON POP-UP MENU	137
15.6.1.	ADD LOOP UNIT	137
15.6.2.	ADD I/O MATRIX BOARD 4582	138

15.6.3.	CLEAR LOOP	138
15.6.4.	DISCONNECT	138
15.6.5.	RECONNECT	138
15.6.6.	SCAN LOOP	138
15.6.7.	VIEW SCANNED LOOP	138
15.6.8.	CREATE SSD FROM SCANNED LOOP	138
15.6.9.	VIEW LOOP STATISTICS	139
15.6.10.	CHECK LOOP	139
15.6.11.	AUTO ADDRESS	139
15.6.12.	REPLACE DETECTORS	139
15.6.13.	EXTEND LOOP	139
15.6.14.	SHOW SENSOR VALUES	139
15.6.15.	EDIT AS LIST	139
15.6.16.	PROPERTIES	140
15.7.	LOOP UNIT ICON POP-UP MENU	140
15.7.1.	TOGGLE LED	140
15.7.2.	SHOW SENSOR VALUES	140
15.7.3.	DELETE	141
15.7.4.	PROPERTIES	141
16.	DOWNLOAD SSD	142
16.1.	VERSION CONTROL FOR SSD DOWNLOAD	142
16.2.	DOWNLOAD TO CONTROL UNIT	144
16.3.	ALARM TEXTS DOWNLOAD	144
17.	DOWNLOAD SOFTWARE (S/W)	145
17.1.	FIRMWARE MANAGER	145
18.	S/W VERSIONS	148
19.	CABLE TYPES	149
19.1.	COM LOOP CABLES	149
19.2.	CONVENTIONAL ZONE LINE CABLES	150
19.3.	ALARM DEVICE CABLES	150
19.4.	OTHER CABLES	150
20.	COM LOOP CABLE LENGTH	151
20.1.	CALCULATION OF CABLE LENGTH IN EBLWin	151
20.2.	CALCULATION OF CABLE LENGTH WITH GRAPHS	152
20.2.1.	GRAPHS - MAXIMUM CONDUCTOR RESISTANCE	153
20.3.	DIAGRAM OF CABLE LENGTH	154
21.	CURRENT CONSUMPTION	155
21.1.	TOTAL CURRENT CONSUMPTION FOR LOOPS	155
21.2.	INTERNAL CURRENT CONSUMPTION FOR CONTROL UNITS	156
21.3.	EXTERNAL CURRENT CONSUMPTION FOR CONTROL UNITS	157
21.4.	CURRENT CONSUMPTION FOR EXTERNAL POWER SUPPLY	159
21.5.	VALIDATE RESULTS	160

21.6.	CURRENT CONSUMPTION REPORT	161
21.7.	CURRENT CONSUMPTION FOR UNITS – OVERVIEW	162
21.8.	CURRENT CONSUMPTION – THEORY	165
21.8.1.	COMMENTS REGARDING (I ^{TN})	165
21.8.2.	COMMENTS REGARDING (I ^{TA})	165
22.	POWER SUPPLY	166
22.1.	POWER SUPPLY OVERVIEW	166
22.2.	MAIN POWER SOURCE - RECTIFIER	167
22.3.	SECOND POWER SOURCE – BATTERIES	167
22.3.1.	BATTERY CAPACITY - THEORY	168
22.3.2.	BATTERY CHARGING	169
22.3.3.	BATTERY CHARGING FUNCTION	169
22.3.4.	SECURITY FUNCTIONS	170
23.	SYSTEM LIMITATIONS	171
23.1.	USER DEFINABLE TEXTS	171
23.2.	CIE	171
23.3.	RESERVED ADDRESSES	171
24.	COMMISSIONING THE SYSTEM	172

1. INTRODUCTION

This document describes the EBLOne system, S/W version 3.8.x, and is intended to be used for planning, commissioning and service.

This document should be read in conjunction with:

- EBLOne Operating Instructions MEW03042
- Technical descriptions, for the control and indicating equipment and all other units

Normally, information found in one of the documents is not found in another document. The documents complement each other.

DRAWINGS / CONNECTION DIAGRAMS

Resulting from continual development and improvement, all dimensions quoted are approximate only and subject to change without notice, as are other technical features and data.

More information on characteristics, mounting, connections and technical data for the control unit and all other units, is found in each Technical description respectively.

NATIONAL REGULATIONS

When planning a fire alarm installation, the national regulations must be obeyed. Detector coverage area and positioning of detector in the room / building are not described in this document.

EBLOne is very flexible. Many functions / facilities are built-in the system, for example in the S/W and EBLWin. When downloading S/W and SSD, different settings, conventions, and so on. can be set to fulfil national regulations.

TYPE NUMBER - ARTICLE NUMBER - PRODUCT NAME

A product consists of one or more parts (HW) according to a Product Parts List. A product has a type number.

An article number is often the same as the type no. but a country code can be added.

Example of an article number:




Example of a product name:

EBLOne CU, with key

Hardware (HW), for example a printed circuit board (PCB), has:

- a type number
- an article number
- a product name
- a PCB number
- sometimes a S/W

Example of a PCB number:

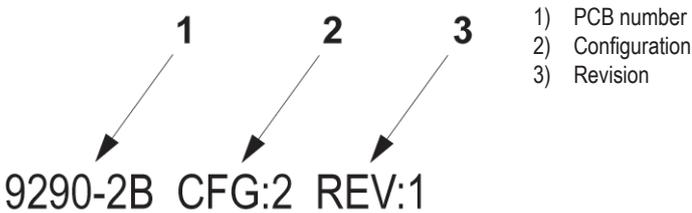

Software (S/W) has:

- a version number (for example V3.1.0)
- sometimes additional information

PC S/W, a program used for programming, commissioning and so on, has:

- a version number (for example V3.1.0)

2. ABBREVIATIONS

PFSEU AB	Panasonic Fire & Security Europe AB
Alarm points	Units, which can generate a fire alarm (in the control unit), i.e. analog detectors (sensors), conventional detectors, manual call points, etc.
Smoke detector	Analog or conventional photoelectric (optical) smoke detector
Sensor	Sensor = Analog detector
Analog detector	Contains an A/D-converter. The Control Unit pick up the digital values ("sensor values") for each detector individually. All evaluations and "decisions" are then made by alarm algorithms in the CU. The detector generation (440x and 440xl) can be used in "Advanced mode", i.e. the alarm algorithms are in the detector instead. Analog detectors are addressable – an address setting tool 4414 is used for the detector's COM loop address and mode settings. An analog detector has to be plugged in an Analog Sensor Base (ASB).
Analog Sensor Base (ASB)	An analog detector is plugged in an ASB, which is connected to a COM loop (see below).
Conventional detector	A detector with only two statuses, i.e. normal or fire alarm. The detector has a "closing contact" and a series alarm resistor. Normally plugged in a conventional detector base CDB (see below), which is connected to a conventional zone line input. Some types (e.g. water proof types) are connected directly on zone line. An end-of-line device has to be connected in the last unit on the zone line.
Conventional Detector Base (CDB)	A conventional detector is plugged in a CDB, connected to a conventional zone line input.
Addressable	A unit with a built-in address device. Each unit is individually identified, handled and indicated in the Control Unit. (The unit can be an I/O unit with a zone line input, to which one or more conventional "alarm points" can be connected.)
Conventional zone line input / External line	Input intended for one or more conventional alarm points. End-of-line device in the last alarm point on the line.
Output unit	Addressable unit with programmable control outputs. Connected to a COM loop (see below).
Output / Control output	Defined or programmable function. Relay output or voltage output (supervised / monitored or not), in the Control Unit or an output unit connected on a COM loop.
COM loop	Loop = a cable, twisted pair, to which all the addressable units can be connected. Starts in the Control Unit and returns back to the CU.
Control Unit / CU / CIE	Control Unit = Control and Indicating Equipment (CIE) = Unit to which the alarm points are connected (via e.g. a COM loop). Indicates fire alarm, fault condition, etc.
Nuisance alarms	False or unwanted alarms
LED	LED (Light Emitting Diode) = Yellow, green or red optical indicator ("lamp").
External Indicator (Ext. LED)	A unit with a red LED connected to a base (ASB / CDB) or a detector with an output for an ext. LED. Lit when the built-in LED in the detector / base is lit.
Exit light / Emergency light	Customized I/O units with built-in LED. MXE: Indicates recommended exit. MXER: Indicates recommended exit OR blocked exit. MXL: For corridors or open area
Touch screen / LCD	LCD (Liquid Crystal Display) = touch screen for presentation of fire alarms, fault messages, etc. In EBLOne it is a 7" graphical LCD (1024 x 600 px), RGB.


Site Specific Data (SSD)	The SSD is unique for each installation. All alarm points, presentation numbers, user definable alarm texts, programmable outputs, etc. are created in the PC program EBLWin and also downloaded in EBLOne unit with EBLWin.
Short circuit isolator (SCI)	Addressable unit for automatic disconnection of a part (segment) of a COM loop (see below) in case of short circuit on the loop. (According to EN54-2, one SCI is required per 32 alarm points.)
Software (S/W) / Firmware / System program	The software (S/W) – also called Firmware and System program – makes the control unit (the microprocessor) work. It is factory downloaded but another / new version can, via the PC program EBLWin, be downloaded in EBLOne on site.
EBLWin	PC program used to create and download the SSD in EBLOne unit. Can be used during commissioning / maintenance of the EBLOne system (autogenerate COM loop SSD, acknowledge faults, etc.)
EBL Firmware Manager	PC program used to download another / new software version.
Gateway	The Gateway is used to get EBLOne information as well as remote control via a PC (browser) and an intranet / internet. The Gateway is configured via the PC tool EBLWin.
EN54-13	Fire detection and fire alarm systems; Part 13: Compatibility assessment of system components.

3. GENERAL DESCRIPTION

EBLOne is a microprocessor controlled intelligent fire alarm system, intended for analog addressable detectors, as well as conventional detectors and manual call points. EBLOne has one loop connected for addressable units. On the COM loop it is possible to connect up to four SUB-loops. Programmable control outputs and output units are available.

EBLOne consists of a colour touch screen and has multi language support.

EBLOne can have up to 253 addresses, and up to 253 alarm points.

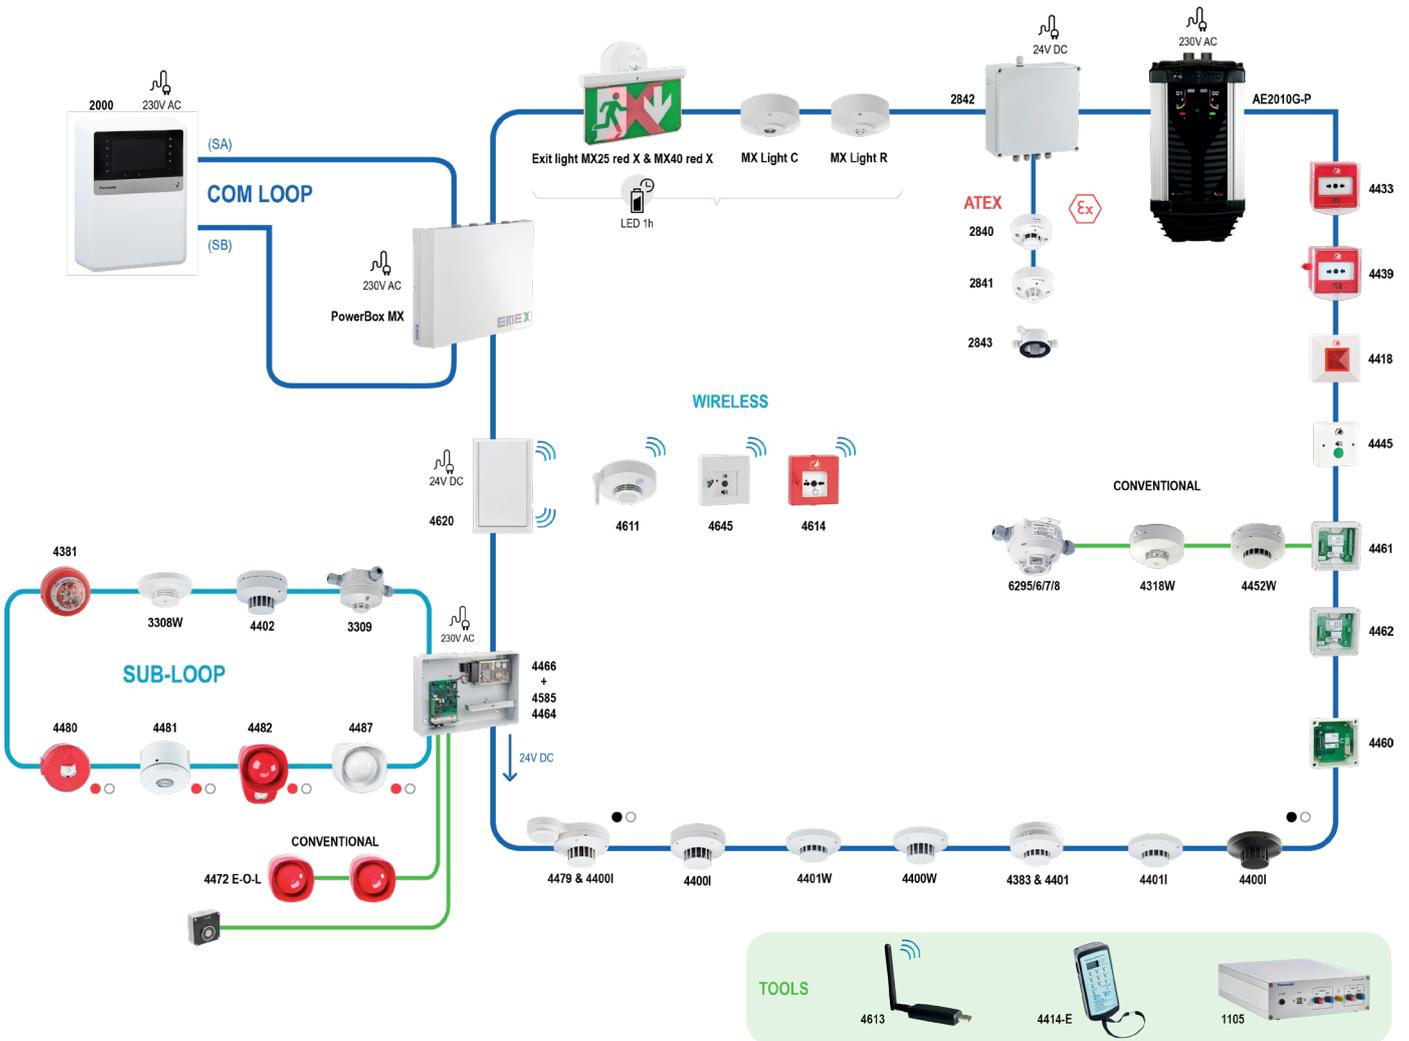

TECHNICAL NUMBER

The technical number, NNN, is used when programming all units connected to the COM loop. Technical number is also used to identify which unit has generated a fault.

PRESENTATION NUMBER

Each fire alarm point / input / zone has a presentation number, NNN-NN. The presentation number is shown in the CIE display to identify the point / zone activating fire alarm.

COM LOOP UNITS

Addressable COM loop units are connected directly to the COM loop.

ADDRESS AND MODE

Most of the addressable units must have both address and mode set. This is done in different ways for different units, for example address setting tool, DIP switches, jumpers, or via the CIE display. For more information, please read the Technical descriptions for each unit respectively.

SOFTWARE (S/W) VERSIONS

Due to continual development and improvement, different S/W versions can be found.

EBLWin

The PC program EBLWin is used for programming and commissioning of the control unit.

APPLICATIONS

The EBLOne system is intended for small installations. The intelligent control units offer the system designer and end user a technically sophisticated range of facilities and functions.

Programming with the PC programs EBLWin and commissioning the system is very easy.

EN 54-2 options with requirements	Clause in EN 54-2:1997/A1:2006
Output to fire alarm devices	7.8
Output to fire alarm routing equipment	7.9.1
Delays to outputs	7.11.1 b) + c) + d) + e) + f)
Dependencies on more than one alarm signal (Type B)	7.12.2
Alarm counter	7.13
Fault signals from points	8.3
Output to fault warning routing equipment	8.9
Test condition	10
Standardized input/output interface	11

SOFTWARE TO INSTALL

The following software must be installed on your computer to be able to download software to EBLOne.

- Firmware Manager 1.3.4 (used from EBLWin v.2.5)
- USB driver for 5054 and EBLOne
- HASP Driver
- Driver "Charts" – to view sensor values graph
- Visual C++ 2013 Redistributable Package


4. EBLONE



THE CONTROL UNIT HAS THE FOLLOWING BASIC CONFIGURATION:

For drawings and connection diagram, see Technical description for the CIE.

- White plastic cabinet
 - DIN rail for Gateway (5088)
- Main board (2010)
 - One COM loops to which the loop units are connected
 - One programmable supervised voltage outputs (S1)
 - Two programmable, not supervised inputs (I1-I2)
 - Two 24 V DC outputs power (power supply outputs for routing equipment and external equipment)
 - Two not programmable relay outputs for routing equipment (Fire alarm output for Fire brigade tx and Fault condition output for Fault tx)
 - Connectors for Gateway
 - Battery temperature sensor
 - Battery charger
 - Connectors for power supply (rectifier) and batteries
- Built-in power supply
 - Switched power supply (rectifier), 230V AC / 24 V DC (MeanWell MDR-40-24)
 - Space and connection cables for two Sealed Lead-Acid backup batteries (12 V, 17 Ah)

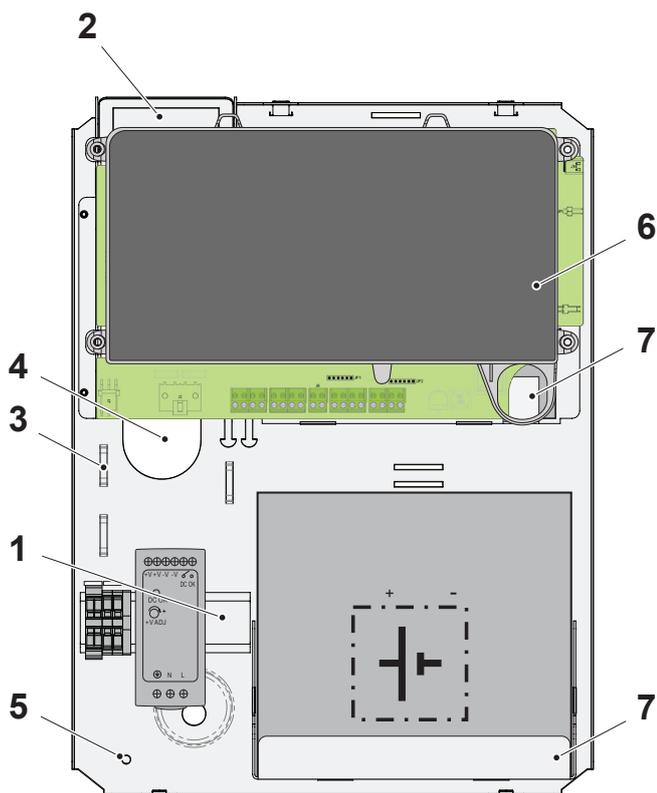

- 1) Symmetric 35 mm DIN rail for Gateway
- 2) Cable entry opening, 5 x Ø 7.7 mm and 5 x 6.7 mm
- 3) Mains cable clamp
- 4) Cable entry opening, 47 x 70 mm
- 5) Earth screw
- 6) LCD
- 7) 2 x Battery holder

5. COM LOOP UNITS

For more detailed information, for example address setting, mode setting and installation; see the Technical description for each COM loop unit respectively.

The COM loop can handle up to 253 addressable COM loop units, and up to 253 alarm points.

Each COM loop unit is added and programmed via EBLWin. Depending on type of unit, regarding:

- Technical address (COM loop address) 001-253
- Name
- Zone number and Address within the zone
- Alarm text (user definable)
- Regular Alarm algorithm (some units only)
- Options:
 - Alternative Alarm algorithm & Time Channel (some units only)
 - Alert annunciation & Time Channel (some units only)
 - Disablement & Time Channel (some units only)
 - Two-units-dependent fire alarm, i.e. co-incidence alarm & Time Channel (some units only)
- Delayed (fire alarm)
- Quiet alarm
- Sequence number
- Sound type
- Type of output
- Argumentand so on

ADDRESSABLE SOUNDERS / ALARM DEVICES

Addressable sounders and alarm devices are connected directly to the COM loop.

The Panasonic addressable alarm devices are not intended for supervised (monitored) voltage outputs (S1 in EBLOne). Connections of alarm devices according to the Technical description.

CONVENTIONAL ALARM POINTS

Conventional alarm points, for example detectors, are connected to a COM loop unit zone line input. Programmable inputs can also be used for flow switches and so on.

ANALOG ALARM POINTS

Analog alarm points, for example detectors, are connected directly to the COM loop.

BASES

An analog detector shall be plugged in an analog base, and a conventional detector shall be plugged in a conventional base. The base has an address label on which the COM loop address of the detector can be written, as well as the isolator's COM loop address. The COM loop address for the detector is set in the detector.

The following units can be connected to the COM loop.

For more detailed information on the COM loop units, see the Technical Descriptions respectively.

	4400I Analog multi detector (Advanced mode)...	Ctrl+Shift+I
	4401I Analog smoke detector (Advanced mode)...	Ctrl+N
	4401 Analog smoke detector (Advanced mode)...	Ctrl+I
	4400 Analog multi detector (Advanced mode)...	Ctrl+M
	3308/3309/2841/4408/4409 Analog heat detector...	Ctrl+2
	2840 Analog smoke detector (Normal mode)...	Ctrl+1
	4433/4439 Addressable manual call point with short circuit isolator...	Ctrl+Q
	4461 I/O Unit with isolator...	
	4462 Addressable 2 inputs unit with isolator...	
	4480/4481 Visual alarm device...	
	4482 Visual alarm device with siren...	
	4487 Addressable siren with isolator...	
	3379 Addressable sounder base...	
	4479 Addressable sounder base...	
	4418 Light indicator...	
	4402 Multi detector with CO...	
	4620 Addressable base station for wireless units...	Ctrl+J
	4611 Wireless photoelectric smoke detector...	Ctrl+K
	4614 Wireless manual call point...	Ctrl+L
	4645 Wireless LAAU Local alarm acknowledgement unit...	
	4464 Addressable two voltage outputs unit...	
	4466 External power supply...	
	4383 Light indicator...	Ctrl+H
	4445 LAAU Local alarm acknowledgement unit...	Ctrl+T
	AE2010 L-P Aspect Lazeer...	
	AE2010 N/G-P Aspect Nitro/Grizzle...	
	4460 One relay output unit with isolator...	
	4381 Visual alarm device with isolator...	
	4585 COM-loop repeater	
	Exit light / Emergency light...	

5.1. SUB-LOOP

The COM loop can have up to four SUB-loops which are connected to the 4585 board mounted inside the 4466 unit. The 4585 and the connected SUB-loop is powered by the 4466.

It is possible to disconnect individual SUB-loops. Disconnection of the main loop will also disconnect the SUB-loops.

When you re-connect a COM loop, any individually disconnected SUB-loops on that COM loop will also be re-connected.

The cable length and current consumption is calculated automatically by EBLWin, see section 20. COM LOOP CABLE LENGTH and 21.1. TOTAL CURRENT CONSUMPTION FOR LOOPS.

5.2. SHORT CIRCUIT ISOLATORS

Up to 128 short circuit isolators on the COM loop including SUB-loops can be used, which gives 129 loop segments.

If no short circuit isolators are used, the whole COM loop will be disabled in case of short circuit on the loop.

EBLOne has one built-in isolator in the-A direction (no. "A") and one in the B-direction (no. "B").

COM-loop repeater 4585 has one built-in isolator in the-A direction and one in the B-direction for the SUB-loop.

One short circuit isolator per 32 alarm points is required according to EN54-2.

5.2.1. SEQUENCE NUMBER

Each isolator has to be given a Sequence Number, 00-127. The isolators have to be connected consecutively (Sequence Number 00-01-02-03-04-05-06-07-08-09-10-11-12-13-14-15 - - up to 127) in the COM loop's A-direction. The sequence no. is programmed via EBLWin.

Each SUB-loop has its own sequence Number, 00-01-02-03-04-05-06-07-08-09-10-11-12-13-14-15 - - up to 127. The sequence number will be automatically assigned if the auto address / check loop functions are used.



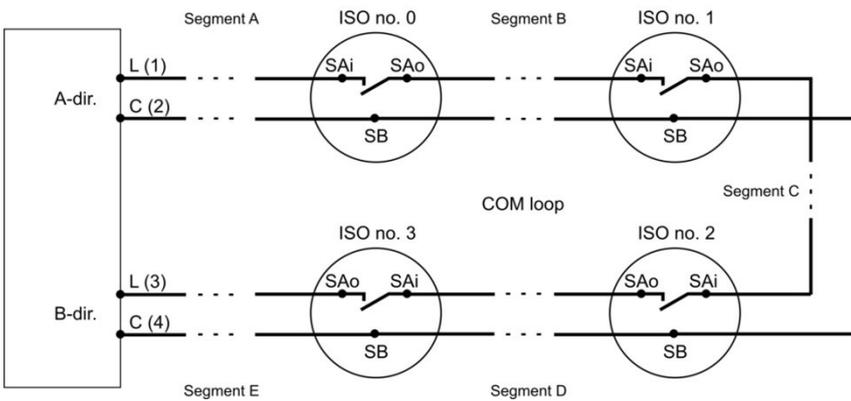


Illustration above: Four isolators connected to a COM loop gives five loop segments, i.e. Segment A (A-00), B (00-01), C (01-02), D (02-03) and E (03-B). If more isolators have to be added, the sequence numbers have to be updated (via EBLWin), for example. if one isolator has to be put in between isolator no. 00 and no. 01 in the figure, the new isolator has to be no. 01 and the old no. 01 has to be no. 02 and so on.

ARRANGE SEQUENCE NUMBERS

In Menu **Tools / Options / EBLWin Settings** dialog there is a check box: 'Arrange sequence numbers'. It is checked by default.

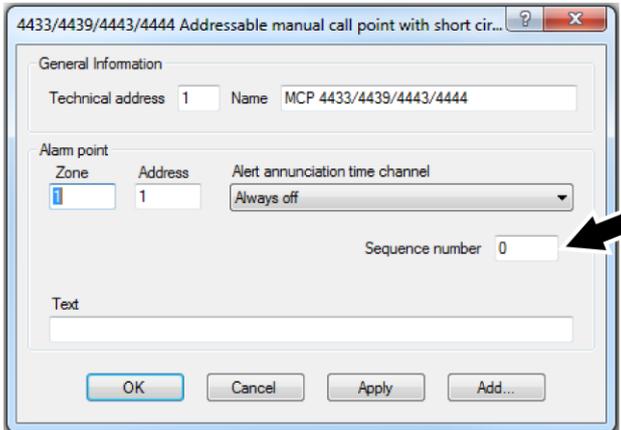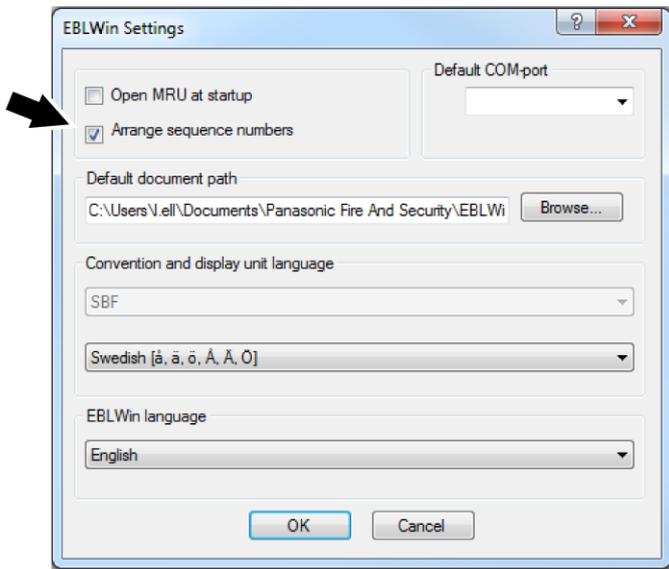

When 'Arrange sequence numbers' is checked, EBLWin will work as follows:

- If a sequence number is inserted, the range after will be increased by one.
- If a sequence number is removed, the range after will be decreased by one.
- If a sequence number is changed to an existing, a swap will be made.

If the checkbox is not checked, the sequence numbers must be arranged manually.

5.2.2. SHORT CIRCUIT / CUT-OFF ON THE COM LOOP

A break or short circuit on a COM loop has to generate a fault in the control unit within 60-100 seconds (EN54-2 requirement). If one or more short circuit isolators are used, the loop will be divided into "segments" (i.e. the part between two short circuit isolators or between the control unit and one short circuit isolator). Only the affected segment will be isolated, which will minimize the number of units disabled by a short circuit. The fault messages will also show between which isolators the short circuit is situated.

If one of the following occurs:

- com loop end-point voltage <12 v dc or
- com loop short circuit or
- com loop break(s)

This will start a "cycle" as follows: (see reference picture on previous page)

- The whole loop will be disabled, i.e. no voltage on the loop which means that all isolator relays will be powerless (= all isolators disabled), i.e. there will be a "break" on the L (SA) wire in each isolator.
- A control unit algorithm will now try to re-enable the first isolator in the **A-direction** (ISO no. 0 / sequence no. 0). If this is possible, the first isolator in the **B-direction** (ISO no. 3 / sequence no. 3) will be re-enabled, if this is possible. And so on. The control unit algorithm will now try to re-enable all the isolators, alternating A-direction and B-direction. The isolator just before a short circuit cannot be re-enabled.
- Finally all isolators will be re-enabled except the isolator on each side of a short circuit and any isolator(s) between two or more breaks on the loop.
- Communication will be in both directions for 10 minutes. Then a new "cycle" starts.
- If the "fault(s)" are not corrected, the communication will be in both directions for 12 hours before a new cycle starts. After that, the cycle will run every 12th hour until the fault is corrected.
- If the "fault(s)" are corrected, the communication will return to be in the A-direction only. Depending on if it is too low voltage on the loop, short circuit, one break or two or more breaks, the fault messages will be different.
 - **FAULT:** Cut-off Tech addr nnn <-> nnn [sub-loop x]

nnn = technical address of the units with short circuit isolators closest to the fault or A/B (for the A/B-direction of the control unit)

- **FAULT:** Short circ. Tech addr nnn <-> nnn [sub-loop x]

nnn = technical address of the units with short circuit isolators closest to the fault or A/B (for the A/B-direction of the control unit)

If there are multiple loop faults, i.e. one or more short circuits and/or one or more Cut-offs, there will be a "multiple COM loop fault" message.

- **FAULT:** Multiple faults, COM loop x

The first fault message will show the first fault found. There will always be a "no reply" message for all units not found in spite of communication in both directions.

- **FAULT:** No reply zone: xxx address xx
technical number xxxxxx
Alarm text for xxx-xx

Regarding Fault acknowledge, see the EBLOne Operating Instructions.

After the faults are acknowledged and corrected, it is recommended to disconnect / re-connect the loop to clear the loop faults. Otherwise it may take up to 12 hours before the faults disappear because the cycle only runs every 12th hour.



5.2.3. BUILT-IN ISOLATORS

The units that have a built-in isolator, do not require any separate COM loop address for the isolator. The isolator only require the sequence Number, 00-127.

5.3. SERIAL NUMBER

During check loop and auto-addressing the control unit reads out the serial no of the loop unit and reports it to EBLWin. In EBLWin the serial number is displayed in the list view tab of the check loop / auto-addressing windows.

EBLWin save the serial numbers in the document when the user chooses to create SSD. The serial numbers are shown in the loop unit dialog, in the loop list view and in the SSD report.

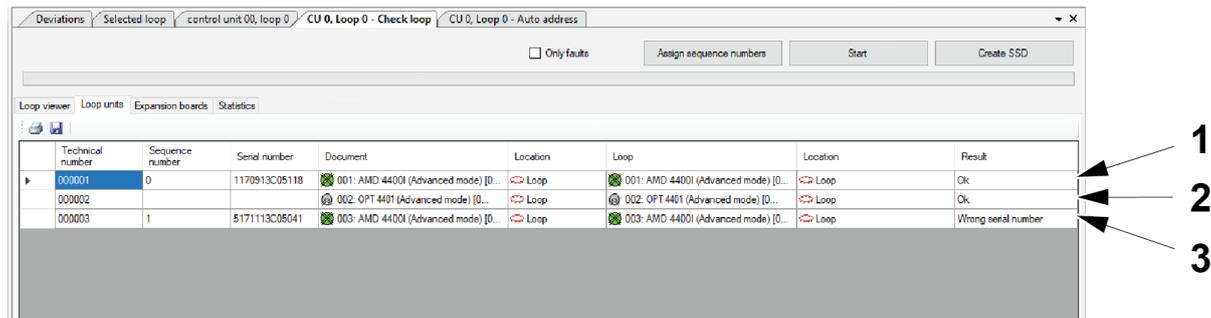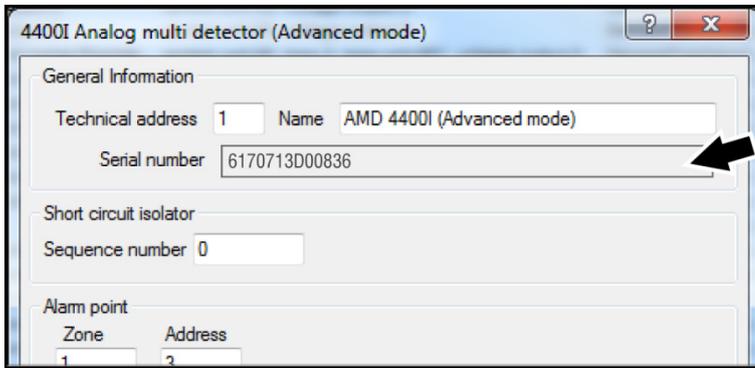

- 1) The control unit has found a serial number for unit 4400I, via the check loop function
In this case ok.
- 2) The control unit has not found any serial number. The unit does not support the feature.
- 3) The control unit has found a serial number for unit 4400I, via the check loop function
In this case, the unit's serial number differs from the serial number saved in the SSD.
The unit has been changed.

5.3.1. COM LOOP UNITS WITH SERIAL NUMBER

The following units support this function. All future units will have serial number.

SERIAL NUMBER FORMAT FOR 4400I, 4401I, AND 4479:

Format 1: CYYWWSTTNNNNN

C = Production cell no

YY = Year

WW = Week

S = Shape (normally 1)

TT = Type code (hexadecimal)

NNNNN = Number

SERIAL NUMBER FORMAT FOR 4381, 4418, 4461, 4462, 4464, 4466, 4480, 4481, 4482, 4487, AND 4585:

Format 2: YYWWTTNNNN

YY = Year

WW = Week

TT = Type code (hexadecimal)

NNNN = Number

5.4. SUPPORTED FUNCTIONS TABLE

The table below shows units and supported functions.

Unit	Supports serial number	Supports detect double addresses	Supports mixed polarity
2840	NO	NO	NO
3308/3309/2841/4408/4409	NO	NO	NO
3379	NO	NO	NO
4381	YES (Format 2)	YES	YES
4383	NO	NO	NO
4400	YES (Format 1)	NO	NO
4400I	YES (Format 1)	YES	NO
4401	YES (Format 1)	NO	NO
4401I	YES (Format 1)	YES	NO
4402	NO	YES	NO
4418*	YES (Format 2)	YES	YES
4433/4439*	YES (Format 2)	YES	YES
4445	NO	YES	NO
4460	YES (Format 2)	YES	YES
4461	YES (Format 2)	YES	YES
4462	YES (Format 2)	YES	YES
4464	YES (Format 2)	YES	YES
4466	YES (Format 2)	YES	YES
4479	YES (Format 1)	YES	NO
4480/4481	YES (Format 2)	YES	YES
4482	YES (Format 2)	YES	YES
4487*	YES (Format 2)	YES	YES
4585	YES (Format 2)	YES	YES
4611	NO	NO	N/A
4614	NO	NO	N/A
4620	NO	NO	NO
4645	NO	NO	N/A

Unit	Supports serial number	Supports detect double addresses	Supports mixed polarity
AE2010	NO	NO	NO
Exit light	NO	YES	NO

* All new units supports this function, but there can be older units on the field that do not support this function.

5.5. UNITS FOR HAZARDOUS (EX) AREAS

In hazardous (Ex) areas, Intrinsically Safe (IS) and approved products are required. The Intrinsically Safe alarm points are connected to an interface outside the Ex area.

Analog / addressable units are connected to a COM loop via an IS barrier unit 2842. See also Technical description MEW01874.

5.6. LOOP UNIT LOCATION

During check loop and auto-addressing the control unit reads out the location of the loop unit and reports it to EBLWin.

In EBLWin the loop location is displayed in the list view tab of the check loop / auto-addressing windows. The first location column shows the location in EBLWin and the second location column shows the physical location on the COM loop.

Technical number	Sequence number	Serial number	Document	Location	Loop	Location	Result
000001	0	1170913C05118	001: AMD 4400i (Advanced mode) [0...]	Loop	001: AMD 4400i (Advanced mode) [0...]	Loop	Ok
000002			002: ASB 4479	Loop	002: ASB 4479	Loop	Ok
000003	1	517113C05041	003: AMD 4400i (Advanced mode) [0...]	Loop	003: AMD 4400i (Advanced mode) [0...]	Loop	Ok
000004			004: OPT 4401 (Advanced mode) [00...]	Loop	004: OPT 4401 (Advanced mode) [00...]	Loop	Ok
000005	2	1840 4A 0014	005: EPS 4466	Loop	005: EPS 4466	Loop	Ok
000006			006: COM-loop repeater 4585 [sub-loo...]	Loop	006: COM-loop repeater 4585 [sub-loo...]	Loop	Ok
000007	3		007: I/O 4461 with isolator	Loop	007: I/O 4461 with isolator	Loop	Ok
000008	4	2026 14 0966	008: MCP 4433/4439 [001-05]	Loop	008: MCP 4433/4439 [001-01]	Loop	Ok
000009	5		009: Visual alarm device with siren 4482	Loop	009: Visual alarm device with siren 4482	Loop	Ok
000010			010: 4402 Multi detector with CO [001...]	006: COM-loop repeater 4585 [sub-loo...]	010: 4402 Multi detector with CO [001...]	Loop	Location is different
000011	6		011: Visual alarm device 4480/4481	Loop	011: Visual alarm device 4480/4481	Loop	Ok
000012	7	1813 20 5029	012: Addressable 2 inputs unit with iso...	Loop	012: Addressable 2 inputs unit with iso...	Loop	Ok
000013	8		013: Siren with isolator 4487	Loop	013: Siren with isolator 4487	Loop	Ok
000014	9		014: Visual alarm device with isolator ...	Loop	014: Visual alarm device with isolator 4...	Loop	Ok

- 1) The control unit has found the loop location for unit 4461, via the check loop function
In this case ok.
- 2) The control unit has found loop location for 4402, via the check loop function
In this case, the unit's loop location differs from the physical location on the COM loop.
The unit has been moved.
- 3) The control unit has found a unit on the SUB-loop 0.

6. ACCESSORIES

6.1. LABEL HOLDER 3390

To be mounted in an analog base or enclosed analog heat detector.

Intended for a label with "zone-address", "technical address", to be read also when the detector is plugged in its base. 100 label holders per packet. Labels not included.

6.2. LABELS 3391

A packet with self-adhesive white labels for label holder 3390.

10 A4-sheets à 132 labels for laser printer usage. The print-out is done via EBLWin.

7. ALGORITHMS FOR ANALOG DETECTORS

7.1. ADVANCED MODE ALGORITHMS

The latest generation of detectors uses the Advanced mode to activate the newest algorithms. These are described in each Technical description respectively.

The analog detectors 4401 and 4400 can via the address setting tool 4414 be set in different modes. The Advanced mode can be set with the address setting tool 4414. Not with the address setting tool 3314. The detectors are factory set to the NORMAL mode.

In EBLOne, only Advanced mode can be used.

The latest generation of detectors are the following:

- Conventional photoelectric smoke detector 4452
- Analog photoelectric smoke detector 4401
- Analog smoke detector with isolator 4401I
- Analog multi detector 4400
- Analog multi detector with isolator 4400I

The conventional detector 4452 uses some of the advanced mode functions.

7.2. NORMAL MODE ALGORITHMS – SMOKE DETECTORS

The information in the following chapters is valid for the analog smoke detector 2840 in NORMAL mode.

7.2.1. SENSOR VALUE

An analog smoke detector is like a "sensor". It detects its environment at all times. Each detected analog value is converted to a digital "sensor value", which for each individual detector, is continuously picked up and evaluated by EBLOne.

For analog smoke detectors the sensor values are shown as XX.X % (obscuration) per meter.

7.2.2. DECISION VALUE

In order to secure real fire alarms and reduce the nuisance alarms, a decision value is calculated. The decision value is used to decide if it is normal state, pre-warning, fire alarm, heavy smoke alarm or a smoldering fire. Algorithm. The decision value is calculated, see "Filtering algorithm" in section [7.2.4. ALARM ALGORITHMS – NORMAL MODE](#) on page 31.

7.2.3. WEEK AVERAGE SENSOR VALUE

Read this section in conjunction with "sensitivity compensation graph" below.

Each hour, one sensor value is stored in a special memory in the CIE, and each week, these stored sensor values are used for a "week average sensor value" calculation. This is done for each analog smoke detector individually. The first week average sensor value will be calculated within 2½ minutes after any restart, which means also after SSD download. During these 2½ minutes all analog smoke detector fire alarms are suppressed.

If the loop is disconnected at startup, or disconnected during the time when the first value is being calculated, the calculation will take stat/restart when the loop is reconnected. Also in this case the calculation will take about 2½ minutes and the fire alarms are suppressed.


Each analog smoke detector has a default sensor value = 0.1 %/m and a week average sensor value = 0.1 %/m at time = 0. A "fire alarm offset" value is added to the week average sensor value to get each detector's "Fire alarm level". The fire alarm level will be adjusted in relation to each new week average sensor value in order to keep the detector's fire alarm sensitivity constant. The fire alarm level is parallel with the "Week average sensor value", but always 3% /m offset.

At Time = 0 the "week average sensor value" is 0.1 %/m, and the fire alarm offset is 3 %/m = the fire alarm level is 3.1 %/m. Service signal will be given when the week average sensor value for a detector has reached the service level (1.8 %/m). At that level the detector is "dirty" and has to be replaced.

The week average sensor value will now stay on 1.8 %/m, i.e. the detector will be more sensitive until it is replaced with a new one.

SENSITIVITY COMPENSATION GRAPH

Sensor value
Obsc. In % / m

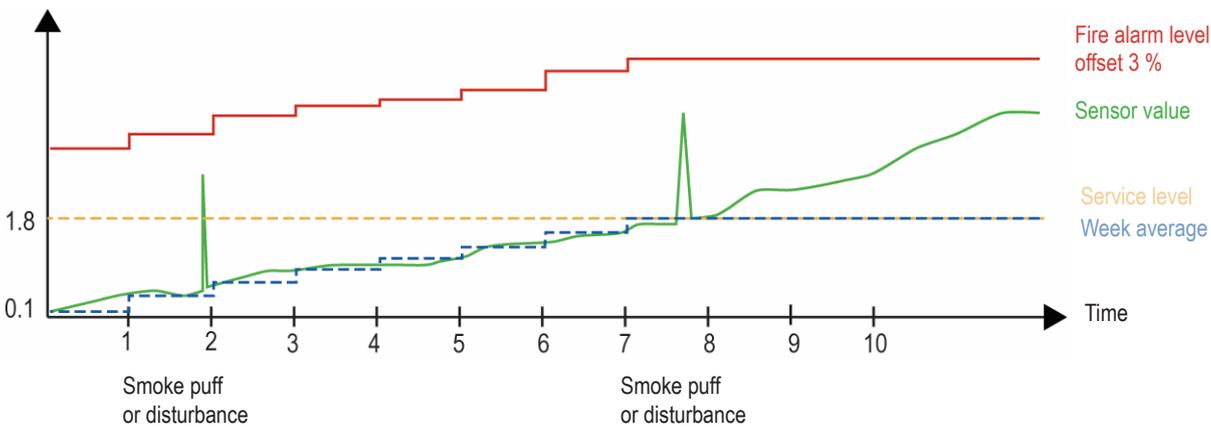

"Sensor Information" is available via Sensor value menu > > . Via EBLWin and a PC connected to EBLOne you can also get continuous "Sensor Information" for one or several detectors. Also via the Gateway you can get "Sensor Information" for one or several analog detectors on a COM loop.

7.2.4. ALARM ALGORITHMS – NORMAL MODE

Each alarm algorithm has three detection levels:

- 1) **Fire alarm** (fire alarm level = the week average sensor value + the fire alarm offset)
- 2) **Pre-warning** will be activated (if selected in EBLWin – Control unit Properties) at a lower level (smaller offset) than for fire alarm. Pre-warning will be activated before the fire alarm from the same alarm point.
- 3) **Heavy smoke alarm** will be activated at a higher level (bigger offset) than for fire alarm. A heavy smoke alarm will be activated later than the fire alarm from the same alarm point.

ALARM ALGORITHM

In order to reduce the nuisance alarms and ensure that the real fire alarms will be activated, six different alarm algorithms are available. See table “**smoke alarm algorithms**”. They are based on:

- Normal (N), High (H) or Low (L) sensitivity
- Normal (15 sec.) or slow (35 sec.) detection time

Normal sensitivity (Default) Fire alarm offset is 3.0 % smoke obscuration per meter.

High sensitivity Fire alarm offset is 2.4 % smoke obscuration per meter, which is less than for normal sensitivity. Can be used when an "early" fire alarm is wanted.

Low sensitivity Fire alarm offset is 3.6 % smoke obscuration per meter, i.e. more than for normal sensitivity. Can be used to reduce nuisance alarms.

Normal detection time - 15 sec. (Default) There will always be min. 15 seconds alarm delay. After the fire alarm level is reached, it will take minimum 15 seconds until fire alarm will be activated in the CIE. This is a "normal filter" to reduce nuisance alarms.

Slow detection time - 35 sec. There will always be min. 35 seconds alarm delay. After the fire alarm level is reached, it will take minimum 35 seconds until fire alarm will be activated in the CIE. This is an "extra filter" to reduce nuisance alarms.

SMOKE ALARM ALGORITHMS

Analog detector	Normal detection time (15 sec.)			Slow detection time (35 sec.)		
	H-15	N-15	L-15	H-35	N-35	L-35
	2.4%, High sensitivity	3.0%, Normal sensitivity	3.6%, Low sensitivity	2.4%, High sensitivity	3.0%, Normal sensitivity	3.6%, Low sensitivity
2840	X=0.8	X=1.0	X=1.2	X=0.4	X=0.5	X=0.6

FILTERING ALGORITHM


In order to secure a fast detection of real fire alarms and to reduce nuisance alarms to a minimum, a filtering algorithm is used. The filtering algorithm uses the sensor values to calculate a decision value. This calculation will vary depending on which alarm algorithm is in use. The decision value is zero from the beginning. Each time a new sensor value is picked up (sampled) from an analog smoke detector, this new sensor value is compared with the actual decision value and the decision value will be adjusted or not adjusted as follows:

If the difference, between the new sensor value and the actual decision value is $< "X"$, the decision value is set equal to the new sensor value.

If the difference is $> "X"$, the decision value is increased or reduced by $"X"$.

The decision value will consequently not be increased / decreased with a value exceeding the $"X"$ value even if the sensor values are much higher / lower.

FILTERING ALGORITHM GRAPH

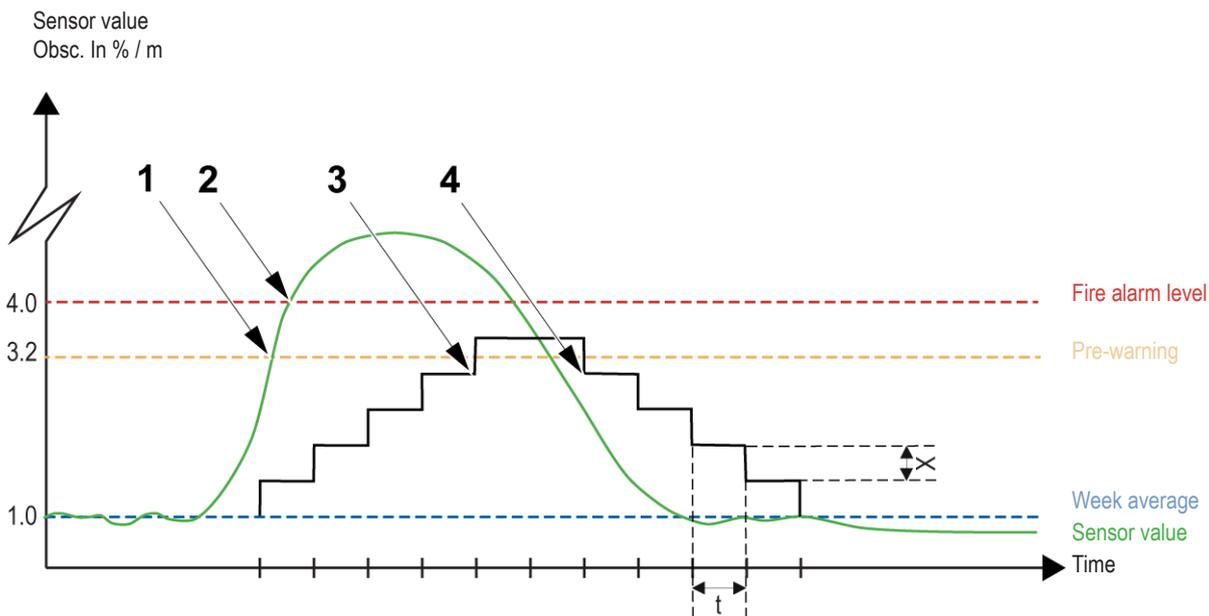

- 1) The sensor value has here reached the pre-warning level but nothing will happen since the decision value has not reached the pre-warning level.
- 2) The sensor value has here reached the fire alarm level but nothing will happen since the decision value has not reached the fire alarm level.
- 3) The decision value has here reached the pre-warning level and pre-warning is activated.
- 4) The decision value is here below the pre-warning level and the pre-warning is automatically reset.

The illustration above is an example of the filtering algorithm for an Analog smoke detector. The step value X is depending on the selected alarm algorithm according to the table in section [SMOKE ALARM ALGORITHMS](#) on page 31.

The polling time (t) is 7 seconds in the EBLOne system.

EXPLANATIONS TO "FILTERING ALGORITHM GRAPH"

In this example, the "week average sensor value" is 1.0 %/m at the "starting point, due to contamination. The "pre-warning" level is therefore adjusted to 3.2 %/m (1.0+2.2) and the "fire alarm level" to 4.0 %/m (1.0+3.0).

Assume that $X=0.5$ (Algorithm N-35)

At start, the sensor values and decision values are approximately equal 1.0. When smoke comes into the detector the sensor values are increasing, and are by the fourth polling approximately 2.7.

Since $2.7-1.0 > X=0.5$, the decision value (1.0) is increased by $X=0.5$ to 1.5.

Next polling the sensor value is approx. 4.5. The decision value (1.5) is increased by $X=0.5$ to 2.0, and so on.

In this example the decision value never comes up to the fire alarm level. When the sensor value is reduced to approx. 2.5, the decision value is set to 3.0, because $3.5-2.5=1.0 > X=0.5$. This results in that the decision value 3.5 is reduced by $X=0.5$ to 3.0, and so on.

SMOULDERING SMOKE ALGORITHM

Read this section in conjunction with the "**smouldering smoke algorithm graph**".

The smoke from a smouldering fire brings the sensor value to rise very slowly, without reaching the fire alarm level. A smouldering fire can last for hours and sometimes days. The smouldering smoke algorithm will detect such a fire at an "early" stage.

The smouldering smoke algorithm is depending on and works in parallel with the selected alarm algorithm. That means that the smouldering smoke algorithm can affect the pre-warning and fire alarm levels.

If the decision value has been over the smouldering level for **7 minutes** (1-2 in the graph), the pre-warning and fire alarm levels will be lowered:

- The pre-warning level will be lowered to a level right between the original pre-warning level and the smouldering level.
- The fire alarm level will be lowered to a level right between the original fire alarm level and the pre-warning level.

If the decision value has reached the pre-warning level, but not the fire alarm level, after additional **90 minutes** (2-4 in the graph), the pre-warning and fire alarm levels will be lowered again:


- The pre-warning level will be lowered to the original smouldering level.
- The fire alarm level will be lowered to the original pre-warning level.

If the decision value continue to rise fire alarm will be activated (5 in the graph).

The smouldering smoke algorithm will be aborted and the prewarning and fire alarm levels restored to their original values if:

- The decision value becomes lower than the smouldering level.
- The decision value, after the 90 minutes, has not reached the prewarning level.
- The decision value, after the 90 minutes and additional 120 minutes, has not reached the fire alarm level.

SMOULDERING SMOKE ALGORITHM GRAPH

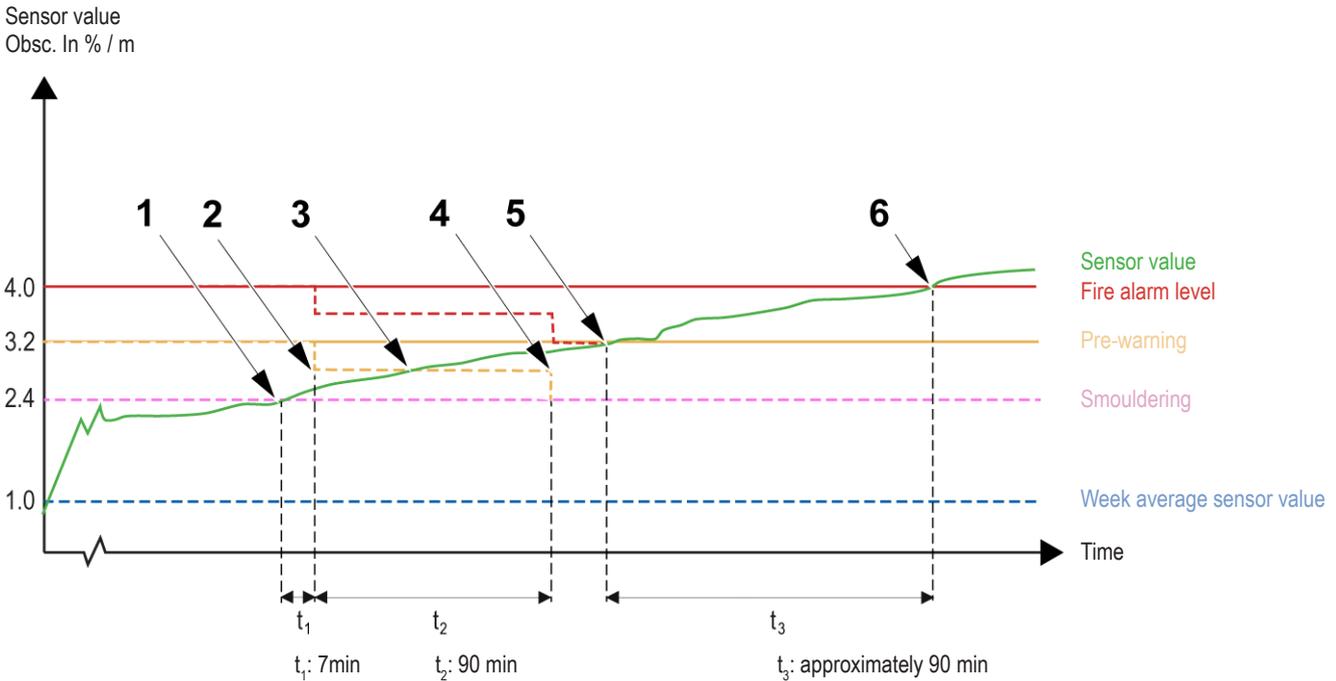

- 1) The decision value has here reached the smouldering level. A 7 minutes timer is started.
- 2) After the 7 minutes the decision value is still over the smouldering level and the pre-warning level and the fire alarm level are lowered. A 90 minutes timer is started.
- 3) The decision value has here reached the pre-warning level and pre-warning is activated.
- 4) After the 90 minutes the decision value is still over the prewarning level but has not reached the fire alarm level. The prewarning level and the fire alarm level are lowered again. A 120 minutes timer is started.
- 5) The decision value has here reached the fire alarm level and fire alarm is activated.
- 6) The decision value has here reached the original fire alarm level, i.e. the fire alarm would have been activated approx. 90 minutes later than with the smouldering algorithm!

Explanation: In this example, the week average sensor value and the decision value are 1 %/m at the "starting point", due to contamination The smouldering level has been adjusted to 2.4 (1.0+1.4), the pre-warning level to 3.2 (1.0+2.2) and the fire alarm level to 4.0 (1.0+3.0).

When a smouldering fire starts, the sensor values and the decision values will increase slowly upwards from 1.0.

PERFORMANCE FACTOR

To find out how the environment is where an analog smoke detector 2840 is mounted, the performance factor can be studied. The performance factor is shown in Sensor value menu  >  >  together with the min. and max. sensor values. All three values should be studied together. (E.g. one or two high sensor values will not result in a high performance factor). The performance factor is calculated for each detector individually.

$$f = \frac{1}{p} \sum_{x=0}^p |M_x - W|$$

f	performance factor
p	number of polls during the last 24 hours
M_x	momentary sensor values for the last 24 hours
W	week average

Each sensor value is compared with the week average sensor value. The absolute difference is saved and each twenty-four hour (at midnight) is an "average value" calculated, i.e. the performance factor.

If the detector is mounted in a very "stable" environment, the performance factor will be low (min. 0 %/m).


If the detector is mounted in a very "unstable" environment, the performance factor will be high (max. 2.55 %/m).

An "unstable" environment can cause nuisance alarms. Perhaps should another type of detector or alarm algorithm be used, or other functions can be added, for example alert annunciation or two-address dependence.

7.3. NORMAL MODE ALGORITHMS – HEAT DETECTORS

This chapter is valid for the analog heat detectors in NORMAL mode.

This chapter is also valid for multi detector with isolator 4400I (always set in Advanced mode) if it is configured as 'Only heat detection' in EBLWin.

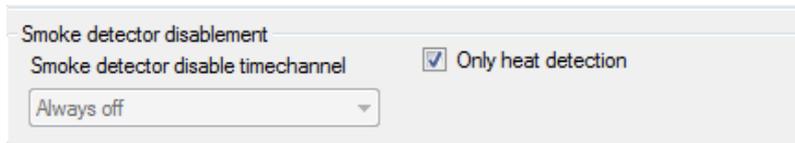

The detectors conforms to a class (see EN54-5:2017, clause 4.2) according to the requirements of the tests specified in EN54-5:2017, clause 5.

When the CIE has picked up a sensor value above the fire alarm level (xx °C) for a detector, the next two values from the same detector also have to be above the fire alarm level to activate fire alarm in the CIE. (This results in an approx. 5 seconds alarm delay). The same is valid for pre-warning except it is a lower level (xx °C) than for fire alarm. (If pre-warning shall be generated or not, is selected in EBLWin – Control unit Properties).

The same is valid for heavy heat alarm except it is a higher level than for fire alarm.

See EBLOne Operating Instructions for more information.

7.3.1. CATEGORY A1 ALGORITHM

Conforms to Category A1.

Typical / max. application temperature 25 / 50 °C.

Max. / min. static response temperature 54 / 65 °C.

The algorithm is as follows:

For a rate-of-rise < 4 °C per minute:

- Fire alarm level is 56 °C.
- Pre-warning level is 46 °C.
- Heavy heat alarm level is 90 °C

Rate-of-rise > 4 °C per minute:

- Fire alarm level is 46 °C.
- Pre-warning level is 36 °C.
- Heavy heat alarm level is 90 °C

The "Category A1 algorithm" will detect a fast temperature rise (rate-of-rise > 4 °C per minute) some minutes earlier than the "Category A2 algorithm".

7.3.2. CATEGORY A2 S ALGORITHM

Conforms to Category A2 S.

Typical / max. application temperature 25 / 50 °C.

Max. / min. static response temperature 54 / 70 °C.

The algorithm is as follows:

- Fire alarm level is 60 °C.
- Pre-warning level is 50 °C.
- Heavy heat alarm level is 90 °C.

7.3.3. CATEGORY B S ALGORITHM

Conforms to Category B S.

Typical / max. application temperature 40 / 50 °C.

Max. / min. static response temperature 69 / 85 °C.

The algorithm is as follows:

- Fire alarm level is 74 °C.
- Pre-warning level is 64 °C.
- Heavy heat alarm level is 90 °C.

The "Category B S algorithm" can be used when the application temperature is "high" (compare with the Category A1 and A2 S algorithms).

8. GATEWAY – RS232 INTERFACE

For more detailed information on the Gateway, see the Technical Description for the units.

5088 can be used for:

- presentation of the actual CIE status in a PC using the web browser Microsoft Edge.
- send e-mails in case of pre-warning, fire alarm, fault, disablement, test mode alarm and/or service signal
- remote control and two-way communication. Ten different users and three access levels
- as a protocol interface to other PC systems etc. The following alternatives are available today:
 - EBL Talk (RS232 or TCP/IP) is an open protocol, used to transmit and present fire alarm information in a separate PC / system.
 - ESPA 4.4.4 (RS232) used to transmit and present fire alarm information in a paging system.
 - SIA (RS232) used to transmit and present fire alarm information in a separate PC application.
 - MODBUS (RS232) used to transmit and present fire alarm information in a separate PC application.
 - OPC UA (RS232 or TCP/IP). OPC UA via RS232 is using FP OPC Server.
- as a protocol interface to a security management system via EBLnet (TCP/IP). EBLnet licence required.
- the application EBL Graphics. EBLnet licence required
- the application EBLWeb Monitor. EBLnet licence required

A Config tool is included in EBLWin. It is used for the configuration, which is downloaded to the Gateway via TCP/IP. Also the software is downloaded via this tool.

QUICK GUIDE FOR DOWNLOADING S/W AND SSD TO GATEWAY

- 1) First create the SSD for the installation. In menu "System" select "User data" and check-mark the user names / passwords that shall be used for the Gateway as well.
- 2) Add a Gateway to a control unit. (CU menu: Add Gateway....)
- 3) Do the Gateway configuration.
- 4) Download the software (firmware) to the Gateway.
- 5) Download the configuration to the Gateway.
- 6) Normally, after 60 seconds the Gateway will automatically restart. If the Gateway is new, do a "power off – power on" restart.

If there is a virtual machine host (Oracle VM VirtualBox, VMWare etc.) installed on the PC, there might be trouble to find the Gateway in the EBLWin. The virtual machine host (can in some cases) make the PC look like it is in a different network.

9. PROGRAMMABLE INPUTS


In the control unit are two programmable, not supervised inputs (I1-I2) available.

The addressable multipurpose I/O unit with isolator 4461 with three programmable inputs can be connected on the COM loop.

Each input is programmed via EBLWin, see dialog boxes below.

Input devices as key cabinet, timers, external faults, and so on are connected to a programmable input, to COM loop unit (4461) inputs and/or to the control unit input (I1-I2).

Technical warnings, external faults, time channels (external and internal), control groups, and zone groups must have unique names.

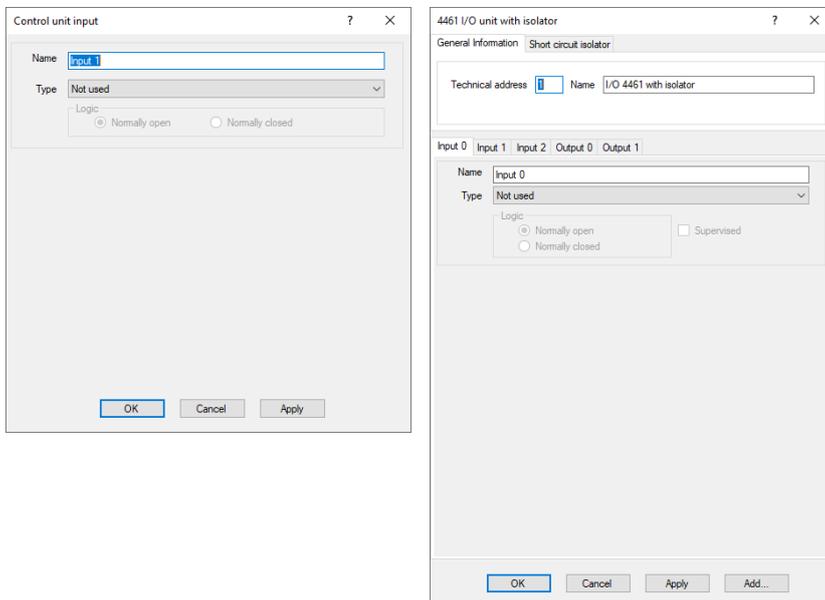

EBLWin "Input" dialog boxes. Different trigger conditions require different additional information. Only the enabled fields can/shall be filled in.

9.1. CONTROL UNIT INPUT I1 - I2

Each input has to be programmed regarding:

- Trigger condition (Triggered by)
- Logic, for example normally open (NO) or normally closed (NC) contacts
- Additional information, depending on the selected trigger condition (Fault number, Zone, Address, Fault message)

9.1.1. USED AS GENERAL INPUT

Input used as general input. All three jumpers on JP1 and JP2 shall be open.

NOT SUPERVISED

Normally open ($R > 100k \text{ Ohm}$)

Normally closed ($R < 10k \text{ Ohm}$)

Activation time: $> 1 \text{ sec.}$

9.1.2. USED AS BALANCED INTERFACE FOR ROUTING EQUIPMENT

Input used in combination with corresponding output to create a balanced line to routing equipment.

See EBLOne Technical description for more information.

9.2. THE 4461 UNIT'S INPUTS Z / IN0, IN1 & IN2

For connections, see Technical description for 4461.

Input Z/ In0:

Input 0 can be used as a general input (In0) –or used as a zone line input (Z).

If used as a zone line input, use 10 uF end-of-line resistance.

Supervision requiring a 33 kΩ end-of-line resistance, and is applicable for (NO) only.

Input in1:

Input 1 is an isolated optocoupler input.

General input In2:

Supervision requiring a 33 kΩ end-of-line resistance, and is applicable for (NO) only.

When used as Fan/Damper control: One Fan/damper phase fault input can be programmed for several fans.

- 1) Program the input with the trigger condition: Fan/damper phase fault. Type a name for the Phase fault.

The input should be connected to the fans when programmed.

- 2) In the properties window for 4461, select the created Phase fault in the Fan/damper phase fault drop down menu.

9.3. THE 4462 UNIT'S INPUTS Z / IN0 & IN2

For connections, see Technical description for 4462.

The inputs Z/In0 and In2 are fixed general inputs.

Supervision requiring a 33 kΩ end-of-line resistance, and is applicable for (NO) only.

9.4. THE 4464 UNIT'S INPUT IN0

For connections, see Technical description for 4464.

The input In0 is a fixed general input.

Supervision requiring a 10 kΩ end-of-line resistance, and is applicable for (NO) only.

9.5. INPUT PROGRAMMING

Input programming is done via EBLWin. Each input has to have an individual Trigger condition ("Type") and Logic. Some inputs can be supervised or not supervised.

9.5.1. TRIGGER CONDITIONS

The following trigger conditions are available (numbering only for the comments below):

- 0) Activate output (specified COM loop unit output)
- 1) Activated fault routing equipment (one input)
- 2) Activated Fire Ventilation (one input)
- 3) Activated key cabinet (one input)
- 4) Activated Routing Equipment (one input)
- 5) Alarm Key Cabinet (one input)
- 6) Alert Annunciation Acknowledge
- 7) Alert Annunciation Reset
- 8) Disable all alarm devices
- 9) Disable all control outputs
- 10) Disable zone
- 11) Door Closing Test Input
- 12) Evacuate (one input)
- 13) External Fault (max. 50)
- 14) External Time Channel (one input per time channel. 49 ext. time channels (e.g. 1-49) are available per system)
- 15) Extinguishing alarm
- 16) Extinguishing start
- 17) Extinguishing stop
- 18) Extinguishing system fault (one input)
- 19) Extinguishing system released (one input)
- 20) Fault Signal External Fuses (one input)
- 21) Fault Signal External Power Supply (one input)
- 22) Fault warning routing equipment fault (one input)
- 23) General Fire (max. 100)
- 24) Interlocking (max. 100)
- 25) Loss of battery charger to external power supply (one input)
- 26) Loss of main power source to external power supply (one input)
- 27) Not used
- 28) NZ Silence switch (one input per system). Only valid for New Zealand convention.
- 29) Pre-warning
- 30) Technical warning (max. 100)
- 31) Zone Line Input Only valid for the Addressable multipurpose I/O unit with isolator 4461 input "In0", used as zone line input (Z).

9.5.2. COMMENTS TO THE TRIGGER CONDITIONS (ABOVE):

- 0) This trigger condition should be used together with a programmable COM loop unit output in order to test / activate the output via this input. The output is active as long as the input is active. This is valid even if the output is disabled.
- 1) "Activated Fault routing equipment" signal (feed-back) to EBLOne. Output with trigger condition "Indication Fault tx Activated" will be activated.
- 2) Activated Ventilation equipment feedback to the EBLOne control unit to light up the LED  "Fire protection equipment activated".
- 3) Output with trigger condition "Activated Key cabinet" will be activated.
- 4) Activated Fire brigade tx feedback to the EBLOne control unit to light up the LED  "Fire brigade tx".
- 5) If the Key cabinet, where the fire brigade store the key(s) to the building, is opened when no fire alarm is activated, will activate a Key cabinet alarm. See EBLOne Operating Instructions for more information.
- 6) Alert annunciation, see chapter [11.11. ALERT ANNUNCIATION](#) on page 81 and EBLOne Operating Instructions for more information.
- 7) Like 6.
- 8) Activated input will disable / re-enable all alarm devices. Possible to re-enable disabled alarm devices via Output types menu  >  > .
- 9) Activated input will disable / re-enable all control outputs. Possible to re-enable disabled control outputs via Output types menu  >  > .
- 10) Activated input will disable / re-enable a whole zone. Possible to re-enable disabled zones via Zone menu  >  > .
- 11) When one or more "Fire door closing" outputs are used, these outputs will be activated for 20 seconds by this trigger condition.
- 12) Controls the Evacuation function, see chapter 11.15. Activated input will light the LED  Evacuate. The input has to be activated as long as the Evacuate function shall be on.
- 13) Ext. fault will activate a fault in EBLOne. A user definable fault message ("Error text") up to 40 characters will be shown.
- 14) External clock, timer, key switch, etc. can disable / re-enable alarm points. The function Alert Annunciation, etc. can be turned on / off by a time channel. Control outputs can be turned on / off by a time channel.
- 15) Activated input will activate a fire alarm (Zone), e.g. a sprinkler zone alarm. This trigger condition is normally used for a 4461 unit monitored Input 0 used as a Zone line input (end-of-line capacitor) and as the type "Extinguishing".
- 16) Used to start a new "countdown", see 17 below. Push button: NO, momentary action. One or more push buttons can be used.
- 17) Output for Extinguishing equipment (type of output = 2) has to have a delayed activation programmed (a "countdown"). This "countdown" will be stopped when an input with trigger condition 17 is activated. To start a new "countdown", see 16 above. Push button info: NO, latching action. One or more push buttons can be used. Manual reset of push button(s).
- 18) Activated input will generate a fault in EBLOne. Output with trigger condition "Extinguishing system fault" will be activated. The following fault message will be shown:
FAULT: Extinguishing system
- 19) Activated Extinguishing equipment feedback to the EBLOne control unit to light up the LED  "Fire protection equipment activated".
- 20) Ext. fuses (for ext. power supply equipment) fault output will activate a fault in the EBLOne system. The following fault message will be shown:
FAULT: External fuses
- 21) Ext. power supply equipment fault output will activate a fault in the EBLOne system. The following fault message will be shown:
FAULT: External power supply
- 22) Activated input (i.e. fault on the fault routing equipment) will generate a fault in EBLOne:
FAULT: Fault warning routing equipment
- 23) A special detector, push button, sprinkler flow switch, etc. can activate a fire alarm in EBLOne. Zone no. and Address (+ user definable alarm text).
- 24) A feed-back from the equipment activated by the corresponding interlocking output. Activated input is shown in Activated interlocking menu  >  > . See also section [11.4. INTERLOCKING FUNCTION](#) on page 71.

- 25) "Loss of the battery charger to external power supply equipment" fault output will activate a fault in the EBLOne system. It will have the same time delay, as set for the Loss of main power source fault for the CIE. The following fault message will be shown:
FAULT: Charging external power supply
- 26) "Loss of main power source to external power supply equipment" fault output will activate a fault in the EBLOne system. It will have the same time delay, as set for the Loss of main power source fault for the CIE. The following fault message will be shown:
FAULT: Mains, external power supply
- 27) Default. Indicating that an input trigger condition is not selected, i.e. the input will not "activate" anything.
- 28) Used for the "outside switch" (i.e. the New Zealand FB silence switch). Turned on: Alarm devices and the CIE buzzer will be disabled. The following fault message will be shown:
FAULT: FB Silence switch
 From Turned on to Turned off: All fire alarms will be isolated, all zones in alarm will be disabled, alarm devices and the CIE buzzer will be re-enabled and the fault will be serviced.
- 29) Pre-warning, e.g. from a High Sensitive Smoke Detector's pre-warning output. Zone no. and Address have to be set to the same as the corresponding fire alarm (from the same detector).
- 30) A technical warning is neither an alarm nor a fault. It is activated as long as the input is activated, which is indicated by the symbol , shown in the Status menu  > . Identified via Technical warning menu  >  > . Output with trigger condition "Technical warning (+name)" will be activated.
- 31) The Addressable multipurpose I/O unit with isolator 4461 monitored Input 0 used as zone line input (Z), i.e. with end-of-line capacitor.

9.6. LOGIC

The logic must be set in the EBLWin dialog box "Input":

- (•) Normally open / normally low. Normally open contact or normally low optocoupler input.
- () Normally closed / normally high. Normally closed contact or normally high optocoupler input.

9.7. TECHNICAL WARNING

For the trigger condition Technical warning, there are additional information be set in the EBLWin dialog box "Input".

The following check boxes are available for each technical warning:

Show on main screen: checked = The activated technical warning will be shown on the main screen

Latched: checked = When an active technical warning is deactivated, it will remain in list with the status "Serviced". A "serviced" technical warning must be reset via Technical warning menu  >  > .

Buzzer: checked = activated technical warning will turn on the CIE buzzer (0.5 / 10 sec.). The buzzer can be silenced. It will be automatically turned on again, if a new technical warning is activated.



Technical warning

Text

Show on main screen Latched Buzzer

10. PROGRAMMABLE OUTPUTS

"Pre-warning", "Fire Alarm" and "Heavy Smoke Alarm" can activate programmable outputs respectively. See section [10.14.6. CONTROL EXPRESSION](#) on page 56. See also EBLOne Operating Instructions MEW03042.

In the control unit are one programmable voltage output (S1).

Addressable Multipurpose I/O units with isolator (4461) with two programmable relay outputs (Re0-Re1) per unit and Addressable 2 voltage outputs unit (4464) can be connected to the COM loop.


There are COM loop units that have no physical outputs, only siren, sounder and light respectively, for example Addressable siren (4487), Addressable sounder base (3379 / 4479), Visual alarm device (4480/4481), Visual alarm device with siren (4482), External indicator (4418), and Light indicator (4383).

Routing equipment is normally connected to the control unit outputs "Fire alarm" (for Fire brigade tx) and "Fault condition" (for Fault tx). (Any programmable output can also be used).

For information on test of outputs, see section [13.3. TEST OF OUTPUTS](#) on page 110.

Each output is programmed via EBLWin, see dialog boxes below.

Max 200 programmable outputs can be used.

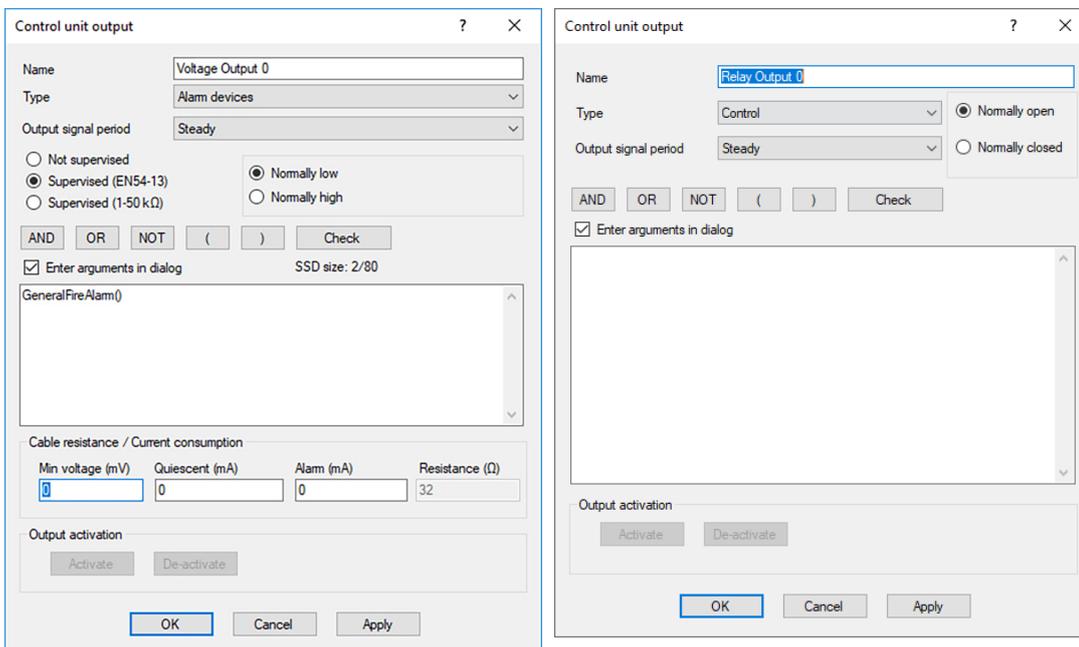

Example: EBLWin Control unit Voltage Output and Relay Output dialog boxes.

10.1. CONTROL UNIT OUTPUT S1

The control unit has one programmable voltage output: It is supervised by default, but via EBLWin it is possible to set the output as not supervised (not monitored). A normally high output is not supervised.

S1 Supervised (monitored) voltage output:

Voltage: min -5 / max 24V DC, Current: min 0 / max. 500 mA (auto-resettable fuse)

10.2. RE0 & RE1 OF THE 4461 UNIT

The unit has two programmable relay outputs: The relay outputs can be used for different control applications.

Relay output (Re0): NC or NO contacts

Relay output (Re1): NC or NO contacts

10.3. VO0 – VO2 OF THE 4464 UNIT

Each 4464 unit has two programmable, supervised voltage outputs. They are supervised by default, but via EBLWin it is possible to set each output individually as not supervised (not monitored). A normally high output is not supervised.

Output VO0 Supervised (monitored) voltage output, 24V DC.

Output VO1 Supervised (monitored) voltage output, 24V DC.

Output VO2 Voltage output, 24 V DC, max. 1A. Normally high. VO2 is a special output, intended for fire door closing, with release magnets, only:

For more information see the Technical Description for 4464.

24 V DC is required from an external power supply unit (4466).

10.4. RE0 OF THE 4418 UNIT

When used in NORMAL mode: The LED is lit at the same time as the LED in the detector/base, that has the same address as the indicator. The LED is always flashing, when activated.

When used in Advanced mode: The LED is programmable by a control expression via EBLWin.

10.5. EXIT LIGHT / EMERGENCY LIGHT

One of the following types shall be selected.

- Exit light (MXE): the LED on Exit light is always lit.
- Exit light (MXER): the Exit light has one programmable output
- Emergency light (MXL): the Emergency light has one programmable output.

10.6. OUTPUT OF THE 3379 UNIT

Each Sounder base 3379 unit has three programmable outputs.
Three priority levels: High priority / Medium priority / Low priority.
Three types of tones: Steady, Intermittent (slow), Intermittent (fast).
Also "High sound output" can be selected for additional 4.5 dB.

10.7. OUTPUT OF THE 4479 UNIT

Each Sounder base 4479 unit has three programmable outputs.
Three priority levels: High priority / Medium priority / Low priority.
Seven types of tones: Continuous, Intermittent, Alternating, German fire (Din 33 404), Dutch fire (NEN 2575), French fire (NFS 32-001), Australian T3.
Also " Low Power SPL" Max 1.5 mA.

10.8. OUTPUT OF THE 4383 UNIT

Each Light indicator 4383 unit has one programmable output:
Output Light indicator (Flash rate 1 Hz.)

10.9. OUTPUT OF THE 4611 UNIT

Each Wireless smoke detector with sounder, 4611, has three programmable outputs.
Three priority levels: High priority / Medium priority / Low priority.
Three types of tones: Steady, Intermittent sweep (0.5 / 0.5 s), Intermittent (0.5 / 0.5 s).

10.10. OUTPUT OF THE 4480 UNIT

Each Addressable wall VAD with isolator unit has one programmable output:
Output frequency Low (Flash rate 0,5 Hz.)
Output frequency High (Flash rate 1 Hz.)
Volume coverage Low (2,5 m)
Volume coverage High (7,5 m)

10.11. OUTPUT OF THE 4481 UNIT

Each Addressable ceiling VAD with isolator unit has one programmable output:
Output frequency Low (Flash rate 0,5 Hz.)
Output frequency High (Flash rate 1 Hz.)
Volume coverage Low (2,5 m)
Volume coverage High (7,5 m)

10.12. OUTPUT OF THE 4482 UNIT

Each Addressable VAD with siren and isolator unit has three programmable outputs for the siren.

Three priority levels: High priority / Medium priority / Low priority.

Seven types of tones: Continuous, Intermittent, Alternating, German fire (Din 33 404), Dutch fire (NEN 2575), French fire (NFS 32-001), Australian T3.

The beacon has one programmable output:

Output frequency Low (Flash rate 0,5 Hz.)

Output frequency High (Flash rate 1 Hz.)

Volume coverage Low (2,5 m)

Volume coverage High (7,5 m)

10.13. OUTPUT OF THE 4487 UNIT

Each Siren 4487 unit has three programmable outputs.

Three priority levels: High priority / Medium priority / Low priority.

Seven types of tones: Continuous, Intermittent, Alternating, German fire (Din 33 404), Dutch fire (NEN 2575), French fire (NFS 32-001), Australian T3.

Connections and more information on unit 3379, 4383, 4611, 4480, 4481, 4482, 4487, see Technical description for each product.

10.14. OUTPUT PROGRAMMING

Output programming is done in EBLWin. See the EBLWin dialog box respectively.

Each output has to be programmed regarding:

- Type of output, for example output for Control, alarm devices
- Logic, for example normally low (default) or normally high (24V DC)

A normally high output cannot be supervised.

- Activation time and type / output signal period (steady, pulse, delay)
- Control expression (one or more trigger conditions)

See also chapter [10. PROGRAMMABLE OUTPUTS](#) on page 47.

10.14.1. OUTPUT TYPE

Some output types can be collective disabled. Some output types can when activated, be indicated by an LED. The following types are available (numbering only for the comments below):

- 0) Control
- 1) Fire Ventilation
- 2) Extinguishing
- 3) Alarm Device
- 4) Routing equipment (Fire brigade tx)
- 5) Control, neutral
- 6) Interlocking
- 7) Alarm device for evacuation

10.14.2. COMMENTS TO THE OUTPUT TYPES:

- 0) Default. General (normal) control output. Controlled by Output types menu  >  >  "Disable / Re-enable output type".
- 1) Used to activate fire ventilation equipment. Controlled by Output types menu  >  >  "Disable / Re-enable output type". Activated output is indicated by the LED  "Fire protection equipment activated". (Feedback from the fire ventilation equipment to a programmable input can instead light up the LED).
- 2) Used to activate extinguishing equipment. Controlled by Output types menu  >  >  Disable / Re-enable output type. Activated output is indicated by the LED  "Fire protection equipment activated". (Feedback from the extinguishing equipment to a programmable input can instead light up the LED).
- 3) Used for sounders and such. Controlled by Output types menu  >  >  Disable / Re-enable Alarm devices and by button "Silence alarm devices" on the control unit front. Output fault / disabled is indicated by LED  "Alarm devices, Fault / Disablements" blinking / continuous on.
- 4) Used for fire brigade tx outputs only. Activated according to its control expression (trigger cond. 43 "Indication Fire brigade tx activated" must not be used). Disabled like the standard control unit "Fire brigade tx" relay output. Activated output is indicated by the LED  "Fire brigade tx activated". (Feedback from the Fire brigade tx to a programmable input can instead light up the LED). Output fault / disabled is indicated by LED  "Fire brigade tx, Fault / Disablements" blinking / continuous on.

When the Alert Annunciation function shall be used, the following trigger condition has to be added to the control expression: "&!Alert Annunciation activated". "&!" is the same as "and not".

- 5) General (normal) control output. No collective disablement and no LED indication.
- 6) This output is controlled by Output types menu  >  >  Disable / Re-enable output type. It can be used together with a corresponding interlocking input. See section [11.4. INTERLOCKING FUNCTION](#) on page 71. Activated output is shown in Activated interlocking menu  >  > .
- 7) Outputs which are programmed with output type 'Alarm device for evacuation' are also activated, supervised and disabled in the same way as an output for alarm devices.
However, they will not be silenced by the button 'Silence alarm devices'. (SBF110:8).

10.14.3. LOGIC

The logic is set in the EBLWin dialog box "Voltage / Relayed Output":

- (•) Normally open / low: Normally open relay contact or normally low voltage output.
- () Normally closed / high: Normally closed relay contact or normally high voltage output (24V DC).

10.14.4. SUPERVISED / NOT SUPERVISED

A voltage output is supervised (default). By unmarking the "Supervised" checkbox the voltage output will be not supervised.

A normally high output cannot be supervised and it will be low for a few seconds during restart of the CIE.


10.14.5. OUTPUT SIGNAL PERIOD

Each output uses an "Output signal period", which controls the output's activation.

In the list (to the left), Steady (continuously) and Intermittent 0.8 s/ 0.8 s are already defined since these alternatives are often used. It is however, possible to define them to something else.

User defined 1 to 8 have to be defined individually.


Select **System** menu / **Output signal period**. Select one of the periods. Press **Edit** to configure.

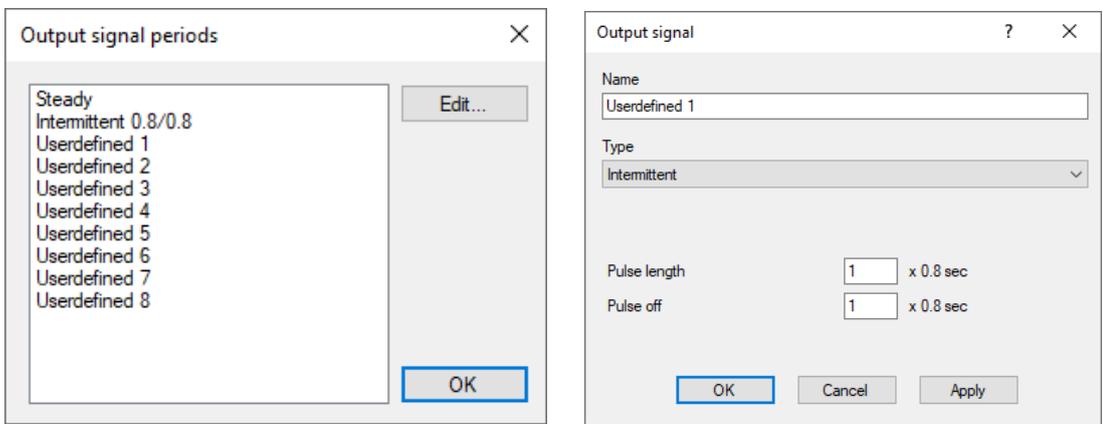

- **Name:** Normally changed to something that describes the output signal (for example "Steady") or what it is meant for (for example "Alarm devices").
- **Types:**
 - 0) Steady (continuous)
 - 1) Intermittent
 - 2) Pulse
 - 3) Steady, Delayed Activation
 - 4) Intermittent, Delayed Activation
 - 5) Pulse, Delayed Activation
 - 6) Steady, Delayed De-Activation
- **Times:**
 - Delay time. Can be set to 0 - 65535 x 0.8 = 0 - 52428 sec.
 - Pulse length time. Can be set to 0 - 65535 x 0.8 = 0 - 52428 sec.
 - Pulse off time. Can be set to 0 - 65535 x 0.8 = 0 - 52428 sec.
 - De-activation time. Can be set to 0 - 65535 x 0.8 = 0 - 52428 sec.

A validate warning will be shown if a value higher than 2250 (30 minutes) is entered.

OUTPUT SIGNAL PERIODS – GRAPH OVERVIEW

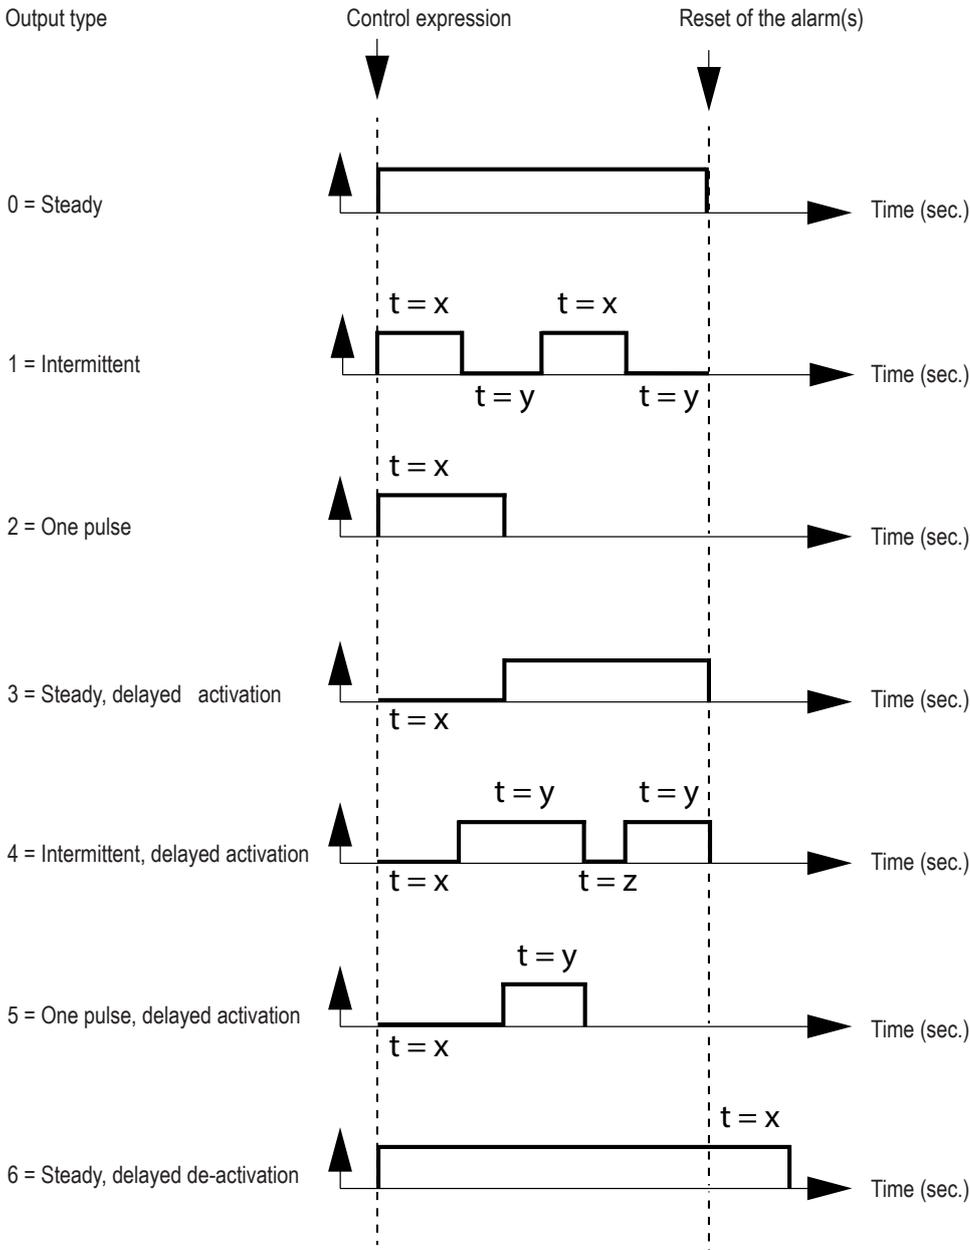

t = x
 t = y x 0,8 sec.
 t = z
 x, y, z = 0 - 65535 x 0,8 sec. = 0 - 52428 sec.

Delay time, Pulse length, Pulse off and/or De-Activation, have to be set for the type respectively.

The different types can be used together with the different outputs according to the table on the next page.

OUTPUT SIGNAL TYPES – TABLE

Output Type	In EBLOne				
	S1	3379, 4479, 4383, 4381, 4611, 4460, 4480, 4481, 4482, 4487	Interlocking	I/O unit 4461	Unit 4464
0 Steady (continuous)	X	X	X	X	X
1 Intermittent	X				XX
2 One pulse	X			XXX	XXXX
3 Steady (continuous), delayed activation	X	X	X	X	X
4 Intermittent, delayed activation	X				XX
5 One pulse, delayed activation	X			XXX	XXXX
6 Steady (continuous), delayed de-activation	X	X	X	X	X

The types that can be used in the "Output signal period" for the programmable output respectively

X = Output type can be used.

XX = Output type can be used but only 0.8s/0.8s.

XXX = Output type can be used but max. 5.6s/5.6s and the pulse max. 5.6s respectively.

XXXX = Output type can be used but the pulse length will always be about 1s.

10.14.6. CONTROL EXPRESSION

A programmable output with no control expression and no control group will be interpreted by the CIE as if it does not exist. If an output is to be used for manual control only, for example an output controlled by input trigger condition 'Activate output', a 'never true' control expression must be programmed. In such a case control expression TimeChannelActivated ('Always off') can be used.

A control expression can either be used to trigger an output directly or be used to trigger a control group which in turn can trigger several outputs. For more information on control groups, see [10.14.12. CONTROL GROUPS](#) on page 66. The control expression is created by so called Boolean algebra. Approximately 1000 trigger conditions can be used in these control expressions.

Trigger conditions (see "Available functions"), logical "Operators" (AND, OR, NOT) and parentheses are used to make a "control expression" containing up to 40 trigger conditions. See also section [10.14.11. CONTROL EXPRESSION EXAMPLES](#) on page 65. A programmable output will be activated as long as its control expression or its control group is true.

In any output dialog box, click the right mouse button in the large white field. Select Alarm, Interlocking, Disabling or Other to open a "Trigger conditions list". Depending on the selected trigger condition, different arguments / data have to be entered. In the figure above the trigger condition "General Fire Alarm" is selected by default.

A comment can be added to each trigger conditions. In the white field, write the comment on a separate line. Start with // and then the comment. Press Enter to start a new line for the trigger condition, for example:

```
// Floor 0
GeneralFireAlarm(1)
```

All outputs that are normally used for alarm devices has "General Fire Alarm" as default control expression. This includes:

- Voltage outputs on the CU
- Output 0 and 1 on the 4464
- High priority output on 3379, 4482, 4487 and 4611
- VAD-output on 4480 and 4482
- Output on 4383
- Output on 4381

10.14.7. TRIGGER CONDITIONS

Some trigger conditions require additional information, see information within parentheses (+nnnnn) after the trigger condition respectively below.

The trigger conditions are divided into four groups as follows:

- Alarm
- Interlocking
- Disablement
- Other

The numbering of the trigger conditions is only for "the comments to the trigger conditions" below:

ALARM

- 1) Fire Alarm Zone (+Zone no.)
- 2) Fire Alarm Zone Address (+Zone no.+Address)
- 3) General Fire Alarm
- 4) Consecutive Fire Alarm (sequence) (+start Zone no. and address +stop Zone no. and address +Quantity)
- 5) Pre Warning Zone (+Zone no.)
- 6) Pre Warning Zone Address (+Zone no.+Address)
- 7) General Pre Warning
- 8) Consecutive Pre Warning (+start Zone no. and address +stop Zone no. and address +Quantity)
- 9) Heavy Smoke Alarm Zone (+Zone no.)
- 10) Heavy Smoke Alarm Zone Address (+Zone no.+Address)
- 11) General Heavy Smoke Alarm
- 12) Consecutive Heavy Smoke Alarm (sequence) (+start Zone no. and address +stop Zone no. and address +Quantity)
- 13) Two Address Dependent Fire Alarm (+Zone no. +Address)
- 14) Two Zone Dependent Fire Alarm (+Zone no.)
- 15) Multiple Detector Alarm
- 16) One Detector Alarm
- 17) Key Cabinet Alarm
- 18) LAA Zone Alarm (+LAA Zone no.)
- 19) Quiet Alarm Zone (+Zone no.)
- 20) Quiet Alarm Zone Address (+Zone no. +Address)
- 21) General Fire Alarm Reset
- 22) Delayed Alarm Zone Address (+Zone no. +Address)
- 23) Delayed Alarm Zone (+Zone no.)
- 24) General Delayed Alarm
- 25) First Zone In Alarm Control Unit (+Zone no. +Control Unit no.)
- 26) First Zone In Alarm Zone Group (+Zone no. +Zone Group name)
- 27) Pre Warning Zone Group (+Zone Group name +Quantity)
- 28) Fire Alarm Zone Group (+Zone Group name +Quantity)
- 29) Heavy Smoke Alarm Zone Group (+Zone Group name +Quantity)
- 30) Fire Alarm Smoke Zone
- 31) Fire Alarm Smoke Zone Address
- 32) General Fire Alarm Smoke
- 33) Consecutive Fire Alarm Smoke
- 34) Fire Alarm Heat Zone
- 35) Fire Alarm Heat Zone Address
- 36) General Fire Alarm Heat
- 37) Consecutive Fire Alarm Heat
- 38) Fire Alarm MCP Zone
- 39) Fire alarm MCP Zone Address
- 40) General Fire Alarm MCP

- 41) Consecutive Fire Alarm MCP
- 42) Fire Alarm Multi Zone
- 43) Fire Alarm Multi Zone Address
- 44) General Fire Alarm Multi
- 45) Consecutive Fire Alarm Multi
- 46) Fire Alarm Other Zone
- 47) Fire Alarm Other Zone Address
- 48) General Fire Alarm Other
- 49) Consecutive Fire Alarm Other

INTERLOCKING

- 50. Interlocking Input Area Activated (+Area no.)
- 51. Interlocking Input Area Point Activated (+Area no. +Point)
- 52. General Interlocking Input Activated
- 53. Consecutive Interlocking Input Activated (sequence) (+start Area no. and point +stop Area no. and point +Quantity)

DISABLEMENT

- 54. Fire Brigade Tx Disabled
- 55. Zone Disabled (+Zone no.)
- 56. Zone Address Disabled (+Zone no. +Address)
- 57. General Zone Address Disabled
- 58. All Control Disabled
- 59. All Alarm Devices Disabled
- 60. General Disablement

OTHER

- 61. Indication Fire Brigade Tx Activated
- 62. Indication Fault Tx Activated
- 63. General Fault
- 64. General Mains Fault
- 65. Reset Pulse Zone Address (+Zone no. +Address) Not valid for the 4464 outputs (VO0-VO2).
- 66. Time Channel Activated (+Time channel name / no.)
- 67. Alert Annunciation Activated
- 68. Alert Annunciation Acknowledged
- 69. Fire Door Closing (+Zone no. +Address)
- 70. General Service Signal
- 71. Fire brigade Tx
- 72. Extinguishing System Fault
- 73. Extinguishing System Released
- 74. Activated Key Cabinet
- 75. Zone Fault (+Zone no.)
- 76. External Fault (+ext. fault)
- 77. Technical Warning (+techn. warning)
- 78. General Technical Warning

10.14.8. COMMENTS TO THE TRIGGER CONDITIONS

ALARM

- 1) Fire alarm. For more information regarding fire alarm, see EBLOne Operating Instructions MEW03042. Output is activated when the specified Zone is in alarm.
- 2) See 1. Output is activated when the specified alarm point is in alarm.
- 3) See 1. Output is activated when any alarm point or Zone is in alarm.
- 4) See 1. Quantity (1-9): "1" means one unit in alarm is required, "2" means two units in alarm are required to activate the output and so on.
- 5) Pre-warning. Output is activated when the specified Zone is over the pre-warning level. The trigger condition is true as long as the pre-warning level is exceeded. It is also true as long as the fire alarm level is exceeded even if the option pre-warning detection is disabled (via EBLWin).
For more information regarding pre-warning, see EBLOne Operating Instructions MEW03042.
- 6) See 5. Output is activated when the specified alarm point is over the pre-warning level.
- 7) See 5. Output is activated when any alarm point or Zone is over the pre-warning level.
- 8) See 5. See also 4. above regarding "Quantity".
- 9) Heavy smoke / heat alarm. For more information regarding heavy smoke / heat alarm, see EBLOne Operating Instructions MEW03042. Output is activated when the specified Zone is over the heavy smoke / heat level.
- 10) See 9. Output is activated when the specified alarm point is over the heavy smoke / heat level.
- 11) See 9. Output is activated when any alarm point is over the heavy smoke / heat level.
- 12) See 9. See also 4. above regarding "Quantity".
- 13) Output is activated when only one address (in two-address dependence) is in fire alarm state. For more information, see EBLOne Operating Instructions MEW03042.
- 14) Output is activated when only one zone (in two-zone dependence) is in fire alarm state. For more information, see EBLOne Operating Instructions MEW03042.
- 15) Output activated when "Multiple detector alarm" is true, i.e. fire alarm type A.
See section [11.1.2. FIRE ALARM TYPE A](#) on page 67.
- 16) Output activated when "One detector alarm" is true, i.e. fire alarm type B.
See section [11.1.1. FIRE ALARM TYPE B](#) on page 67.
- 17) General Key cabinet alarm activated. For more information, see EBLOne Operating Instructions MEW03042.
- 18) Local Alarm Acknowledgement. "Alarm" is activated in the specified LAA zone.
- 19) Output activated for any "Quiet alarm" in the specified zone.
- 20) Output activated for one specified "Quiet alarm" in the specified zone-address.
- 21) This control expression is true (i.e. output activated) for 15 seconds after the last alarm is reset.
- 22) Output is activated during the delay of the specified Zone-Address. (Delay time set in EBLWin, System Properties.)
- 23) Output is activated during the delay of the specified Zone. (Delay time set in EBLWin, System Properties.)
- 24) Output is activated during the delay of any Zone or Zone- Address in the system. (Delay time set in EBLWin, System Properties.)
- 25) Output is activated only if the first alarm is an alarm in the specified Zone in the control unit.
NOTE! This is not valid for manual call points.
- 26) Output is activated only if the first alarm is an alarm in the specified Zone in the specified Zone Group.
- 27) Pre-warning. For more information regarding pre-warning, see EBLOne Operating Instructions MEW03042. Output is activated when any of the alarm points in the specified Zone Group is over the pre-warning level. See also 4. above regarding "Quantity".
- 28) Fire alarm. For more information regarding fire alarm, see EBLOne Operating Instructions MEW03042. Output is activated when any of the alarm points in the specified Zone Group is in alarm. See also 4. Above regarding "Quantity".
- 29) Heavy smoke / heat alarm. For more information regarding heavy smoke / heat alarm, see EBLOne Operating Instructions MEW03042. Output is activated when any of the alarm points in the specified Zone Group is over the heavy smoke / heat level. See also 4. Above regarding "Quantity".
- 30) Fire alarm type smoke. For more information regarding alarm types, see EBLOne Operating Instructions MEW03042. Output is activated when any smoke detector in the specified Zone has generated fire alarm.

- 31) See 30. Output is activated when the specified alarm point of type smoke has generated fire alarm.
- 32) See 30. Output is activated when any alarm point of type smoke has generated fire alarm.
- 33) See 30. See also 4. above regarding "Quantity".
- 34) Fire alarm type heat. For more information regarding alarm types, see EBLOne Operating Instructions MEW03042. Output is activated when any heat detector in the specified Zone has generated fire alarm.
- 35) See 34. Output is activated when the specified alarm point of type heat has generated fire alarm.
- 36) See 34. Output is activated when any alarm point of type heat has generated fire alarm.
- 37) See 34. See also 4. above regarding "Quantity".
- 38) Fire alarm type MCP. Output is activated when any MCP in the specified Zone has generated fire alarm.
- 39) See 38. Output is activated when the specified alarm point of type MCP has generated fire alarm.
- 40) See 38. Output is activated when any alarm point of type MCP has generated fire alarm.
- 41) See 38. See also 4. above regarding "Quantity".
- 42) Fire Alarm type Multi. For more information regarding alarm types, see EBLOne Operating Instructions MEW03042. Output is activated when any multi detector in the specified Zone has generated fire alarm.
- 43) See 42. Output is activated when the specified alarm point of type multi has generated fire alarm.
- 44) See 42. Output is activated when any alarm point of type multi has generated fire alarm.
- 45) See 42. See also 4. above regarding "Quantity".
- 46) Fire Alarm Other. For more information regarding other alarm, see EBLOne Operating Instructions MEW03042. Output is activated when "Fire Alarm Other Zone Address " is true for the specified Zone.
- 47) Output is activated when "Fire Alarm Other Zone Address " is true, i.e. fire alarm type B. See section 11.1.1. FIRE ALARM TYPE B on page 67.
- 48) General Fire Alarm Other. For more information regarding other alarm, see EBLOne Operating Instructions MEW03042. Output is activated when "General Fire Alarm Other " is true.
- 49) Output is activated when any "Consecutive Fire Alarm Other " is true, i.e. fire alarm type B. See section 11.1.1. FIRE ALARM TYPE B on page 67.

INTERLOCKING

- 50) Output activated when one or more interlocking inputs, in the specified interlocking area, are activated.
- 51) Output activated when the interlocking input, in the specified interlocking area/point, is activated.
- 52) Output activated when any interlocking input is activated.
- 53) Output activated when interlocking inputs, in the specified range, are activated (from interlocking area no./point to interlocking area no./point). See also 4. above regarding "Quantity".

DISABLEMENT

- 54) Output activated when any Routing equipment output (Fire brigade tx) is disabled. This is indicated by LED 🟡 "Fire brigade tx, Fault / Disablements".
- 55) Output activated when the specified zone is disabled. The output will not be activated when disabled by time channel.
- 56) Output activated when the specified alarm point (zoneaddress) is disabled. The output will not be activated when disabled by time channel.
- 57) Output activated when any alarm point (zone-address) or zone is disabled.
- 58) The control expression is true (output activated) when all control outputs of the types Control, Fire ventilation and extinguishing are disabled via Output types menu 🏠 > 🚒 > 🚒. This output shall be type Control – neutral.
- 59) The control expression is true (output activated) when all control outputs of type Alarm device in all control units are disabled via Output types menu 🏠 > 🚒 > 🚒. This output shall be type Control – neutral.
- 60) The control expression is true (output activated) when any disablement exists in the system. This is indicated by LED 🟡 "Disablements".

OTHER

- 61) The control expression is true (output activated) when LED  "Fire brigade tx activated" is lit, i.e. when any "Fire brigade tx" output is activated (default) or when a programmable input with trigger cond. "Activated Routing Equipment" is activated. This output will also be activated when the routing equipment test is performed via Monthly test menu  >  > . This trigger condition must not be used for type of output "Routing equipment (Fire brigade tx)". Used for example when an ext. LED "Fire brigade tx" is required.
- 62) The control expression is true (output activated) when the routing equipment output (Fault tx) is activated. This output will also be activated when the routing equipment test is performed via Monthly test menu  >  > .
- 63) Output activated when one or more faults are generated in the system. This is indicated by LED  "Fault".
- 64) Output activated for loss of mains (in a CIE or external power supply 4466).

The output(s) will be activated immediately but the corresponding fault is normally delayed (set via EBLWin).

- 65) The control expression is true (output activated) for 5 seconds, whenever a reset pulse is sent to the specified Zone-Address. The control expression can only be used in the same CIE. as the specified Zone-Address.
- 66) Output activated when the specified time channel is activated.
- 67) Output activated when Alert annunciation alarm is activated (by any alarm point set to activate this function). Valid until the AA alarm is reset or becomes a normal fire alarm. For more information, see EBLOne Operating Instructions MEW03042.
- 68) Output activated when Alert annunciation alarm is activated and acknowledged (by any alarm point set to activate this function). Valid until the AA alarm is reset or becomes a normal fire alarm. For more information, see EBLOne Operating Instructions MEW03042.
- 69) This trigger condition plus the OR operator shall be used for each detector (Zone-Address) controlling a fire door (normally > two detectors). Type of output is normally "Control, neutral".
- 70) Output activated when Service signal is activated (by any sensor).
- 71) The control expression is true (output activated) when the control unit standard output "Fire brigade tx" is activated. Used for example when a standard "Fire brigade tx" voltage output is required. Used with output type Routing equipment (Fire brigade tx).
- 72) Output activated when input trigger condition "Extinguishing system fault" is true.
- 73) Output activated when input trigger condition "Extinguishing system released" is true.
- 74) Output activated when input trigger condition "Activated key cabinet" is true.
- 75) Output activated when one or more faults are generated in the control unit.
- 76) Output activated when the specified external fault is generated.
- 77) Output activated when the specified technical warning is generated.
- 78) Output activated when one or more technical warnings are generated.

10.14.9. LOGICAL OPERATORS

The logical operators available in EBLWin are in priority order:

() parentheses, changes priority order

NOT not-function (inverts), is written NOT in EBLWin

AND and-function, is written AND in EBLWin

OR or-function, is written OR in EBLWin

10.14.10. CONTROL EXPRESSION THEORY

In order to understand the possibilities to create control expressions, here follow some AND, OR, NOT and () examples and also some control expression examples.

AND

a AND b AND c=y

y is true (=1) when all the conditions a, b, c are true, i.e. a=1 and b=1 and c=1 makes y=1. All other combinations makes y=0.

This is also shown in the following table:

a	b	c	y
0	0	0	0
0	0	1	0
0	1	0	0
0	1	1	0
1	0	0	0
1	0	1	0
1	1	0	0
1	1	1	1

OR

$a \text{ OR } b \text{ OR } c = y$

y is true if at least one of the conditions a, b, c is true, i.e. $a=1$ or $b=1$ or $c=1$ makes $y=1$.

This is also shown in the following table:

a	b	c	y
0	0	0	0
0	0	1	1
0	1	0	1
0	1	1	1
1	0	0	1
1	0	1	1
1	1	0	1
1	1	1	1

NOT

Inverts a condition, e.g. NOT b = NOT 0=1.

$a \text{ OR NOT } b \text{ AND } c = y$

This is shown in the following table:

a	b	c	y
0	0	0	0
0	0	1	1
0	1	0	0
0	1	1	0
1	0	0	1
1	0	1	1
1	1	0	1
1	1	1	1

PARENTHESES

Changes priority order.

$a \text{ OR NOT}(b \text{ AND } c) = y$ (This is same as the previous but completed with parentheses.)

This is shown in the following table:

a	b	c	y
0	0	0	1
0	0	1	1
0	1	0	1
0	1	1	0
1	0	0	1
1	0	1	1
1	1	0	1
1	1	1	1

10.14.11. CONTROL EXPRESSION EXAMPLES

The AND operator has priority, i.e. $a \text{ AND } b \text{ OR } c = (a \text{ AND } b) \text{ OR } c$.

This is perhaps more obvious if you write it: $a \cdot b + c$.

This means that: $a \text{ AND } b \text{ OR } c \neq a \text{ AND } (b \text{ OR } c)$.

Here follows some examples (and explanations) to show the principles how to build a control expression with "conditions" and logical operators.

Example 1 Output: Voltage output **S1**

Control expression: Pre Alarm Zone (90)

Explanation: Pre-warning activated in zone no. 90 will activate the output S0.

Example 2 Output: Voltage output **S1**

Control expression: Consecutive Fire Alarm (100,10,100,19,1)

OR

Consecutive Fire Alarm (100,21,100,40,1)


Explanation: Fire alarm activated by one of the alarm points in zone 100 address 10-19 or activated by one of the alarm points in zone 100 address 21-40 will activate the output S1 (i.e. alarm point address 20 in zone 100 will not activate the output S1).

10.14.12. CONTROL GROUPS


An output can be triggered either by its own unique control expression as shown in [10.14.6. CONTROL EXPRESSION](#) on page 56 or by a control group.

The advantage of using control groups is that if there are several outputs that should be triggered by the same control expression, the control expression has only to be written once. It is also easy to change. Furthermore the control group is global and can be used on any output in the system.

The control group is given a name and a control expression:

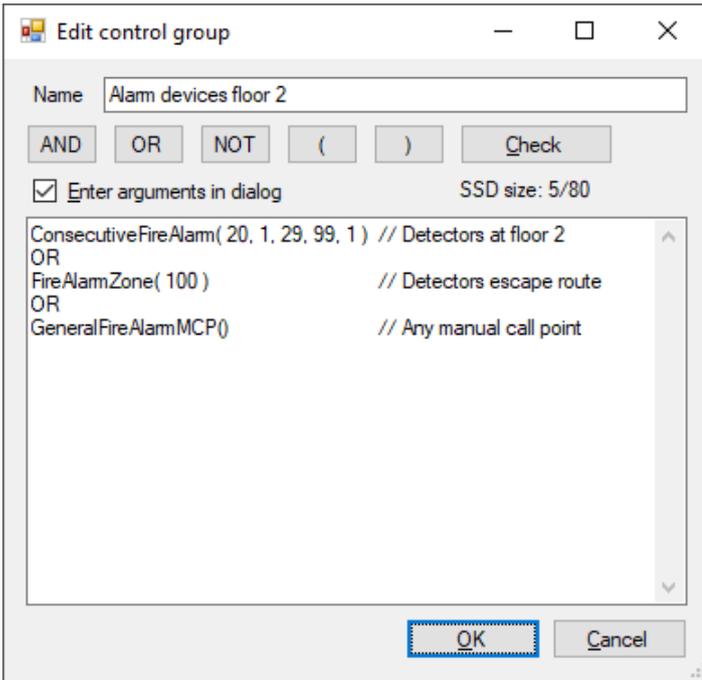

After the control group is programmed it can be used on outputs:

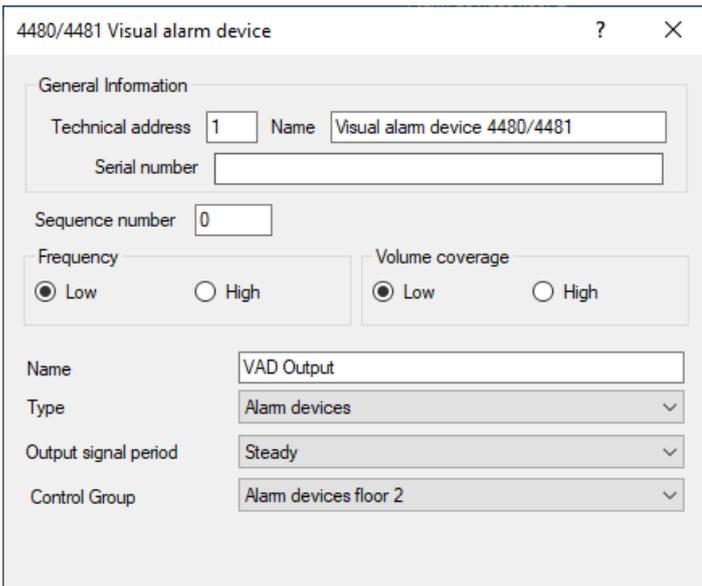

11. FUNCTIONS

11.1. FIRE ALARM

Normally the CIE relay output "Fire alarm" is used for Fire alarm routing equipment (Fire brigade tx). This output is activated for fire alarm from any alarm point or zone line input (General fire alarm).

If the fire alarm routing equipment supports transmission of several fire alarm signals and the alarm receiver supports reception of several fire alarm signals, it is possible to make distinction between type A and type B fire alarm. The alarm receiver can take different actions depending on if it is a type A or B fire alarm.

11.1.1. FIRE ALARM TYPE B

A fire alarm type B will indicate that only one detector is activated, which could be a nuisance alarm.

The output shall be programmed (via EBLWin) as type "Routing equipment" and have the trigger condition "One detector alarm". The output will be activated for fire alarm from one analog addressable smoke, heat or multi detector only, or for fire alarm from a zone line input programmed as type Smoke (B), Heat (B) or Other (B) , or fire alarm from a programmable input programmed as type Smoke (B), Heat (B) or Other (B).

11.1.2. FIRE ALARM TYPE A

If a fire alarm type A, multiple detector alarm, is received, the probability that it is a real fire is high.

The output shall be programmed (via EBLWin) as type "Routing equipment" and have the trigger condition "Multiple detector alarm". The output will be activated for fire alarm from:

- Two or more analog addressable smoke, heat or multi detectors.
- Any manual call point
- Any zone line input programmed as type MCP (A) or Other (A).
- Any programmable input with the trigger condition "General Fire" programmed as type MCP (A) or Other (A).

11.2. ALARM TEXTS

The alarm texts are shown in case of fire alarm. When a fire alarm is activated, the alarm text will be shown in the CIE display. Presentation number (Zone - Address), will also be shown. See also chapter [23. SYSTEM LIMITATIONS](#).

When there is a fault message for an alarm point, zone or zone line input, the alarm text will also be shown.

All alarm texts, up to 40 alphanumeric characters, are created and downloaded with the SSD, via EBLWin.



See also EBLOne Operating Instructions MEW03042, chapter "Fire alarm".

11.2.1. CREATING THE ALARM TEXTS VIA EBLWin

In the EBLWin dialog box for any alarm point, there is a "Text" field where the alarm text for that alarm point can be typed (or edited). The alarm text will be shown in the CIE display when this alarm point has activated fire alarm and also together with the fault message when this alarm point has generated a fault.


TEXT EDITOR

The alarm text can, as an alternative, be typed (or edited) in the EBLWin "Text editor" (**System** menu / **Edit Alarm Texts...**). No matter where the text is typed, it will be shown on both places.

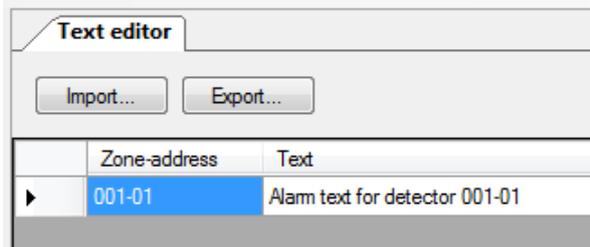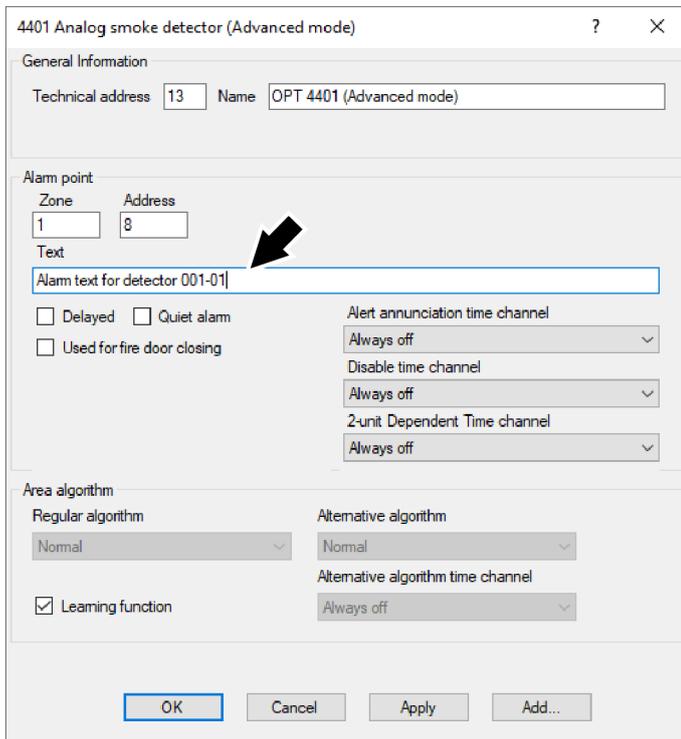


ZONE-ADDRESS COLUMN

This column shows zone-address for the already programmed alarm points (for example 001-01, 001-02, 001-03 and so on). Also I/O unit 4461 zone line inputs programmed with address "00" (i.e. ZZZ – 00).

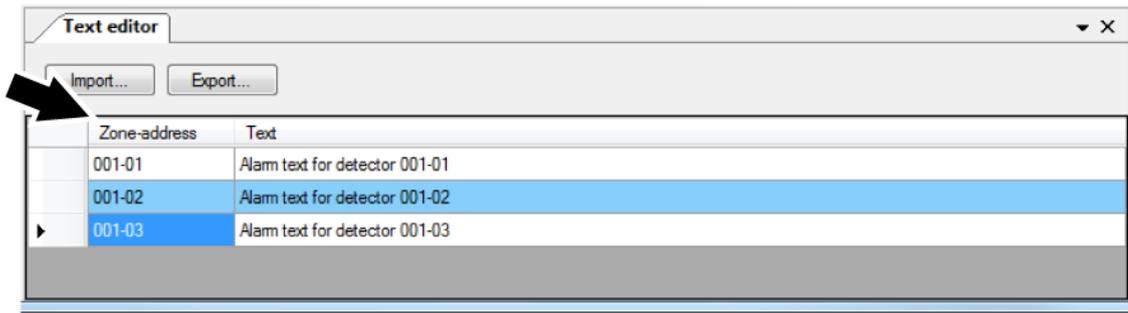

TEXT COLUMN

This column shows already programmed alarm texts. Texts can also be typed / edited.

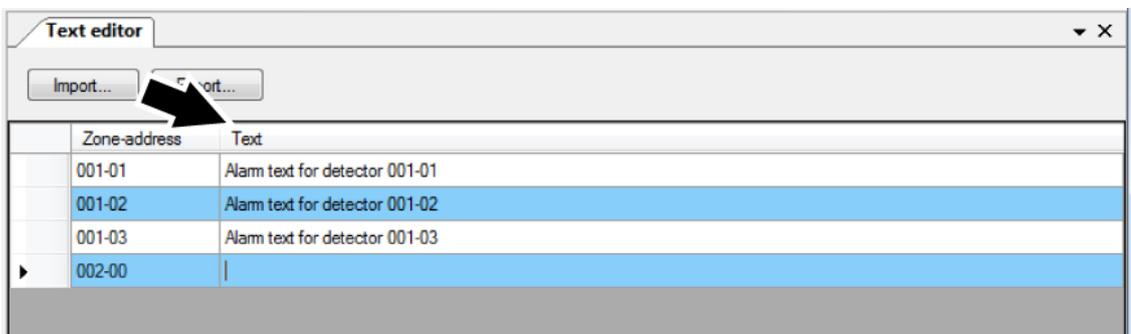

11.3. FIRE DOOR CLOSING

Programmable outputs can be used for fire door closing. Type of output is normally "Control, neutral". One or more alarm points can control the output, i.e. the detectors on both sides of the fire door.

Two possibilities exist, depending on the security requested:

1) Using control expression Fire Door Closing

In case of one of the following "events", the output will be activated, i.e. the fire door will close:

- Fire alarm (any of the detectors controlling the fire door)
- Quiet alarm (any of the detectors controlling the fire door)
- Fire alarm in "Test mode" (any of the detectors controlling the fire door)
- Fault, which means "no answer" from any of the detectors controlling the fire door, For example if the detector is faulty or if there are two breaks or short-circuit on the COM loop.
- Disablement (any of the detectors controlling the fire door, the zone(s) involved or the COM loop involved)
- A definite time every day, if programmed via EBLWin. The output will be activated for 20 seconds.
- Via a programmable input (trigger condition "Door Closing Test Input"). The output will be activated for 20 seconds.

Zone line inputs (via 4580/4461) cannot be used for this type of Fire Door Closing.

2) Using control expressions Fire Alarm and Quiet Alarm

- Fire alarm (any of the detectors controlling the fire door)

The detectors controlling the fire door are 4401; set to Advanced mode, and checkbox "Used for fire door closing" is checked in EBLWin. If the 4401 is disabled, and the checkbox "Used for fire door closing" is checked, the detector generates a quiet alarm when it goes into alarm condition. This quiet alarm will activate the door closing function. When either "Quiet alarm" or "Used for fire door closing" are checked they disables each other mutually.

<input type="checkbox"/> Delayed	<input type="checkbox"/> Quiet alarm
<input checked="" type="checkbox"/> Used for fire door closing	

If a magnet contact is available, is it possible to get a "closed fire door verification" via the Interlocking function. See also section [11.4. INTERLOCKING FUNCTION](#) on page 71.

DOOR RELEASE MAGNETS

In the Panasonic product range, there are no door release magnets. Door release magnets shall always be provided with a "suppression diode" (for example 1N4004) in parallel with the coil, like in the alarm devices.

4461

The I/O unit 4461 can be used for fire door closing, but in case of a power outage the 4461 will not activate the door closing function.

11.4. INTERLOCKING FUNCTION

The interlocking function is used to verify that an output really is activated, i.e. by "combining" an output with an input (feed-back from the equipment controlled by the corresponding interlocking output).

An output of type Interlocking must be used in an interlocking combination. An output of other type can be used in an interlocking combination.

In EBLWin, normally a physical output is used in an interlocking combination, but other outputs can be used as well. A 'Physical output' means outputs on the control unit, loop units 4464, 4461, and so on, but not the 'internal outputs' on for instance a siren.

11.4.1. PROGRAMMING OF INTERLOCKING FUNCTION

EBLWin is used for the programming. Up to 100 Interlocking Combinations can be used in the CIE.

An input and an output can only be used in one combination.

INTERLOCKING OUTPUT

The "Voltage Output" / "Relay Output" dialog boxes are used.

Name: The interlocking combination's presentation number (Area- Point) could be added.

Type: "Interlocking" or any other type can be used.

Output signal period: Type Steady (continuous) or Type Steady, delayed activation can be selected (checked by the "Validate" function in EBLWin). A Control Expression shall be programmed for the output, i.e. for the equipment to be controlled. Activated output will be indicated in Activated interlocking menu  >  > .


INTERLOCKING INPUT

The "Input" dialog box is used.

Name: The interlocking combination's presentation number (Area- Point) could be added.

Type: "Interlocking" shall be selected.

Activated input will be indicated in Activated interlocking menu  >  > .

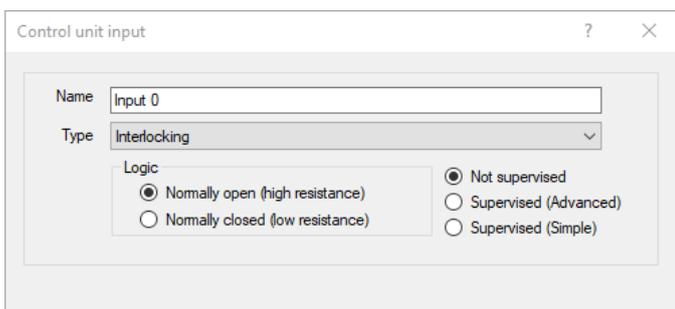

Control unit input

Name: Input 0

Type: Interlocking

Logic:

- Normally open (high resistance)
- Normally closed (low resistance)
- Not supervised
- Supervised (Advanced)
- Supervised (Simple)

INTERLOCKING COMBINATION


One interlocking output and one interlocking input are programmed in an interlocking combination to get the interlocking functions. Select one input and one output in the tree view in the interlocking combination dialog window.

The interlocking outputs and inputs have to be programmed before the programming of an interlocking combination is possible to do.

An interlocking combination can have only an output or only an input programmed, for example when a user definable text message is wanted to indicate an activated output or input.

In the "Interlocking Combination" dialog box, all the outputs and previously programmed inputs are listed in the tree view.

- a) Select one output and one input.
- b) Click OK to create the interlocking combination.

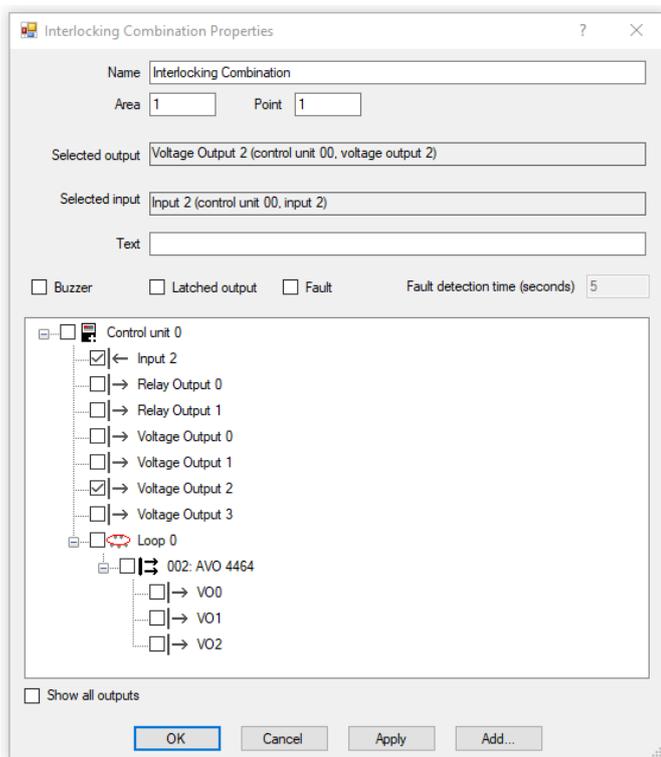

Name: Displayed in the EBLWin Tree and List views. Default is "Interlocking Combination" that can be edited when wanted / required. "Area-Point" will be added in the tree view. "Area-Point" will be shown under "Zone-Address" in the list view.

The Available interlocking outputs list displays all the previous programmed outputs,

Area and Point: Each "Interlocking Combination" is presented as Area-Point (compare with Zone-Address). Area numbers 1-999 are possible and within each Area, Point numbers 1-99 are possible to use.

Selected output: Shows also where the selected output is situated, for example Control unit 0.

Selected input: Shows also where the selected input is situated, for example Control unit 0.

Text = User definable text message to be shown in the menu  >  > .

Buzzer checked = activated interlocking input will turn on the CIE buzzer (0.8 / 0.8 sec.). The buzzer can be silenced. It will be automatically turned on again, if a new interlocking input is activated.

Latched output checked = Output reset has to be performed via Activated interlocking menu  >  > . (Automatically output reset will not take place when the control expression becomes false.).

Fault checked = Fault detection ON.

Fault Detection Time: If the input is not activated within 5-255 seconds after the output is activated after the end of the any delay time, a fault will be generated:

- **FAULT:** Interlocking input AAA/PP

Show all outputs checked = allows the user to select any output in the system. The checkbox is static, i.e. it remembers its value when the dialog is closed and opened for another interlocking combination.

INTERLOCKING INDICATIONS IN THE CIE

One or more activated Interlocking Combinations are listed in the CIE display. Shown on Event tab page.

Disabled interlocking output is indicated by the LED  "Disablement".

More information is found in following sections and in the EBLOne Operating Instructions MEW03042.

INTERLOCKING OUTPUTS AND INPUTS

Interlocking are found in the following menus:

- Activated interlocking outputs / inputs (Activated interlocking menu  >  > )
- Activate / deactivate interlocking output (Activate interlocking menu  >  > )
- Disable / re-enable interlocking output (Interlocking output menu  >  > )

An output used for interlocking can also be activated using the output activate function in menu Activate output menu  >  > .

An output used for interlocking can also be disabled using the output disable function in Output types menu  >  > .

If the output is of type 'Alarm device' or 'Alarm device for evacuation' it cannot be individually disabled.

INTERLOCKING CONTROL EXPRESSIONS

A programmable output control expression can contain "interlocking" trigger conditions ("Functions") numbers 30-33. This means one or more outputs can be activated when one or more interlocking inputs are activated. See section [10.14.6. CONTROL EXPRESSION on page 56](#).

11.5. 2-ZONE / 2-ADDRESS DEPENDENCE

(COINCIDENCE ALARM)

In some premises 2-zone or 2-address dependent fire alarm ("Two unit dependent" in EBLWin) can be used to avoid unwanted / false alarms (nuisance alarms). A time channel can turn on/off this function.

11.5.1. TWO ZONE DEPENDENCE

Each zone in the system can be programmed to be "Two zone dependent" for fire alarm activation. The zone has to belong to one of ten "Two zone dependent" groups (1-10).

Normally, only conventional zones (zone line inputs with conventional detectors) should be used for two-zone dependence. For analog / addressable detectors the two-address (unit) dependence should be used.

Select **System** menu / **Two zone dependence** and this dialog box will open:

The dialog box titled "Two zone dependence" contains ten input fields, numbered 1 through 10. The first field is currently selected and has a text cursor. Below the input fields are two buttons: "OK" and "Cancel".

Ten (1-10) groups are available.

For each group, write the zone numbers for the two-zone dependent zones in the white field/line.

Use comma as punctuation mark between the zone numbers or a sequence for example zone 3-10.

Check so that two or more zones are programmed in each group. A single zone in a group will never be able to activate any fire alarm!

TWO ZONE DEPENDENCE - FUNCTION:

Two or more zones in the same group must be in fire alarm state at the same time to activate fire alarm in the control unit. Fire alarm state is when a fire alarm normally would have been activated in the CIE.

When only one of the zones is in fire alarm state it is indicated in the CIE as follows:

- The buzzer sounds like for pre-warning (0.8 / 5 sec.).
- In the CIE LCD the following information is shown:

First Alarm: 003-04 Alarm number 1 (3)

CO-incidence alarm

Zone	Address
003-04	Smoke

User definable alarm text for 003-04

Latest Alarm: 003-45 3 zones in alarm

Programmable outputs can be activated by trigger condition "Two Zone Dependent Fire Alarm" but no other outputs will be activated.

11.5.2. 2-ADDRESS (-UNIT) DEPENDENCE

Each analog detector and addressable multipurpose I/O unit (4461) monitored Input 0 (Z), can be programmed for 2-unit dependent fire alarm activation. (Heat detectors should not and manual call points must not be 2-unit dependent).

Function:

Two or more units in the same zone have to be in "fire alarm state" at the same time to activate a fire alarm in the control unit. When only one unit is in "fire alarm state" it is indicated in the control unit (CIE) as follows:

- The buzzer sounds like for pre-warning (0.8 / 5 sec.).
- In the CIE LCD the following information is shown:

First Alarm: 003-04		Alarm number 1 (3)
	CO-incidence alarm	
	Zone Address	
	003-04 Smoke	
	User definable alarm text for 003-04	
Latest Alarm: 003-45		3 zones in alarm

Programmable outputs can be activated by trigger condition "Two Address Dependent Fire Alarm" but no other outputs will be activated.

11.5.3. RESET OF 2-ZONE / 2-ADDRESS DEPENDENCE (CO-INCIDENCE ALARM)

The unit / zone having activated a Co-incidence alarm will be latched in this status for at least 5 minutes and then automatically reset.

During these 5 minutes the button "Reset", on the CIE display, can be used to manually reset the Co-incidence alarm.

If, during these 5 minutes, at least one more unit (in the zone) or at least one more zone (in the group) comes into "fire alarm state", the Co-incidence alarm ends and normal fire alarms will be activated in the CIE.

11.6. DELAYED ALARM

In some premises delayed fire alarm activation can be used to avoid unwanted false alarms (nuisance alarms). The delay time will be added at the end when a fire alarm normally would have been activated in the CIE. This function is a violation to the EN54-2 standard.

Each analog or addressable detector, each addressable multipurpose I/O unit with isolator (4461) monitored input (Z) in the system can be programmed (in EBLWin) to delayed fire alarm activation. (Heat detectors should not and manual call points must not have delayed fire alarm activation). The delay time can be set (in EBLWin, System Properties) to 0-300 seconds. Default is 30 seconds and a recommended delay time is < 30 seconds.

Function for an analog or addressable smoke detector: An alarm point has to be in "fire alarm state" all the delay time, in order to activate a fire alarm in the CIE. Fire alarm state is when a fire alarm normally would have been activated in the CIE. If an alarm point goes back to "normal state" during the delay time, the delay time will be reset and start again if/when the alarm point comes in "fire alarm state" again.

Function for each addressable multipurpose I/O unit with isolator (4461) monitored Input 0 (Z):

A zone in "fire alarm state" will be recorded in the CIE but fire alarm will not be activated. When the delay time has run out the zone will be automatically reset and if it still is in "fire alarm state" a fire alarm will now be activated in the CIE.

Programmable outputs can be activated during the delay of a specific alarm point, zone or any alarm point / zone.

11.6.1. ABORT TEMPERATURE DELAY TIME

For the multi detectors 4400I and 4400, the alarm delay time for temperature can be aborted in EBLWin. The heat detection will then be at a static temperature of 56°C, corresponding to a class A1 heat detector. If the temperature exceeds the alarm threshold level, the delay time will be immediately overridden, and a full general alarm will be generated.

The screenshot shows the 'Alarm point' configuration window in EBLWin. It contains the following elements:

- Zone:** Input field containing '1'
- Address:** Input field containing '2'
- Text:** An empty text input field.
- Delayed:** A checked checkbox.
- Abort on heat:** An unchecked checkbox.
- Not alarm:** An unchecked checkbox.
- Alert annunciation time channel:** A dropdown menu currently set to 'Always off'.
- Disable time channel:** A dropdown menu currently set to 'Always off'.

11.7. ALTERNATIVE ALARM ALGORITHM

Each analog smoke- or heat detector can have two alarm algorithms programmed via EBLWin. One Regular alarm algorithm that is normally used, and one alternative alarm algorithm that is turned on/off via a time channel (internal or external).

This means that normal sensitivity can be used during night-time and low sensitivity during daytime. The alternative alarm algorithm is used to reduce nuisance alarms during working hours. The alarm algorithm in use can be read in Sensor values menu



4401 Analog smoke detector (Advanced mode) ? X

General Information

Technical address Name

Alarm point

Zone Address

Text

Delayed Quiet alarm Used for fire door closing

Alert annunciation time channel

Disable time channel

2-unit Dependent Time channel

Area algorithm

Regular algorithm Alternative algorithm

Learning function Alternative algorithm time channel

See also chapters [7. ALGORITHMS FOR ANALOG DETECTORS](#) on page 29.

11.8. EXTERNAL TIME CHANNELS

49 external time channels (e.g. 1-49) can be used to:

- disable and re-enable alarm points
- turn the Alert Annunciation function on/off
- activate programmable control outputs
- turn Alternative alarm algorithm for analog detector types 440x on/off
- turn the 2-unit dependence function on/off

The 49 external time channels are for the whole system. One programmable input with trigger condition/type "External Time Channel" is used for each external time channel, which also is given a "Name". The input is controlled by some external equipment, for example another time system, a key switch, a timer, and so on, with a normally open contact (normally low) or a normally closed contact (normally high). When the input is "activated" the time channel is ON.

You must not use more than one input per time channel. (This is checked in the "Validity check" in EBLWin).

Technical warnings, external faults, time channels (external and internal), control groups, and zone groups must have unique names.

11.9. SELF-VERIFICATION

The analog detectors 440x have a built-in self-verification function. The detector's HW is always supervised by the detector's S/W and CPU. Every minute, each detector will receive a question from the CIE. If the self-verification function has detected any fault it will be reported back to the CIE. A fault will be activated in the system and the following fault message will be shown:

FAULT: Detector xxx-xx
Technical number xxxxxx

11.10. MINIMUM / MAXIMUM SENSOR VALUES

To find out how the environment is, where an analog detector 440x is mounted, the **minimum and maximum sensor values** can be studied. The sensor values are continuously picked up and evaluated by the control unit (CIE) for each detector individually. Every value is checked if it is a new minimum or maximum value for that detector. At midnight every day a memory will be updated and the new minimum and maximum sensor values can be read in Sensor values menu  >  > . That means that the min. / max. sensor values shown, are from the previous day.


For analog smoke detectors the values are shown as XX.X % (obscuration) per meter.
For analog heat detectors the values are shown as XX°C.

11.11. ALERT ANNUNCIATION

In some installations the Alert Annunciation function can be used to avoid unwanted false alarms (nuisance alarms) to the fire brigade. A time channel can turn this function on/off.

Trained personnel are required on site to locate the fire (the room) and take the correct measures/actions depending on if there is a fire or not.

ALERT ANNUNCIATION FUNCTION FLOW CHART:

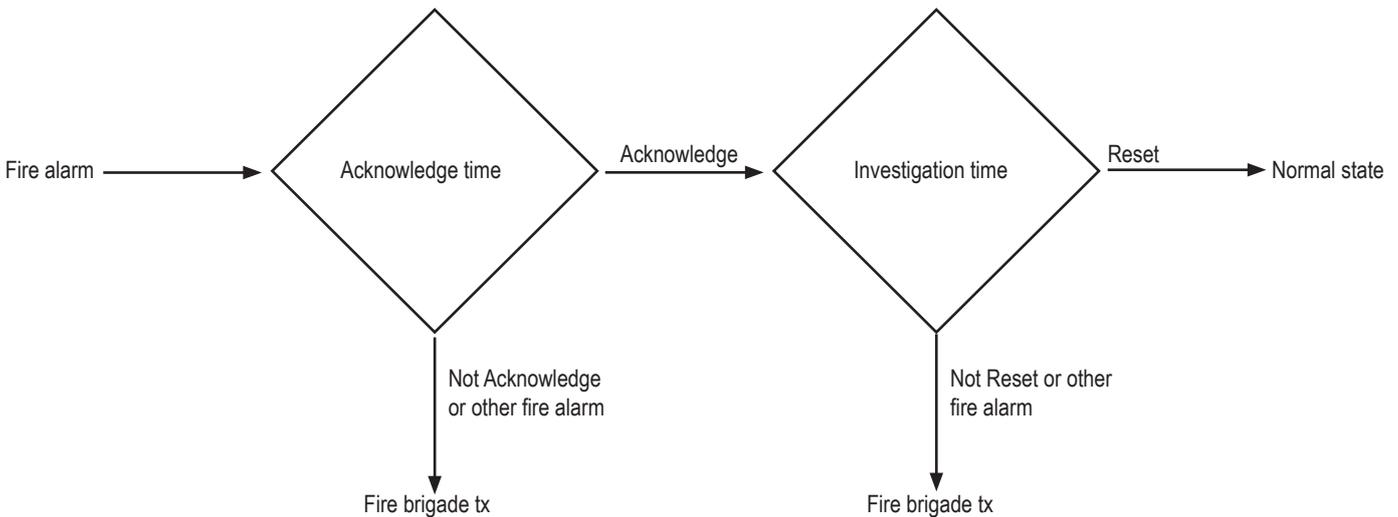

Indications, actions, etc. for an AA alarm are the same as for a normal fire alarm except the output "Fire alarm" for routing equipment (fire brigade tx) in the CIE that will not be activated directly.

Programmable outputs type "Fire brigade tx" will however be activated if not the following is added to the control expression: AND NOT Alert Annunciation Activated.


For detailed information on Alert Annunciation, see EBLOne Operating Instructions MEW03042.

11.12. LOCAL ALARM ACKNOWLEDGEMENT (LAA)

One LAA zone can consist of up to five analog smoke detectors, one LAA buzzer, and one Local Alarm Acknowledgement Unit (LAAU). All connected to a COM loop.

It is possible to connect all detectors in a zone to the LAA zone by entering address 100 in EBLWin LAAU properties window. See Technical description MEW01838.

LOCAL ALARM ACKNOWLEDGEMENT FUNCTION FLOW CHART:

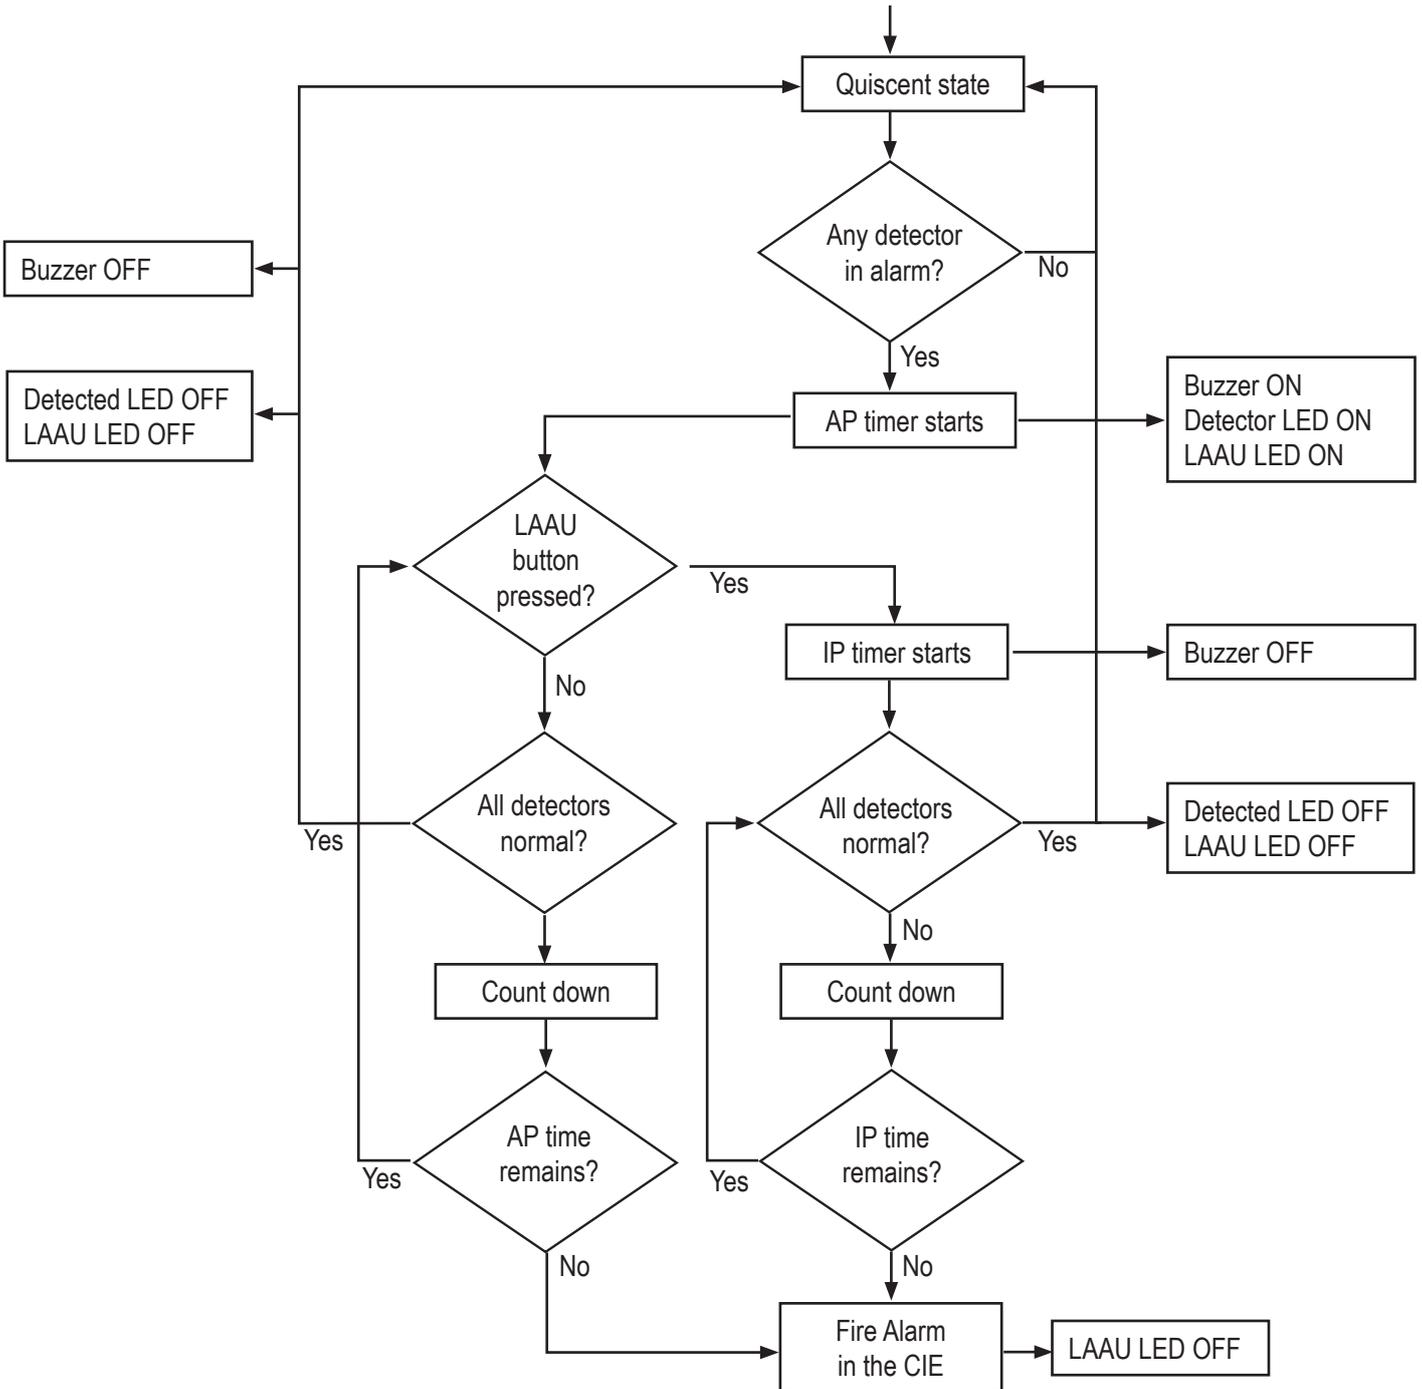

The number of detectors in a Local Alarm Acknowledgement zone can be up to five. They must not be programmed as 2-unit-dependent and not be controlled by the Alert Annunciation function.

The following detectors / alarm points can be used within a LAA zone:

- 4400
- 4400I
- 4401
- 4401I
- 4611

Maximum 100 LAA zones (00-99) per EBLOne CIE.

The LAA buzzer, for example Sounder base 4479, has to be programmed with the trigger condition "LAA zone alarm" (and other trigger conditions).

For detailed information on Local Alarm Acknowledgement, see Technical description MEW01838.

11.13. QUIET ALARM

Quiet alarm can be used to activate outputs based on smoke detected by a smoke detector without activating fire alarm in the system.

Indications and actions:

- Detector LEDs are turned on (i.e. also a connected ext. LED).
- In the CIE display: Quiet alarm detector ZZZ-AA and a user definable alarm text, if programmed.
- Buzzer in the CIE sounding (0.8 / 5 sec.).
- Programmable outputs for quiet alarm. This means any output with a control expression containing trigger conditions "Quiet Alarm Zone" or "Quiet Alarm Zone Address".

Quiet alarms are non-latching, i.e. they will be automatically reset when the alarm point / zone is no longer above alarm level.

Quiet alarm can also be programmed for a 4461 unit "zone line input". In such a case only non-latching detectors can be used.

A detector programmed for quiet alarm can never generate a real fire alarm.

11.14. REAL TIME CLOCK (RTC)

The control unit has an RTC. It is used for (date) and time presentation for fire alarms, faults, event logging and the time channels 2-14.

11.14.1. DAYLIGHT SAVING TIME

The time is automatically changed when the Daylight saving time period starts and stops respectively, if set so in EBLWin. When, is depending on which convention that is used.

This is valid for all conventions other than Australian and New Zealand:

- Forward 1 hour the last Sunday in March, 02:00 → 03:00
- Backward 1 hour the last Sunday in October, 03:00 → 02:00

11.15. EVACUATE

When an input programmed as "Evacuate" is activated, all outputs that are programmed for sounders (type "Alarm devices" and "Alarm devices for evacuation"), will be collectively turned ON (steady).

Evacuate in progress is indicated by LEDs 🚶 "Evacuate". Evacuate in progress is also shown on the event tab page when logged out.

The sounders will remain turned ON until they are turned OFF when the programmable input is de-activated.

The alarm devices (sounders) will always be activated steady (sound continuously) irrespective of the fact that the outputs can be set to anything else for fire alarm, for example intermittent.

For the alarm devices 3379, 4479, 4611, 4480, 4481, 4482, and 4487, the tone with the highest priority level (and type "alarm device") will be automatically selected.

11.16. ZONE GROUPS

Zones can be grouped together in a zone group. The zone group is given a name, for example 'Floor 2', and can then be used in control expressions for activation of outputs.

Example: FireAlarmZoneGroup ('Floor 2').

Max 64 zone groups can be defined. Each zone group can contain an unlimited number of zones, but a zone can only be member of one zone group. A zone group can contain zones from different control units.

Select **System** menu / **Zone group**, and this dialog box will open:

Name	Zones
Zone group 1	
Zone group 2	
Zone group 3	
Zone group 4	
Zone group 5	
Zone group 6	
Zone group 7	
Zone group 8	
Zone group 9	
Zone group 10	
Zone group 11	
Zone group 12	
Zone group 13	
Zone group 14	
Zone group 15	
Zone group 16	
Zone group 17	

Default for all zones is that they do not belong to any zone group.

The default name Zone group 1 - 64 can be changed to a more descriptive name.

It is not possible to give the same name to several zone groups. (This is checked in the "Validity check" in EBLWin).

Technical warnings, external faults, time channels (external and internal), control groups, and zone groups must have unique names.

For each zone group, write the zone numbers for the zones that should be included in the zone group in the white field/line. Use comma as punctuation mark between the zone numbers or a sequence (e.g. xxx-yyy).

A zone can only be a member of one zone group. A validation error will occur if a zone is programmed to more than one zone group. See also section [15.3.7. ZONE GROUPS](#) on page 132.

11.17. CALIBRATION OF SUPERVISED OUTPUTS

Some supervised (monitored) outputs have to be calibrated after the installation. This is done via Calibrate output menu

 >  > .

CIE output S1, programmed as Supervised (4.7 - 50k Ω): E-o-I resistor 33 k Ω . 1 – 5 resistors (33 k Ω) can be used.

Calibration range is 4.7 k Ω – 50 k Ω . If the calibrated value is outside the range respectively or if the actual value differs from the calibrated value \pm a small tolerance, a fault will be generated.

During calibration and restart of the CIE a normally high output will be low for a few seconds.

11.18. SERVICE MODE

When the system/COM loop is in some kind of 'Service mode', it is indicated by:

- LED  "Disablement"
- And a disablement message on the Event tab page

During Service mode, the COM loop is disconnected (disabled), and no alarms or faults can be activated.

The system is in 'Service mode' when at least one of the following is valid:

- A COM loop is disconnected
- A Zone line input is disconnected
- A COM loop is in service mode
- When following functions are in progress: `Check loop`, `Auto address`, or `Replace detectors` `Extend loop`.
- When SSD is being downloaded

11.19. SERVICE SIGNAL

All smoke detectors get contaminated no matter what environment they are mounted in. In some environments it goes faster than in others – depending on type of activity and so on.

Conventional smoke detector: The sensitivity will normally increase in most environments. This can result in nuisance alarms, since all conventional smoke detectors (except 4350/4452) have a fixed fire alarm level. Conventional smoke detectors have no service signal output and have to be replaced on a regular basis, before being too contaminated.

Analog smoke detector: The sensitivity will automatically be constant. The detector is supervised at all times and adapts its fire alarm level in relation to the contamination of the detector. Service signal will be activated at a fixed service level.

See section 7.2.3. WEEK AVERAGE SENSOR VALUE on page 30.

For detector 2840, in **normal** mode, service signal will be activated when the week average sensor value is ≥ 1.8 %/m.

For detectors 4400, 4401, 4401I and 4400I in **advanced mode** the service signal will be activated when the sensitivity compensation value is 2 %/m.

Analog multi detector with CO: For detector 4402, in **normal** mode, the Service signal will be activated when the sensitivity compensation value is 2 %/m or 60 months after CO sensor's production date. For more information, see EBLOne Operating Instructions MEW03042 chapter "Sensors activating Service signal (Service signal menu  >  > )" and "Acknowledge Service signal (Acknowledge service signal menu  >  > )".

11.20. LIFETIME LIMIT SERVICE SIGNAL

In some countries it is necessary to change the smoke detectors after a certain number of years. The new detector 4400I / 4401I keeps track of its install date to support this function. Therefore, a service signal is normally given for a 4400I / 4401I detector older than 25 years.

See the Technical description for 4400I and 4401I.

The lifetime might differ in some conventions.

11.21. FAULT SIGNAL (FAULT CONDITION)

Fault signal, fault messages, fault acknowledge, etc. are described in EBLOne Operating Instructions MEW03042, chapter "Fault". Programmable inputs can be used for external equipment to generate fault signal in the EBLOne CIE. See chapter [9. PROGRAMMABLE INPUTS](#) on page 40. For faults from zones and alarm points also the Alarm text (see below) will be shown.


11.22. CHECK LOOP

The control unit will find all units that are connected on the COM loop. The search is always performed in the A-direction and stops at the first fault found. A fault; a break (cut-off) or short circuit on the loop, will be shown graphically. Repair the fault and press start to resume.

This function can be used after or before the download of SSD.


The latest performed check loop of the COM loop, will be saved to the installation file. When the installation is re-opened, the saved check loop can be viewed even when not logged on to the control unit.

To get the current status of the loop, you must log in and perform a new check loop.

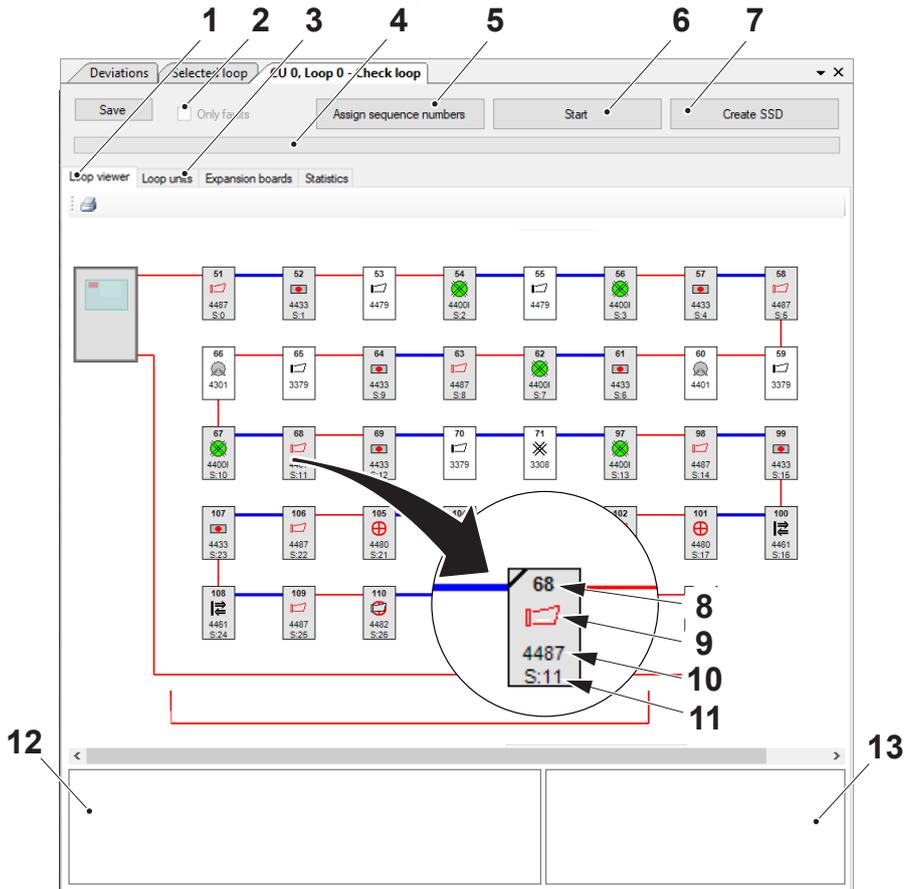


- | | | |
|-----------------------------------|----------------------|--|
| 1) Loop viewer | 6) Start button | 11) Sequence number |
| 2) Only faults | 7) Create SSD button | 12) Area showing missing loop units |
| 3) Loop units | 8) Technical number | 13) Area showing double addressed loop units |
| 4) Progress bar | 9) Type symbol | |
| 5) Assign sequence numbers button | 10) Type number | |

You can hover over the unit in EBLWin to see an explanation of the different numbers.

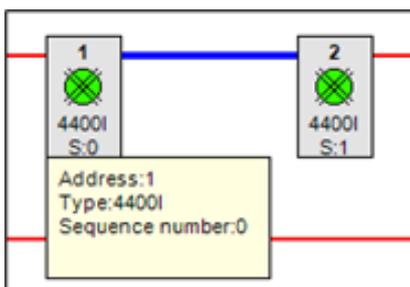

Units containing isolators are numbered (sequence number). These units will always come in correct order.

Units without short circuit isolators are visualized in their correct segment. Segments are divided by units containing short isolator. Segments are indicated by red or blue COM loop colour.

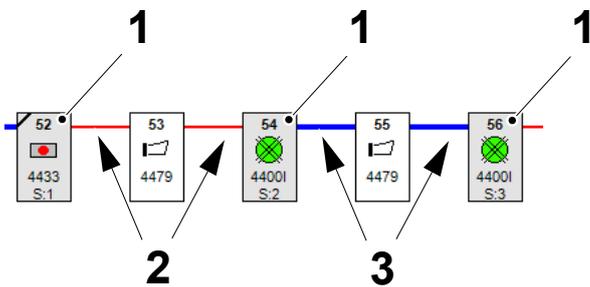

- 1) Loop unit with short circuit isolator
- 2) Segment between ISO 1 and ISO 2
- 3) Segment between ISO 2 and ISO 3

For all units, the address (1-253) and the type of unit will be reported to EBLWin. All differences compared to the installation (SSD) that is open in EBLWin will be listed and can be saved and/or printed out.

Each unit has properties / settings, which can be edited before the download of the SSD to the control unit takes place.

Regarding the wireless system:

It takes up to 5 minutes for the base station (type 4620) to re-establish contact with the wireless detectors after a control unit restart. Do not perform check loop during these 5 minutes. The result will not be correct.


This is valid also when the base station has been set to “register mode”, “un-register mode” or “install mode”.

It is possible to perform check loop on all COM loops at the same time.

During check loop the COM loop will be disabled. See section [11.18. SERVICE MODE](#) on page 87.

11.22.1. SUB-LOOP

Each SUB-loop is shown below the COM loop.

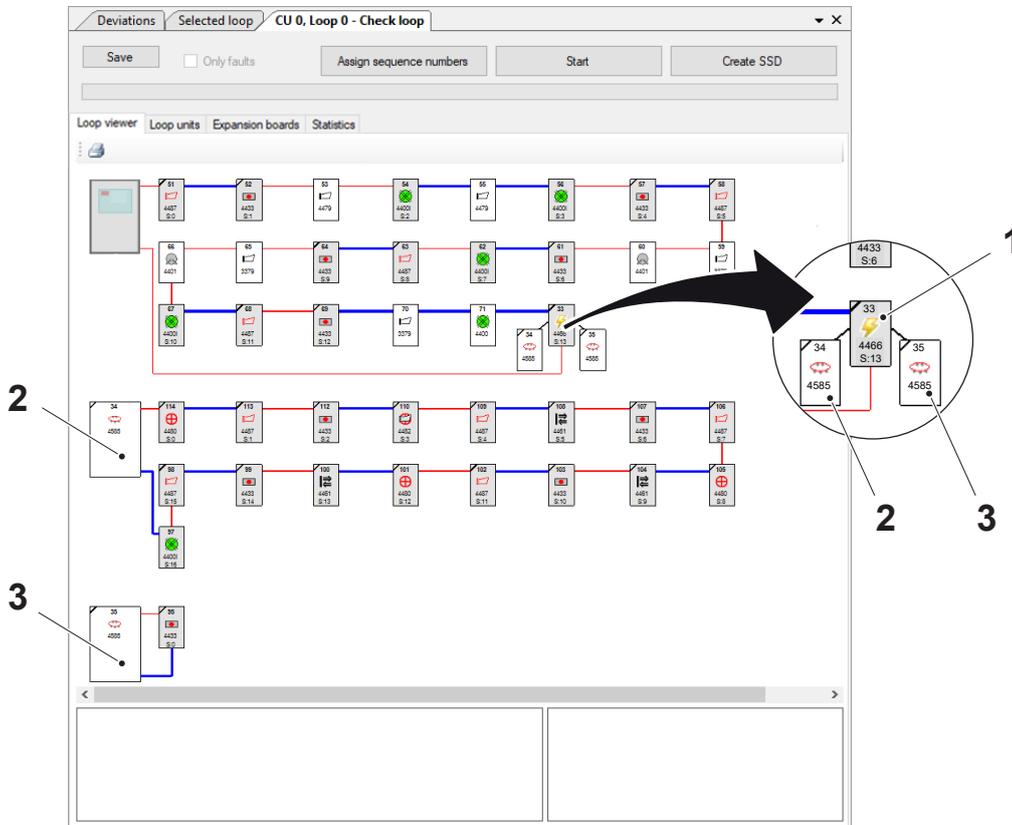


- 1) 4466
- 2) SUB-loop 0
- 3) SUB-loop 1

It is not possible to perform check loop on only a SUB-loop. Check loop is always performed on the main loop and any SUB-loops are included.


11.22.2. CHECK LOOP OK

When the check loop function is finalized without errors:

The pop up dialog window 'Check loop completed successfully' is shown.

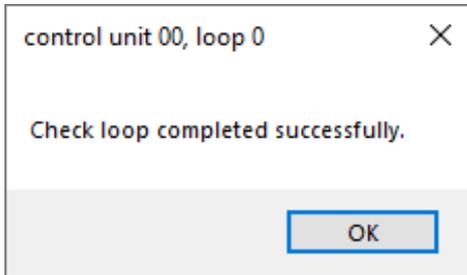

'Missing loop units' area is empty. 'Double addressed loop units' area is empty. In the Loop units' tab, all units will be signed as 'OK'.

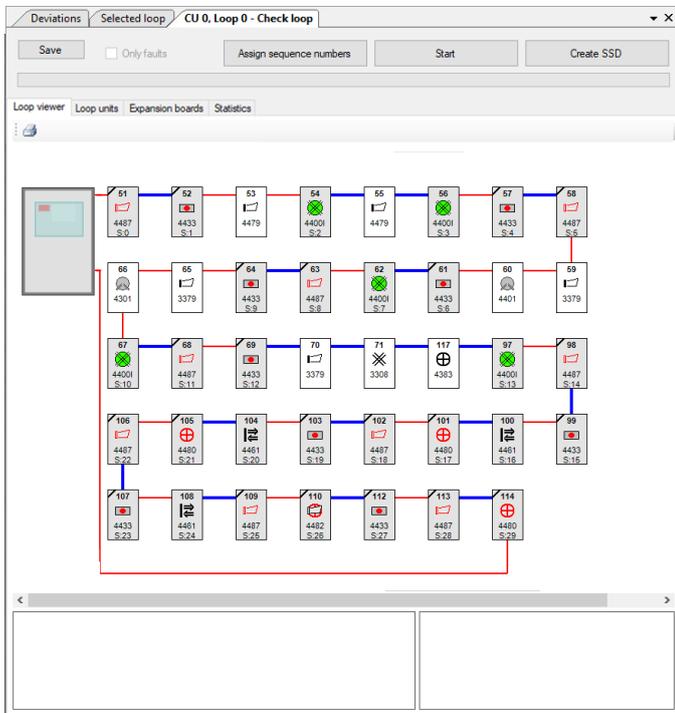


A screenshot of the "Loop viewer" tab showing a detailed table of loop units. The table has the following columns: Technical number, Sequence number, Serial number, Document, Location, Loop, and Result. The table contains 26 rows of data, all of which show a "Result" of "Ok".

Technical number	Sequence number	Serial number	Document	Location	Loop	Result
000051	0	1841 5F 0051	051: Siren with isolator 4...	Loop	051: Siren with isolator 44...	Ok
000052	1	1841 14 0052	052: MCP 4433/4439 [0]	Loop	052: MCP 4433/4439 [00]	Ok
000053			053: ASB 4479	Loop	053: ASB 4479	Ok
000054	2	604303123015421	054: AMD 4400 (Advanc...	Loop	054: AMD 4400 (Advanc...	Ok
000055			055: ASB 4479	Loop	055: ASB 4479	Ok
000056	3	604303123015421	056: AMD 4400 (Advanc...	Loop	056: AMD 4400 (Advanc...	Ok
000057	4	1841 14 0057	057: MCP 4433/4439 [0]	Loop	057: MCP 4433/4439 [00]	Ok
000058	5	1841 5F 0058	058: Siren with isolator 4...	Loop	058: Siren with isolator 44...	Ok
000059			059: ASB 3379	Loop	059: ASB 3379	Ok
000060			060: OPT 4401 (Advanc...	Loop	060: OPT 4401 (Advanc...	Ok
000061	6	1841 14 0061	061: MCP 4433/4439 [0]	Loop	061: MCP 4433/4439 [00]	Ok
000062	7	604303123015421	062: AMD 4400 (Advanc...	Loop	062: AMD 4400 (Advanc...	Ok
000063	8	1841 5F 0063	063: Siren with isolator 4...	Loop	063: Siren with isolator 44...	Ok
000064	9	1841 14 0064	064: MCP 4433/4439 [0]	Loop	064: MCP 4433/4439 [00]	Ok
000065			065: ASB 3379	Loop	065: ASB 3379	Ok
000066			066: OPT 4301/4401/28	Loop	066: OPT 4301/4401/28	Ok
000067	10	604303123015421	067: AMD 4400 (Advanc...	Loop	067: AMD 4400 (Advanc...	Ok
000068	11	1841 5F 0068	068: Siren with isolator 4...	Loop	068: Siren with isolator 44...	Ok
000069	12	1841 14 0069	069: MCP 4433/4439 [0]	Loop	069: MCP 4433/4439 [00]	Ok
000070			070: ASB 3379	Loop	070: ASB 3379	Ok
000071			071: AMD 3308/3309/2	Loop	071: AMD 3308/3309/28	Ok
000097	13	604303123015421	097: AMD 4400 (Advanc...	Loop	097: AMD 4400 (Advanc...	Ok
000098	14	1841 5F 0098	098: Siren with isolator 4...	Loop	098: Siren with isolator 44...	Ok
000099	15	1841 14 0099	099: MCP 4433/4439 [0]	Loop	099: MCP 4433/4439 [00]	Ok
000100	16	1841 20 0100	100: I/O 4461 with isolator	Loop	100: I/O 4461 with isolator	Ok
000101	17	1841 5D 0101	101: Visual alarm device	Loop	101: Visual alarm device	Ok
000102	18	1841 5F 0102	102: Siren with isolator 4...	Loop	102: Siren with isolator 44...	Ok
000103	19	1841 14 0103	103: MCP 4433/4439 [0]	Loop	103: MCP 4433/4439 [00]	Ok
000104	20	1841 20 0104	104: I/O 4461 with isolator	Loop	104: I/O 4461 with isolator	Ok
000105	21	1841 5D 0105	105: Visual alarm device	Loop	105: Visual alarm device	Ok
000106	22	1841 5F 0106	106: Siren with isolator 4...	Loop	106: Siren with isolator 44...	Ok
000107	23	1841 14 0107	107: MCP 4433/4439 [0]	Loop	107: MCP 4433/4439 [00]	Ok
000108	24	1841 20 0108	108: I/O 4461 with isolator	Loop	108: I/O 4461 with isolator	Ok
000109	25	1841 5F 0109	109: Siren with isolator 4...	Loop	109: Siren with isolator 44...	Ok
000110	26	1841 5E 0110	110: Visual alarm device	Loop	110: Visual alarm device	Ok

11.22.3. LOOP VIEWER

Graphic view of the COM loop.

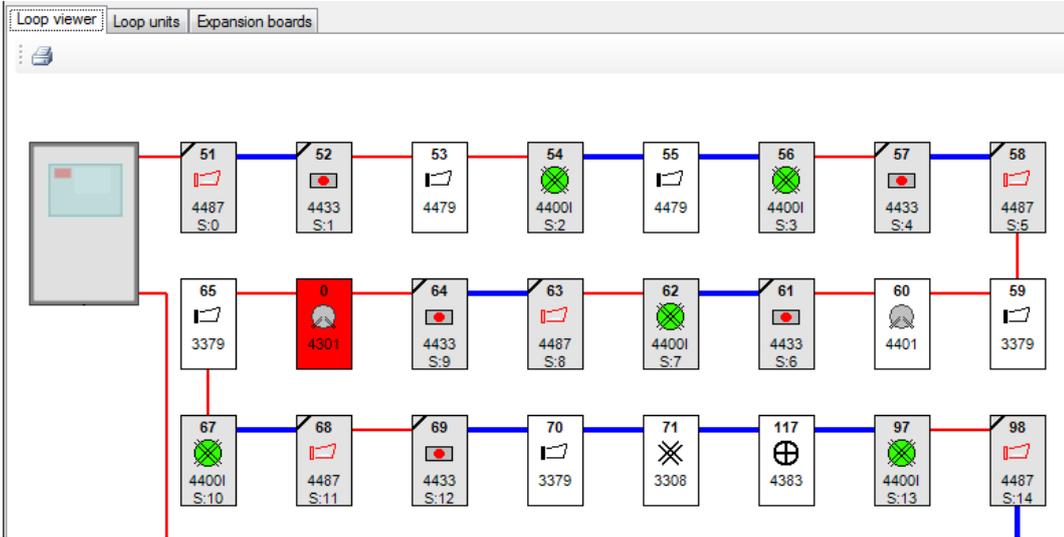

11.22.4. LOOP UNITS

List view of the COM loop

Technical number	Sequence number	Serial number	Document	Location	Loop	Location	Result
000051	0	1841 5F 0051	051: Siren with isolator 4...	Loop	051: Siren with isolator 44...	Loop	Ok
000052	1	1841 14 0052	052: MCP 4433/4439 [0...	Loop	052: MCP 4433/4439 [00...	Loop	Ok
000053			053: ASB 4479	Loop	053: ASB 4479	Loop	Ok
000054	2	604303123D15421	054: AMD 4400 (Advanc...	Loop	054: AMD 4400 (Advanc...	Loop	Ok
000055			055: ASB 4479	Loop	055: ASB 4479	Loop	Ok
000056	3	604303123D15421	056: AMD 4400 (Advanc...	Loop	056: AMD 4400 (Advanc...	Loop	Ok
000057	4	1841 14 0057	057: MCP 4433/4439 [0...	Loop	057: MCP 4433/4439 [00...	Loop	Ok
000058	5	1841 5F 0058	058: Siren with isolator 4...	Loop	058: Siren with isolator 44...	Loop	Ok
000059			059: ASB 3379	Loop	059: ASB 3379	Loop	Ok
000060			060: OPT 4401 (Advanc...	Loop	060: OPT 4401 (Advanc...	Loop	Ok
000061	6	1841 14 0061	061: MCP 4433/4439 [0...	Loop	061: MCP 4433/4439 [00...	Loop	Ok
000062	7	604303123D15421	062: AMD 4400 (Advanc...	Loop	062: AMD 4400 (Advanc...	Loop	Ok
000063	8	1841 5F 0063	063: Siren with isolator 4...	Loop	063: Siren with isolator 44...	Loop	Ok
000064	9	1841 14 0064	064: MCP 4433/4439 [0...	Loop	064: MCP 4433/4439 [00...	Loop	Ok
000065			065: ASB 3379	Loop	065: ASB 3379	Loop	Ok
000066			066: OPT 4301/4401/28...	Loop	066: OPT 4301/4401/28...	Loop	Ok
000067	10	604303123D15421	067: AMD 4400 (Advanc...	Loop	067: AMD 4400 (Advanc...	Loop	Ok

It is possible to save the result of 'check loop' as a HTML file in the "loop units"-tab (list view)

11.22.5. STATISTICS

Statistics for communication can be used during commissioning, service, and so on.

Loop viewer Loop units Expansion boards Statistics		
Get		
▶	Number of polls	0
	Number of parity faults	0 (0.00 %)
	Number of bit faults	0 (0.00 %)
	Number of no reply faults	0 (0.00 %)
	Number of bit length faults	0 (0.00 %)

When check loop is performed on the COM loop, the statistics for communication will be shown in 'Statistics' tab. It is possible to view, save and print all loop statistics for one loop.

11.22.6. ONLY FAULTS

When 'Only faults' is checked, the list view in "loop units"-tab will show only faults. Units that are OK are not included in the list.

11.22.7. ASSIGN SEQUENCE NUMBERS

Assign sequence numbers button will correct the sequence numbers in the SSD so that they correspond to the real loop. This button should only be used when there are no other faults on the loop.

11.22.8. START


Start the check loop function again. The function can be performed on all COM loops simultaneously, started one after another.

11.22.9. CREATE SSD

The button 'Create SSD' adds units that are on the loop but not in the SSD. It will remove units that are in the SSD but not on the loop, and changes units that are wrong type. It will also correct any wrong sequence numbers and/or and wrong serial numbers. The button can only be used when there were no fatal faults found (open/short circuit etc.).


11.22.10. FAULTS - CHECK LOOP

Faults in EBLWin, loop units tab:

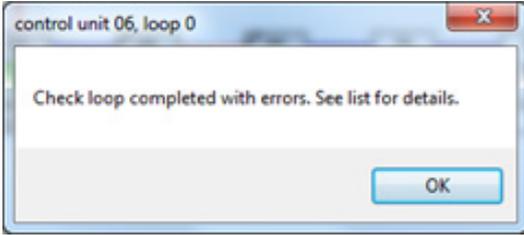


MULTIPLE ISOLATORS IN SAME SEGMENT

This fault will occur if there is a branch with isolator units on the COM loop. The system finds two isolators at the same time, and don't know which way to go further.

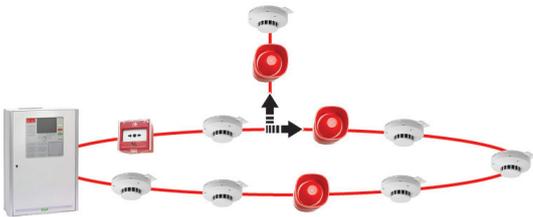

The segment with multiple short circuit isolators is graphically indicated with dashed/dotted line. The rest of the loop units will appear in the 'Missing loop units' area.

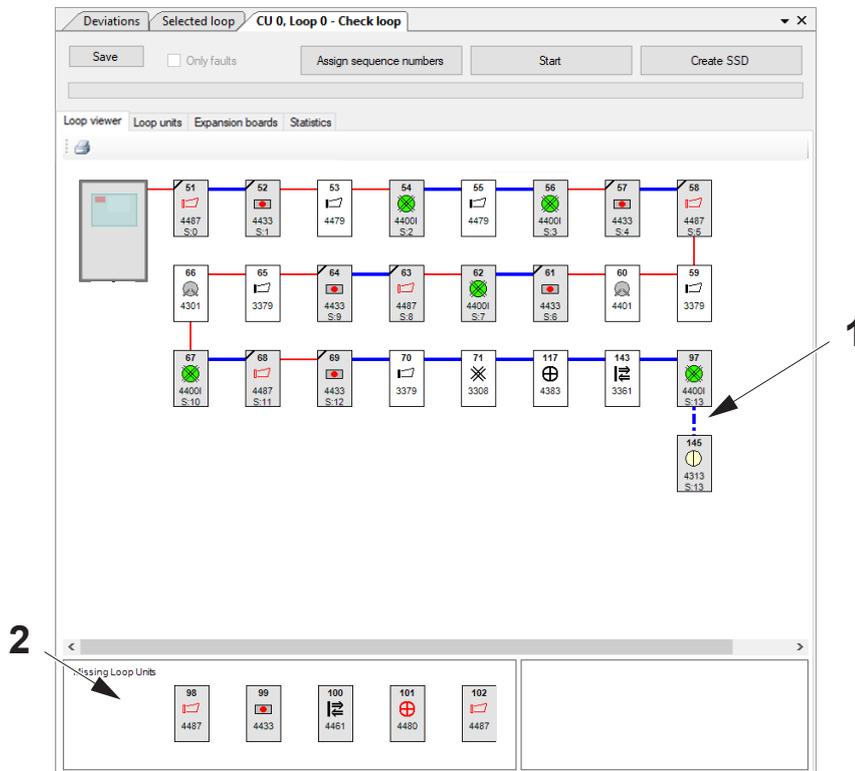


- 1) Segment with multiple short circuit isolators
- 2) 'Missing loop units' area

UNEXPECTED REPLY

The system has found a unit which is not included in the SSD.

MISSING LOOP UNITS

The system has not found a unit which is included in the SSD.

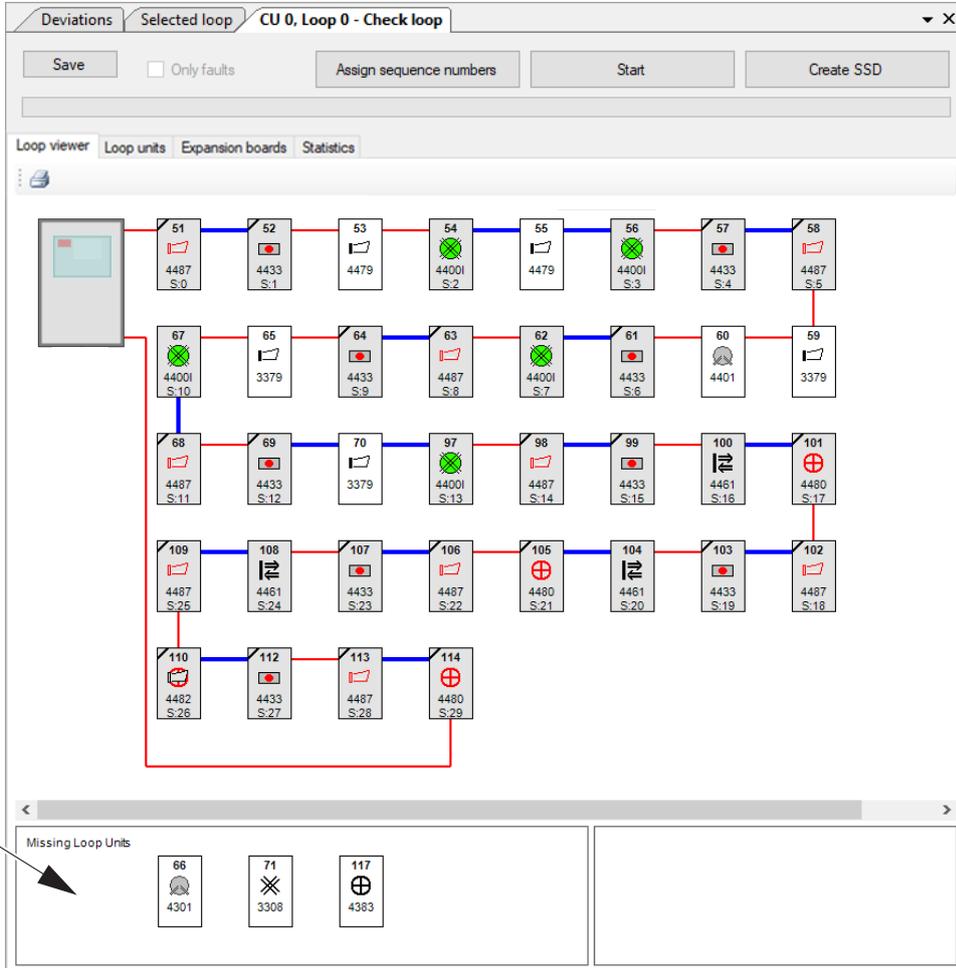

1) 'Missing loop units' area

In the 'Loop units' tab, all units missing will be put in the bottom of the list and signed as 'Missing'.

060110	26	1737 5C 0001	Visual alarm device with sr...	Visual alarm device with sr...	Ok
060112	27	1737 14 0009	MCP 4433/4439	MCP 4433/4439	Ok
060113	28	1737 5F 0007	Siren with isolator 4487	Siren with isolator 4487	Ok
060114	29	1737 5D 0003	Visual alarm device 4480/4...	Visual alarm device 4480/4...	Ok
060066			OPT 4301/4401/2840 (Nor...		Missing
060071			AHD 3308/3309/2841		Missing
060117			LI 4383		Missing

WRONG TYPE

The unit is programmed as another type in the SSD.

WRONG SEQUENCE NUMBER


Pop up dialog "Check completed with errors" will appear. Correct unit but wrong sequence number. Go to loop units tab for details. To automatically correct the faulty sequence numbers, press button 'Assign sequence numbers'.

WRONG SERIAL NUMBER

The loop unit is changed. Press 'Create SSD' to update the data base.

ADDRESS ZERO

The loop unit was not addressed during manual addressing procedure. It still has factory setting.

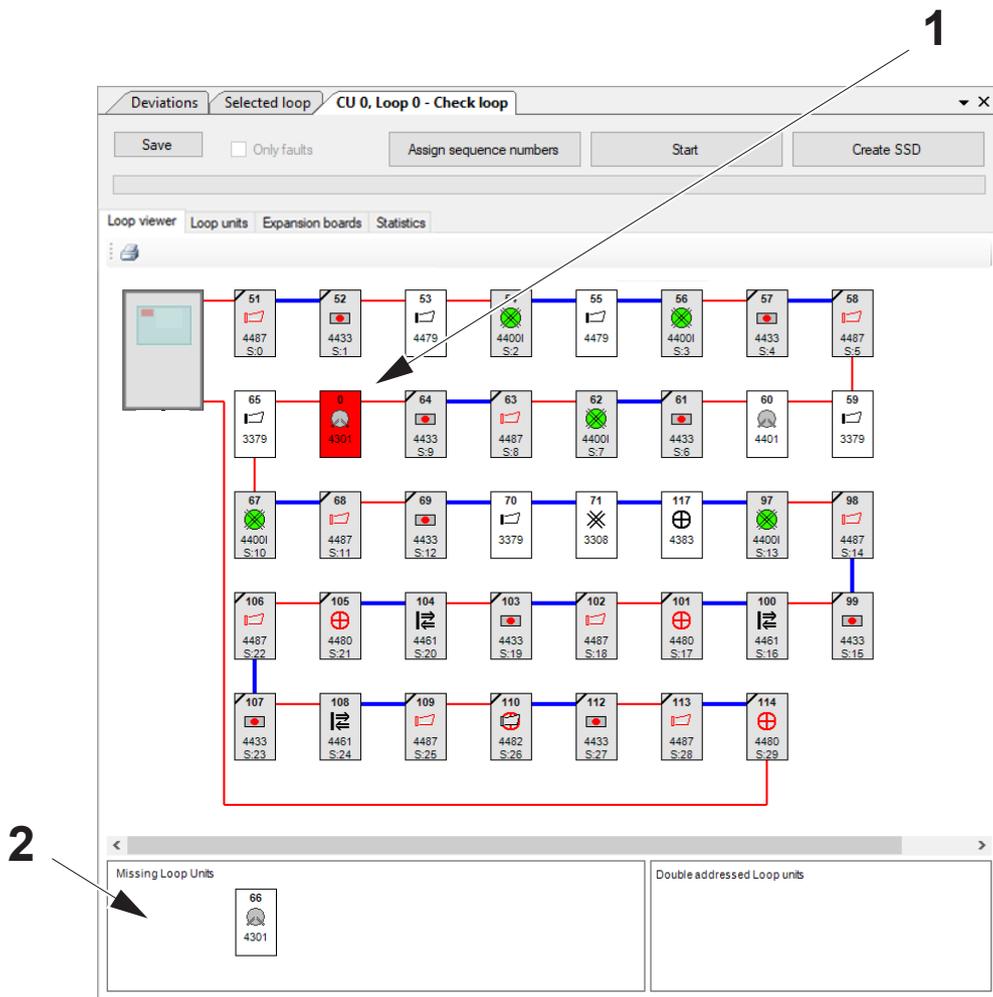

- 1) Red color indicating not addressed unit
- 2) 'Missing loop units' area

UNKNOWN TYPE OF UNIT


The type cannot be identified because it is an old type or a faulty unit.

UNKNOWN UNIT / UNKNOWN ADDRESS

The unit is an unknown type of unit, see above. It has also the same address as another unit on the COM loop. This can also be a case of bad COM loop communication.

DOUBLE ADDRESS

A unit has got the same address as another unit on the COM loop.

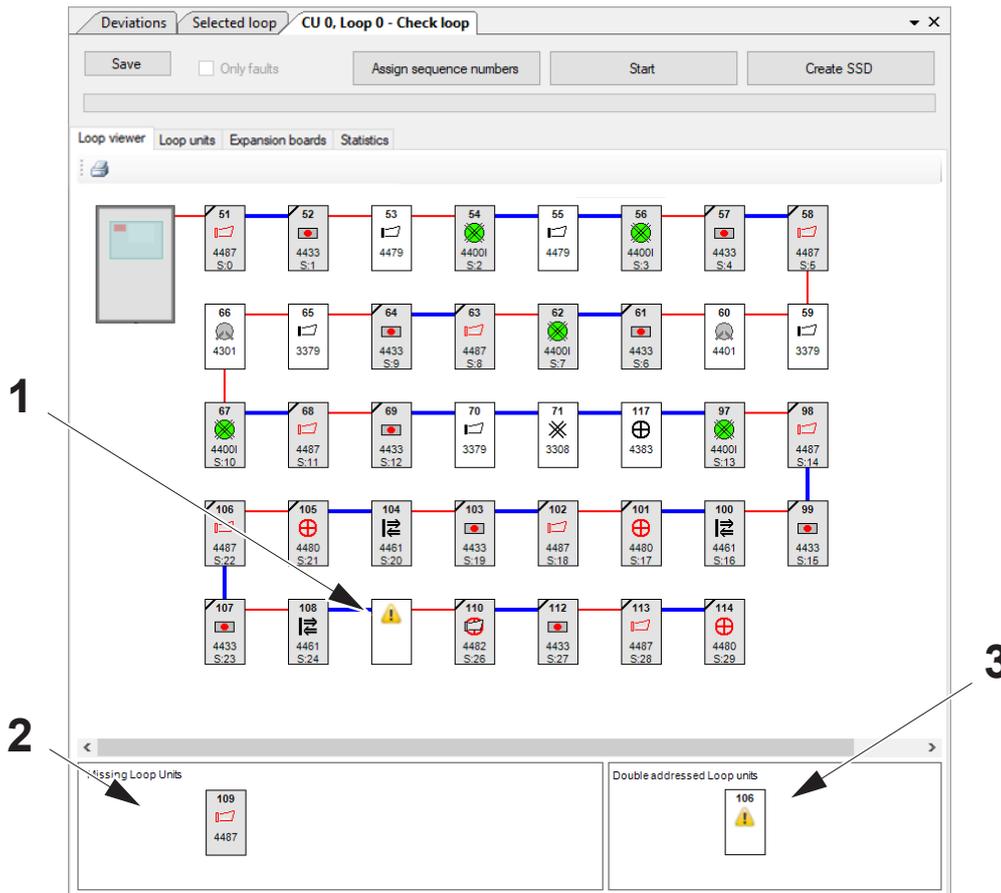


- 1) Yellow warning sign indicating address not found
- 2) 'Missing loop units' area
- 3) 'Double addressed loop units' area

The double address detection requires support from the loop units. Not all units support this feature today; therefore a double address fault may occur as 'Unknown unit' or 'Unknown unit unknown address' (see above). See also [5.4. SUPPORTED FUNCTIONS TABLE](#) on page 26.

OPEN CIRCUIT

If the system detects an open circuit, the check loop function cannot be completed. The open circuit will be indicated graphically by a sign at the end of the loop. The rest of the units in the SSD will appear in the 'Missing loop units' area.

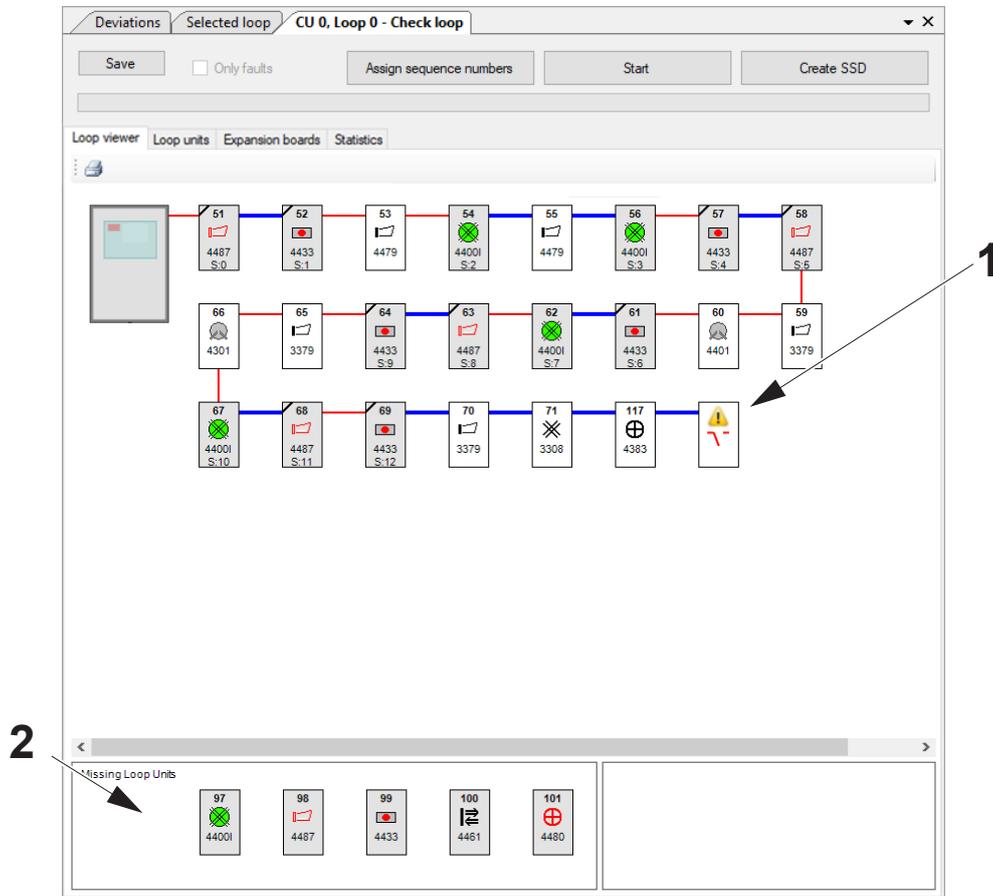

- 1) Sign indicating open circuit
- 2) 'Missing loop units' area

COM LOOP POLARITY CHECK


If SA / SB circuits are mixed, this will be indicated graphically by a sign at the end of the loop.

The graphical view will also indicate, with a dashed yellow line, within which sections mixed polarity can be found.

If the graphical projection of a unit has a marking on the upper left corner, the polarity is correct.

If the graphical projection of a unit has a marking on the upper right corner, the polarity is incorrect.


Units with no marking in any upper corner do not support the function “COM loop polarity check”, see 5.4. SUPPORTED FUNCTIONS TABLE on page 26.

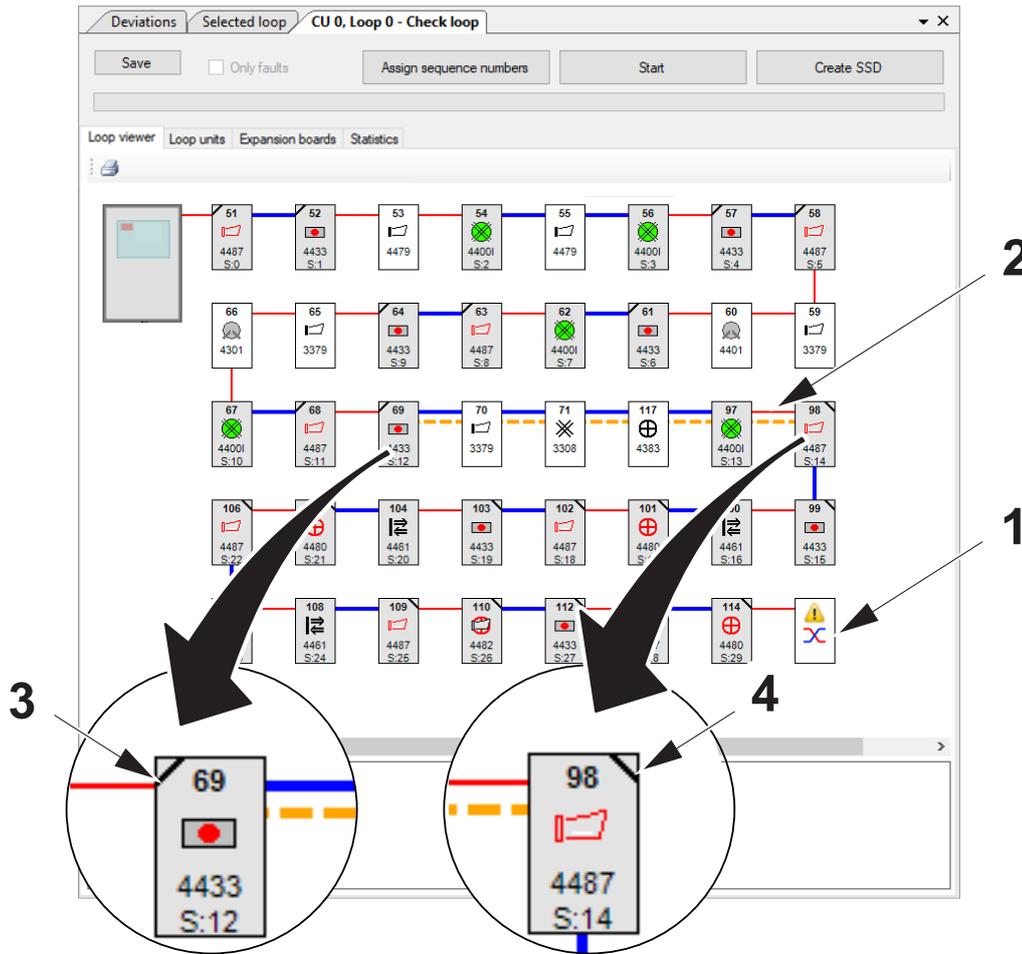

- 1) Sign indicating mixed circuit
- 2) Dashed yellow line indicating faulty area
- 3) Marking indicating correct polarity
- 4) Marking indicating incorrect polarity

SHORT CIRCUIT


If the system detects short circuit, the check loop function cannot be completed. The short circuit will be indicated graphically by a sign at the end of the loop. The rest of the units in the SSD will appear in the 'Missing loop units' area .

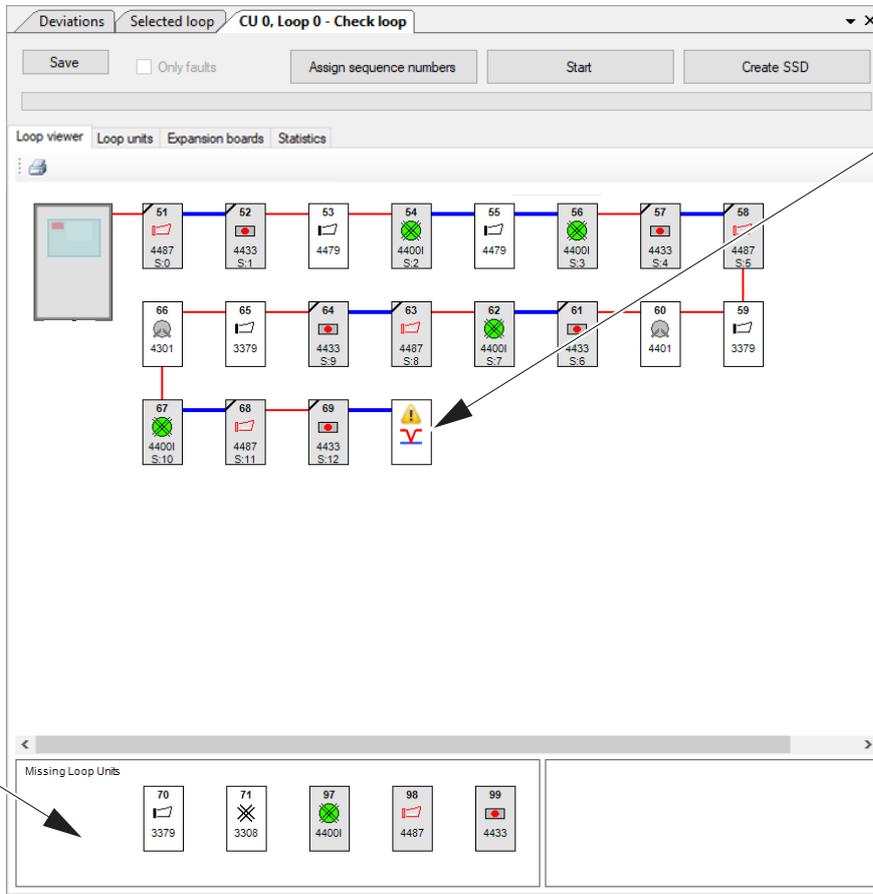


- 1) Sign indicating open circuit
- 2) 'Missing loop units' area

MANUAL CALL POINTS

If the system detects a manual call point (4433, 4439) with broken glass or installed incorrectly this will be indicated graphically by an icon next to the unit.

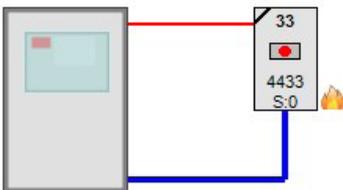

11.23. AUTO ADDRESS

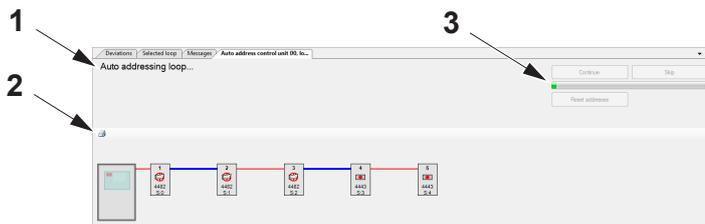

- 1) Wizard text
- 2) Print
- 3) Progress bar

11.23.1. GENERAL

Routine for automatically setting addresses on a loop with units that have isolators.

Units without isolators may be connected if they already have an address in the upper address span, 129-248, set by the address setting tool. Alternatively (for units in bases) they could be connected later and be addressed automatically by a separate routine: 'Adding units without isolators'.

All units with isolators must have default address before starting the routine of auto address setting. All units have default address from factory. There is also a routine for clearing addresses on the loop to default values: 'Reset addresses'. See section [11.23.7. RESET ADDRESSES](#) on page 106.

Units with isolators get address 1 to 128.

Units without isolators must have address 129 to 248.

The wizard text will guide the user through the auto address procedure. Click 'Start Wizard' to begin.

The 'Auto address' wizard will go through the following steps;

- Start
- Auto address loop units with short circuit isolators
- Auto address loop units without short circuit isolators
- Check loop
- Create SSD


For explanation of symbols, see section [11.22. CHECK LOOP](#) on page 90.

11.23.2. LIMITATIONS

- Units with isolators must have default address
- Units without isolators must have address 129 to 248, if they already are connected to the loop.
- Wireless base stations 4620 must have address 144, 161, 178 or 195
- Max 128 units with isolators
- Sounder base 4479 and Indicator 4418 consumes one address in the span of isolators

11.23.3. WORKFLOW FOR NEW INSTALLATIONS

- a) Mount:
 - units with isolators (default address)
 - units without isolators (address set with address setting tool to 129-248), except 4400, 4401, 4402 which can be added by the 'Add loop units' procedure
- b) Run 'Auto address' procedure. Follow the wizard in EBLWin.

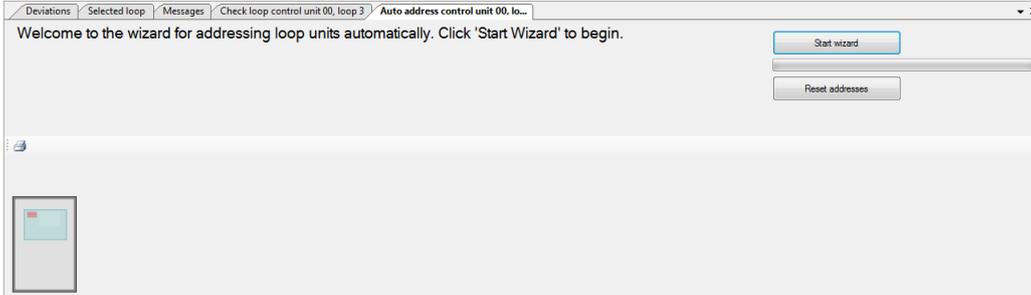

After the auto address procedure, the wizard will also suggest 'check loop' procedure and 'create SSD'.

If something in the procedure fails, correct the error and then try again.

11.23.4. ADD UNITS WITHOUT ISOLATORS

Procedure for automatically setting addresses on units without isolator:

- c) Units are connected one by one and the unit must have default address (factory setting).
- d) The units will be given an address from 129 to 248.
- e) Only units connected to a socket/base are allowed. For other units the address must be set manually with the address setting tool.

11.23.5. FAULTS - ADD UNITS WITHOUT ISOLATORS

Faults that may occur during 'adding units without isolators':

Open Circuit: Was not able to close loop during initialization

Unknown Unit: Failed checking type

Write Address Failed: Failed writing address to new unit

Unit In Wrong Address Span: Either unit with isolator found with address 129-248 or unit without isolator found with address 1-128

Address Out Of Range: Used all available addresses; too many units.

11.23.6. FAULTS - AUTO ADDRESS

Faults that may occur during 'Auto addressing' (pop up window):

Open Circuit: Was not able to close loop

Short Circuit: Unit with isolator opened relay due to a short circuit.

Unknown Unit: Failed checking type

Write Address Failed: Failed writing address to new unit

Address Out Of Range: Used all available addresses; too many units.

Cables Mixed: L-C mixed on loop


Address Out Of Range: More than 128 isolators

Unit In Wrong Address Span: Either unit with isolator found with address 129-248 or unit without isolator found with address 1-128

See section [11.18. SERVICE MODE](#) on page 87.

TIME OUT – AUTO ADDRESS

If the control unit aborts the auto address procedure, this fault message will appear:

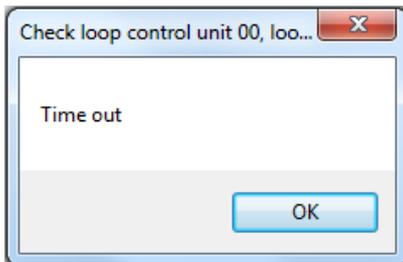


Check: USB connections or other loose contacts.

Action: Perform a check loop to see the result.

DO NOT ABORT PROCEDURE – AUTO ADDRESS

It is not possible to close down EBLWin during auto address procedure. The auto address procedure cannot be aborted. If, by accident EBLWin is interrupted, maybe the PC unexpectedly shuts down or such, the control unit will continue to run the auto address procedure until finished.

Action: Perform a check loop to see the result.

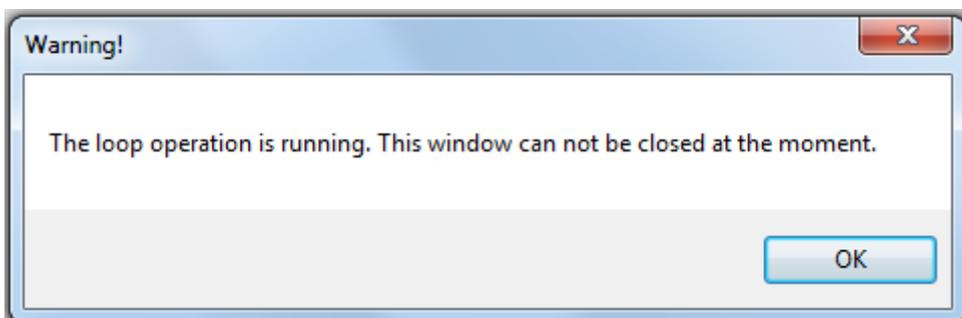

11.23.7. RESET ADDRESSES

This routine resets the units in the address span 1-128 to default addresses.

Default address is 0, 254 (4466, 4585), 255 (4479).

All units have default address from factory.

To enable the function 'Reset addresses':

- a) Go to EBLWin menu **Tools / Advanced functions / Level 1**.
- b) Activate Level 1. The 'Reset addresses'-button will appear below the progress bar.



11.23.8. FAULTS - RESET ADDRESSES

Faults that may occur during 'reset addresses':

Open Circuit: Was not able to close loop

Short Circuit: Unit with isolator opened relay due to a short circuit.

Unknown Unit: Failed checking type

Write Address Failed: Failed writing address to default value

Cables Mixed: L-C mixed on loop

Unit In Wrong Address Span: Either unit with isolator found with address 129-248 or unit without isolator found with address 1-128

11.24. REPLACE DETECTORS

Routine for automatically setting addresses on replaced units. Only one unit at a time can be replaced.

WORKFLOW – REPLACE OLD DETECTORS

- a) Start the wizard in 'Replace detectors'.
- b) Wait until initialization is done.
- c) Remove old detector.
- d) Mount new detector (with default address).
- e) Wait until LED on new detector is unlit, continue with next unit (step c).
- f) Stop the routine when you are done.

11.24.1. FAULTS - REPLACE DETECTORS

Wrong Type Of Unit: Trying to replace unit with another type of unit.

Replace Failed: Something failed either when checking type or writing address to new unit

See [section 11.18. SERVICE MODE](#) on page 87.

11.25. EXTEND LOOP

Routine for continuing automatically setting addresses on a loop with units that have isolators. This routine is for extending an already existing loop.

Extend loop only works when the existing loop has been previously auto addressed.

SSD for the existing loop must be downloaded to the control unit before starting the 'Extend loop' procedure.

WORKFLOW – EXTEND LATER (SSD IS DOWNLOADED)

- a) Mount:
 - units with isolators (default address)
 - units without isolators (address set with address setting tool to 129-248).

For units without isolators, the address must be set with the address setting tool before starting the 'Extend loop' procedure.

- b) Start the wizard in 'Extend loop'. Follow the procedures.

If only units without short circuit isolators are to be added; start the 'Auto address' wizard. Skip the first part of the 'Auto address' wizard. Then run the rest of the wizard and follow the procedures to add units without isolators one by one (for example 4400, 4401, 4402 with default address).

11.25.1. FAULTS - EXTEND LOOP

See section [11.23.6. FAULTS - AUTO ADDRESS](#) on page 105.

If the message "missing units" appears after running extend loop; the system do not find units on the loop, because of wiring fault or such. Function "create SSD" will be disabled.

Perform a check loop to find the fault.

See section [11.18. SERVICE MODE](#) on page 87.

12. DISABLEMENTS

12.1. DISABLE ALARM POINTS AND OUTPUTS

Temporary disablements are made via the sub-menus of the Disable menu . For more information see EBLOne Operating Instructions MEW03042, chapter "Disable or re-enable ()". The disablements are re-enabled via the sub-menus of the Disable menu .

Regular disablements are made via time channels, see section [15.3.2. TIME CHANNELS](#) on page 127.

Disabled alarm points and outputs are indicated by LED  "Disablement" on the CIE front and are also shown on the event tab page when logged out.

The sensor values for a disabled analog smoke detector will not be saved.

12.1.1. ENHANCED DISABLEMENT

(Default) = Fire alarm, pre-warning and fault signal cannot be activated by the disabled alarm point/zone. If only fire alarm and pre-warning shall be disabled, "Enhanced Disablement" shall not be selected, see section [14.3. SYSTEM PROPERTIES \(SETTINGS\)](#) on page 117.

12.1.2. DISABLE ZONE

A whole zone can be disabled via Zone menu  >  > . Re-enabled via Zone menu  >  > .

By default, also manual call points within the zone will be disabled but this functionality can be changed. See section [14.3. SYSTEM PROPERTIES \(SETTINGS\)](#) on page 117.

12.1.3. DISABLE ZONE / ADDRESS

Individual alarm points (zone-address) can be disabled and re-enabled via Address menu  >  > . Time channels can be used to disable and re-enable automatically.

DISABLE THE SMOKE SENSOR

It is possible to disable the smoke sensor only in a 4400 / 4400I, if it is set to **Advanced mode**.

For more information, see the Technical description for Analog multi detector 4400 / 4400I.

12.1.4. DISABLE ZONE RANGE

A range of zones can be disabled via Zone menu  >  > . Re-enabled via Zone menu  >  > .

12.1.5. DISABLE CONTROL OUTPUT

All outputs (except outputs of type "Alarm Device" and "Alarm device for evacuation") can be individually disabled and re-enabled via Output menu  >  > . Disabled output will stay in (or return to) the normal condition for the output respectively.

12.1.6. DISABLE / RE-ENABLE OUTPUT TYPE

The control outputs can be collective disabled via Output types menu  >  > , type:

- Control outputs
- Ventilation outputs
- Extinguishing outputs
- Interlocking outputs
- Alarm devices

Re-enabled via Output types menu  >  > . Disabled outputs will stay in (or return to) the normal condition for the output respectively.

12.2. DISABLE INTERLOCKING OUTPUT

Individually disabled and re-enabled via Interlocking output menu  >  > . See also the Technical description for the EBLOne Control unit MEW03042.

12.3. DISABLE OUTPUTS FOR ROUTING EQUIPMENT

Disabled and Re-enabled via Routing equipment menu  >  > . For more information see EBLOne Operating Instructions MEW03042.

12.4. DISCONNECT & RE-CONNECT LOOP / ZONE LINE INPUT

Disconnected and re-connected via Disconnect menu  >  > : COM loop, Zone line input, Addressable zone interface (4461 zone line input). For more information see EBLOne Operating Instructions MEW03042.

13. TEST

13.1. TEST MODE

Zones can be set in test mode. Alarm points / zones can be tested during the Monthly test in the Test menu  (up to four zones at the same time) or separately via Zone test menu  >  >  (up to 100 zones at the same time). For more information see EBLOne Operating Instructions MEW03042. The LED  "Test mode" on the CIE front indicates one or more zones in Test mode. Zones in Test mode are also simultaneously shown in the CIE display.

In order to shorten the testing time, any time delay before alarm will be "turned off" in Test mode. Any 2-zone / -address dependence and the function "delayed alarm" will be ignored.

13.2. TEST ALARM DEVICES

The programmable outputs of type "Alarm device" can be collectively activated via Test alarm devices menu  >  > , which make it possible to test the alarm devices. (The test cannot be started if fire alarm already is activated in the system.). When the test starts the alarm devices will be "on" for 1 second ($\pm 1s$) (Some COM loop unit outputs might be "on" for a little longer), "off" for 29 seconds ($\pm 1s$), "on" for 1 second and so on. The output activation will be continuously (steady). For the alarm devices, for example 4482, the tone with the highest priority level (and type "alarm device") will be automatically selected.


Also disabled (and silenced) alarm devices will be tested. The test is stopped via Test menu , if a fire alarm is activated in the system, or after one hour.

13.3. TEST OF OUTPUTS

Test of programmable outputs can be done via EBLWin or via Activate output menu  >  > .

Via EBLWin:

Connect a PC to a control unit. Open EBLWin and log on. Each output can be activated / de-activated.

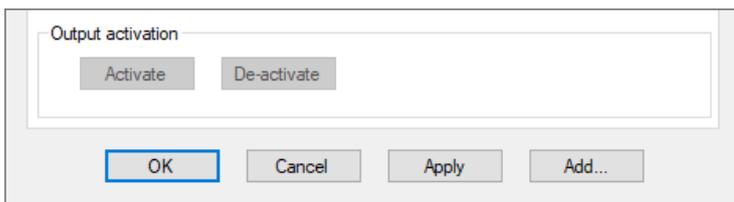

When starting the test, the output respectively will be activated, no matter if the control expression programmed for the output is false. When ending the test, the output respectively will be de-activated, but only if the control expression at that time is false.

13.4. TEST OF ROUTING EQUIPMENT

Via Monthly test menu  >  > , it is possible to test the "Fault condition" and "Fire alarm" outputs for routing equipment (Fault tx, Fire brigade tx, and corresponding programmable outputs).

- 1) In Monthly test menu  >  > , Press  to start the test. A 60 seconds count-down starts. The CIE "Fault tx" output will be activated.
- 2) After 30 seconds the CIE "Fire brigade tx" output will also be activated, indicated by LED  "Fire brigade tx activated" on the CIE front.
- 3) After 30 seconds more (60 sec. in all) the test will be ended and the outputs and LEDs will go back to "normal" status.


Fault condition outputs are normally activated in "normal" state, i.e. they will in this case be de-activated.

14. EBLWin

The PC program EBLWin is used for programming and commissioning of the control unit.

It can be used to:

- create and download / make a backup (upload) of site specific data (SSD).
- download new software / settings / configurations / control unit & system properties and so on.
- create and download the user definable alarm texts shown in the display in the control unit.
- see the fire alarms, faults and disablements as well as reset, acknowledge and re-enable respectively.
- configure the Gateway; create and download / make a backup (upload) of the configuration data as well as download of software.
- Check loop. It identifies the units connected on the COM loop and identifies type of fault at fault searching.
- Scan loop. Used with Loop Tester 1105 to identify the units connected on the COM loop before the CIE is installed.

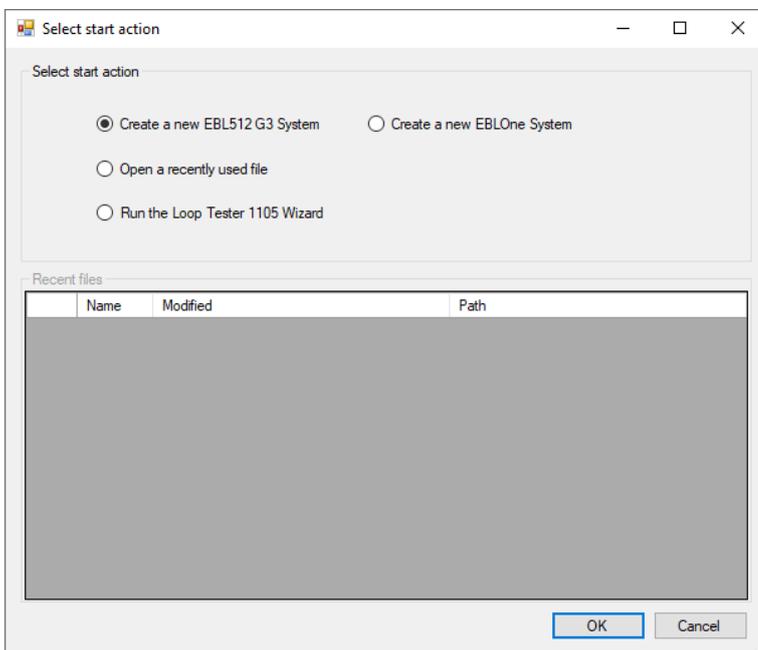

EBLWin Start page

EBLWin shall have the same version number as the EBLOne software version number, for example. 3.3.x and 3.3.x respectively. x indicates only a small correction and is not required to be the same.

Old SSD files can be opened in a newer (higher) version of EBLWin, saved, edited and thereafter downloaded to a EBLOne unit with the corresponding version.

14.1. CONTROL UNIT PROPERTIES

Default settings in EBLWin might vary depending on convention.

Control unit properties dialog box opens when you add a control unit or via the "Control unit" pop-up menu (Properties...)

14.1.1. GENERAL INFORMATION

- **Control unit number:** Must be 0
- **Name:** User-definable name for the control unit.
Will be shown together with any fault message belonging to the control unit. Max 40 characters.

14.1.2. MISC

Use prewarning. This check box shall be marked if the pre-warning detection shall be enabled, i.e. pre-warnings will be activated and presented in the control unit.

Checkbox not marked = Pre-warnings will not be activated in the control unit.

14.1.3. CURRENT CONSUMPTION

- Quiescent
- Alarm


Used for the current consumption calculation of the system. See [21. CURRENT CONSUMPTION](#) on page 155.

14.1.4. BATTERY

- Required battery backup time
- Required battery capacity
- Total required battery capacity

Used for the current consumption calculation of the system. See 21. CURRENT CONSUMPTION on page 155.

14.2. CONTROL UNIT POP-UP MENU

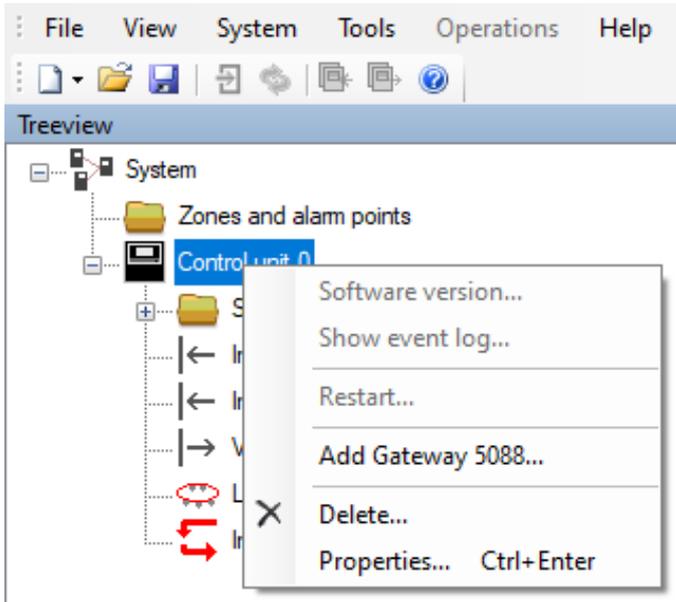

Some commands are disabled since you have to connect and log on to the control unit to be able to select / use them.

14.2.1. SOFTWARE VERSION

The control unit software (S/W) version will be displayed.

14.2.2. SHOW EVENT LOG

Three different event log lists, Alarm (999 events), Interlocking (999 events) and General log (999 events) can be shown. They are valid for the whole system.

id	Orign	User id	Time	Event
1	00		2024-09-06 13:12:07	Transfer of SSD control unit 99 completed
2	EBL...		2024-09-06 13:12:19	Control unit 00 ready for backup of SSD
3	EBL...		2024-09-06 13:12:15	Synchronization requested by EBLWin
4	00		2024-09-06 13:11:59	User logged in by EBLWin
5	00	2	2024-09-06 12:53:25	User: 2 logged out
6	00		2024-09-06 12:48:23	Technical warning 1 de-activated

14.2.3. SHOW EXIT LIGHT EVENT LOG

The Exit light event log will log the status of the monthly and annual test of the exit lights (999 events).

id	Orign	User id	Time	Event
1	00		2024-09-06 08:02:47	Monthly test failed, technical number 000001
2	00		2024-09-06 07:03:32	Monthly test failed, technical number 000001
3	00		2024-09-06 05:58:14	Monthly test failed, technical number 000001
4	00		2024-09-06 04:58:58	Annual test failed, technical number 000001
5	00		2024-09-06 03:12:11	Monthly test failed, technical number 000001
6	00		2024-09-06 02:07:00	Monthly test failed, technical number 000001
7	00		2024-09-06 01:07:45	Monthly test failed, technical number 000001
8	00		2024-09-06 00:02:27	Monthly test failed, technical number 000001
9	00		2024-09-05 23:03:11	Monthly test failed, technical number 000001
10	00		2024-09-05 21:57:53	Monthly test failed, technical number 000001


14.2.4. RESTART

You can restart the control unit via this menu command.

14.2.5. ADD GATEWAY 5088

GATEWAY


The Gateway configuration program opens. One Gateway can be added.

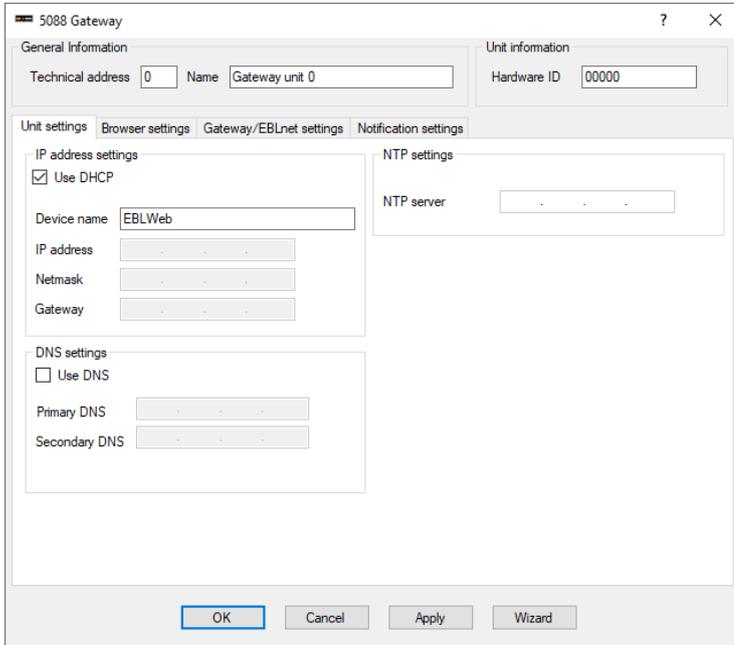

See Technical description MEW02670 for more information.

14.2.6. DELETE


The selected control unit can be deleted.

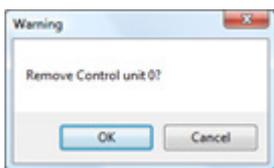

14.2.7. PROPERTIES

See section [14.1. CONTROL UNIT PROPERTIES](#) on page 113.

14.3. SYSTEM PROPERTIES (SETTINGS)

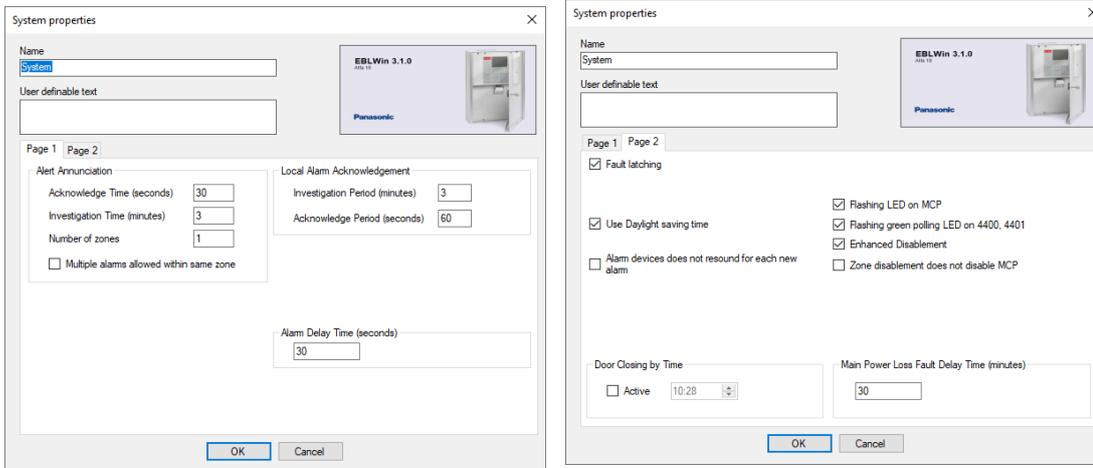

Default settings in EBLWin might vary depending on convention.

14.3.1. SYSTEM PROPERTIES DIALOG BOX

Opens via the "System" pop-up menu or via menu **System /Properties...**

14.3.2. NAME

Normally the installation name. Maximum 22 characters.

14.3.3. USER DEFINABLE TEXT

For user definable text. Two rows, in total 40 characters. (Carriage return takes 2 characters.) The text will be shown in the control units when nothing else is shown. See also EBLOne Operating Instructions MEW03042.

14.3.4. SYSTEM PROPERTIES, PAGE 1

ALERT ANNUNCIATION

- **Acknowledgement time:** (30 sec.is default), 0-120 (= 2 min.) is possible.
- **Investigation time:** (3 min.is default), 0-9 is possible.

According to EN54-2, the total delay of fire alarm routing equipment (Acknowledge time + Investigation time) must not exceed 10 minutes.

- **Number of zones:** (1 is default), 1 - 4 is possible.
- **Multiple alarms allowed within same zone:** Normally only one Alert Annunciation alarm is allowed within the zone. If more Alert Annunciation alarms within the zone are allowed, this checkbox shall be marked.

See also section 11.11. ALERT ANNUNCIATION on page 81.

LOCAL ALARM ACKNOWLEDGEMENT

- **Investigation period time:** 3 min. (3 is default) 1-9 is possible.
- **Acknowledge period time:** 60 sec.(60 is default) 10-120 is possible.

See also section [11.12. LOCAL ALARM ACKNOWLEDGEMENT \(LAA\)](#) on page 82.

ALARM DELAY TIME (SECONDS)

Valid for the detectors and zone line inputs, with this option selected via EBLWin.
30 is default. 0-300 seconds is possible.

This delay time starts when the fire alarm normally should have been activated.

14.3.5. SYSTEM PROPERTIES, PAGE 2

- **Fault latching** (default): All faults have to be acknowledged, also corrected faults. Checkbox not marked = No fault latching = Not corrected faults have to be acknowledged but corrected faults will automatically be deleted from the fault list.
- **Use Daylight Saving time:** See section 11.14.1. DAYLIGHT SAVING TIME on page 85.
Checkbox not marked = Daylight saving time is not used.
- **Alarm devices does not resound for each new alarm:** Can be used in all conventions.
- **Flashing LED on MCP:** The manual call point (type 4433 / 4439) built-in LED will flash to indicate communication with the CIE
Checkbox not marked = This option is disabled, which means the LED is switched off until the call point is operated.
- **Flashing Green polling LED on 4400, 4401:** Valid for the detectors 440x, including 4400I / 4401I, in Advanced mode and detector 4402 in Normal mode. The detectors 4400, 4400I, 4401, 4401I, and 4402 have a green polling LED.
Always off = The green polling LED is not used.
Flash when polled = The green polling LED will be blinking 20 ms / 7 sec. indicating the communication with the CIE.

When the detector 4400, 4401, and 4402 is in test mode the green polling LED will be turned off until the test mode is turned off. 4400I and 4401I, blinks 250ms / 3s during test mode.

- **Enhanced disablements:** Disabled alarm point will not activate pre-warning, fire alarm or fault.
Checkbox not marked = Disabled alarm point will not activate pre-warning or fire alarm.
Fault can still be activated.

Checkbox not marked is a violation to the EN54-2 standard.

- **Zone disablement does not disable MCP:** Normally MCPs are included in a zone disablement. When this checkbox is checked, addressable MCPs will not be disabled by a zone disablement.

Checkbox marked is a violation to the EN54-2 standard.


DOOR CLOSING BY TIME

- **Active:** If all fire doors (trigger condition "Fire Door Closing") shall be closed at a definite time every day, this checkbox shall be marked and the time (hh:mm) set, for example. 23:00.

MAIN POWER LOSS FAULT DELAY TIME (MINUTES)

A fault will be activated mm minutes after loss of mains (230 V AC).
30 is default. 0-300 minutes is possible.

14.4. SYSTEM POP-UP MENU

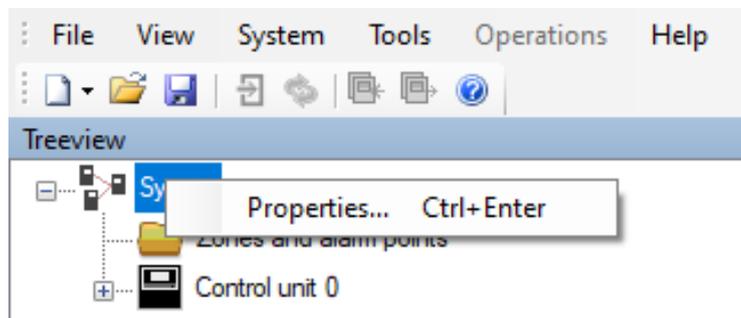

14.4.1. PROPERTIES


System properties

15. EBLWin MENUS

When EBLWin is opened, the most recently used / saved (MRU) installation will be opened automatically if the checkbox "Open MRU at startup" is selected in the "EBLWin Settings" (Options) dialog box, else a new EBL512 G3 system will be opened.

If the MRU installation is an EBL512 G3 system, a new EBLOne system has to be selected via menu File / New, see section below.

15.1. THE FILE MENU

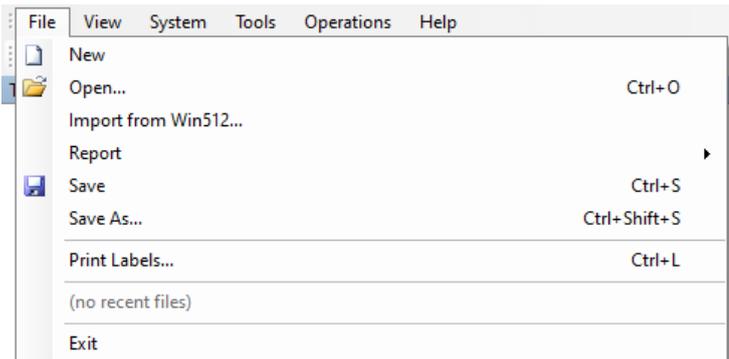

15.1.1. NEW

To open a new installation. The type of system has to be selected.

- System EBL512 G3 (default)
- System EBLOne

15.1.2. OPEN

To open an installation via a standard Windows dialog box "Open".

- EBLWin file (*.ebl)
- WinG3 file (*.WinG3)
- Win128 file (*.Win128)

15.1.3. IMPORT FROM Win512

To open an installation via a standard Windows dialog box "Open".

- Win512 file (*.512).

Only files saved with Win512 version 2.7.x can be imported.

15.1.4. REPORT

- **Installation Document:** All System properties, Control unit properties and so on, will be saved in a file (EBLWin Installation Document.htm), via a standard Windows dialog box "Save As".
- **Alarm points:** A list of all alarm points will be saved in a file (Alarm points report.htm), via a standard Windows dialog box "Save As".
- **Outputs affected by alarm points:** A list of all programmable outputs and which alarm points that will activate them will be saved in a file (Alarm points outputs report.htm), via a standard Windows dialog box "Save As".
- **Alarm points affected by time channels:** A list of settings for alarm points and time channels.
- **Current consumption:** See section [21.6. CURRENT CONSUMPTION REPORT](#) on page 161.

15.1.5. SAVE

To save an installation (xxxxxx.ebl). The very first time, via a standard Windows dialog box "Save As".

15.1.6. SAVE AS

To save an installation (xxxxxx.ebl), via a standard Windows dialog box "Save As".

15.1.7. PRINT LABELS


Labels with Zone-Address for the specified range of programmed alarm points will be printed. In order to set the margins etc. the following dialog box will open:

The dialog box 'Label Printing' is shown with the following details:

- Select zone-address range:** From 1 To 999
- Sizes in tenth of millimeters:**
 - Left margin: 85
 - Right margin: 60
 - Top margin: 210
 - Bottom margin: 100
 - Label width: 300
 - Label height: 120
 - Label space: 30
- Font:** Font...
- Sample zone-address:** 123-45
- Buttons:** MARK-0 sheet, Set as default, Print..., Cancel

For the Label holder (3390) the MARKO sheet can be used: Labels (3391) 10 sheets à 132 labels.

15.2. THE VIEW MENU

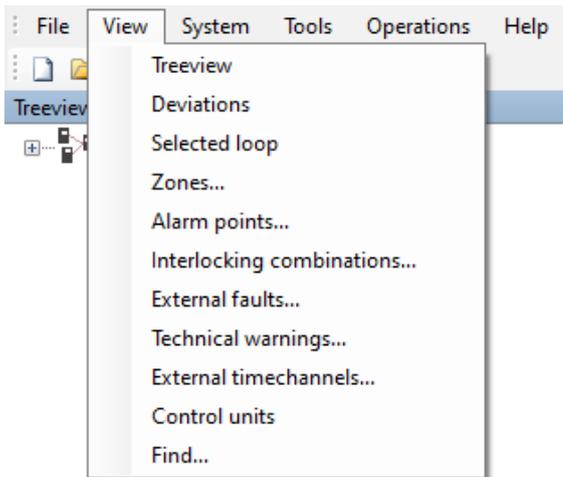

First time EBLWin is opened after installation the tree view will be visible to the left in the window. (To the right will the tabs "Deviations" and "Selected loop" be available.)

15.2.1. TREE VIEW

Visible / open by default.


If the tree view for some reason has been closed it can be opened again via menu "View" and "Tree view".

The tree view shows the system and will be updated for every unit added to the system.

The colour of the control unit symbol is black in a new system or if its properties have been revised or units have been added or deleted after the latest download of SSD.

15.2.2. DEVIATIONS

To the right of the tree view, the tab "Deviations" is available by default.

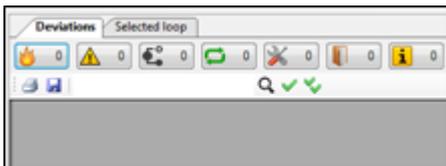

There is a button to open a list of:

- fire alarms (selected or all can be reset)
- faults (selected or all can be acknowledged)
- disablenents (selected or all can be re-enabled)
- activated interlocking combinations
- service signals (selected or all can be acknowledged)
- open doors
- technical warnings

You can print and save what you see in the list respectively. A filter function is available.

15.2.3. SELECTED LOOP

To the right of the tree view, the "Selected loop" is available by default.

Address	Name	SCI Sequence No	Zone	Address	Text	Disable time channel	Alert annunciation time channel	Dependent time channel

COM loop units can be added in two ways. Via the tree view (COM loop pop-up menu) or via the "Selected loop" tab. Click a COM loop unit symbol to add the unit to the list. Then edit its properties.

The "Selected loop" list and the tree view will show the same information.

- show/hide the SUB-loops in the list.

15.2.4. ZONES

To the right of the of the tree view, the "Zones" tab can be available.

Zone	Name	Number of alarm points

This is a list, for the whole system, showing all zones and their properties.

The list can be sorted by clicking the column header respectively.

Double click an alarm point row to open its dialog box.

You can print and save what you see in the list. A filter function is available.

15.2.5. ALARM POINTS

To the right of the of the tree view, the "Alarm points" tab can be available.

Alarm point	Technical alarm number	Control Unit	Loop	Loop Unit

This is a list, for the whole system, showing all alarm points and their properties.

The list can be sorted by clicking the column header respectively.

Double click an alarm point row to open its dialog box.

You can print and save what you see in the list. A filter function is available.

15.2.6. INTERLOCKING COMBINATIONS

To the right of the tree view, the "Interlocking combinations" tab can be available.

Interlocking Combination Properties	Control Unit	Fault	Fault detection time	Buzzer	Latched output

This is a list, for the whole system, showing all interlocking combinations and their properties.

The list can be sorted by clicking the column header respectively.

Double click an interlocking combination row to open its dialog box.

You can print and save what you see in the list. A filter function is available.

15.2.7. EXTERNAL FAULTS

To the right of the tree view, the "External faults" tab can be available.

Id	Text	Technical number	Control Unit	Loop	Loop Unit	Input	Expansion board

This is a list, for the whole system, showing all external faults and their properties. The list can be sorted by clicking the column header respectively. Double click an external fault row to open its dialog box.

Technical warnings, external faults, time channels (external and internal), control groups, and zone groups must have unique names.

You can print and save what you see in the list. A filter function is available.

15.2.8. TECHNICAL WARNINGS

To the right of the tree view, the "Technical warnings" tab can be available.

Id	Text	Technical number	Control Unit	Loop	Loop Unit	Input	Expansion board	Show on main screen	Latched	Buzzer

This is a list, for the whole system, showing all technical warnings and their properties. The list can be sorted by clicking the column header respectively. Double click a technical warning row to open its dialog box.

Technical warnings, external faults, time channels (external and internal), control groups, and zone groups must have unique names.

You can print and save what you see in the list. A filter function is available.

15.2.9. EXTERNAL TIME CHANNELS

To the right of the tree view, the "External time channels" tab can be available.

Id	Text	Technical number	Control Unit	Loop	Loop Unit	Input	Expansion board


This is a list, for the whole system, showing all external time channels and their properties. The list can be sorted by clicking the column header respectively. Double click an external time channel row to open its dialog box.

Technical warnings, external faults, time channels (external and internal), control groups, and zone groups must have unique names.

You can print and save what you see in the list. A filter function is available.

15.2.10. CONTROL UNITS

To the right of the tree view, the “Control units” tab can be available.

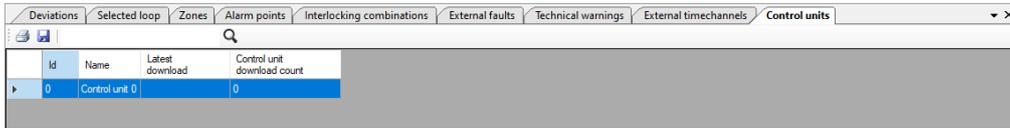


This is a list, for the whole unit system, showing all control units and their properties.

The list can be sorted by clicking the column header respectively.

Double click a control unit row to open its dialog box.

15.2.11. FIND

To the right of the tree view, the “Find” tab can be available.

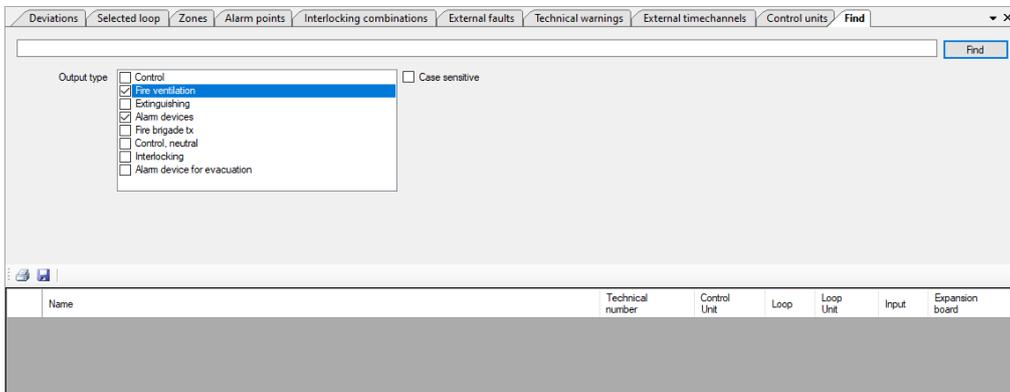


The list can be sorted by clicking the column header respectively.

This is a search function to locate all units or inputs/outputs with certain criteria. The list can be filtered by using the "Output type" checkboxes.

You can print and save what you see in the list. A filter function is available.


15.3. THE SYSTEM MENU

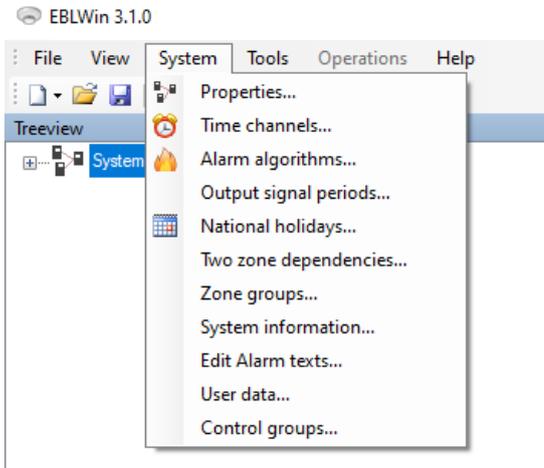

15.3.1. PROPERTIES

The system properties dialog box opens. See section [14.3.1. SYSTEM PROPERTIES DIALOG BOX](#) on page 117.

15.3.2. TIME CHANNELS

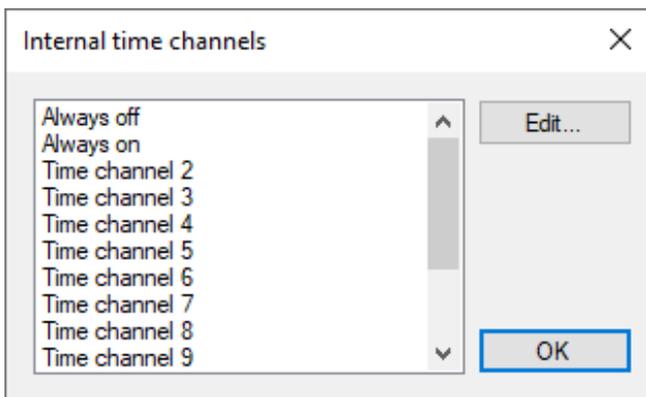

Always off cannot be edited.


The control unit RTC (real time clock) controls the time channels 2-14.

Five intervals (interval = one time on & one time off) can be set for each day in time channel 2-14.

Time channels can:

- disable and re-enable alarm points / zones
- set Alert Annunciation on / off
- activate /de-activate programmable control outputs
- set alternative alarm algorithm for analog detector types 430x / 440x on / off
- set 2-unit dependence function on / off

The properties for the Time channel (2 - 14) and each Day of the week (Monday – Sunday + National Holiday) must be set for each channel respectively.

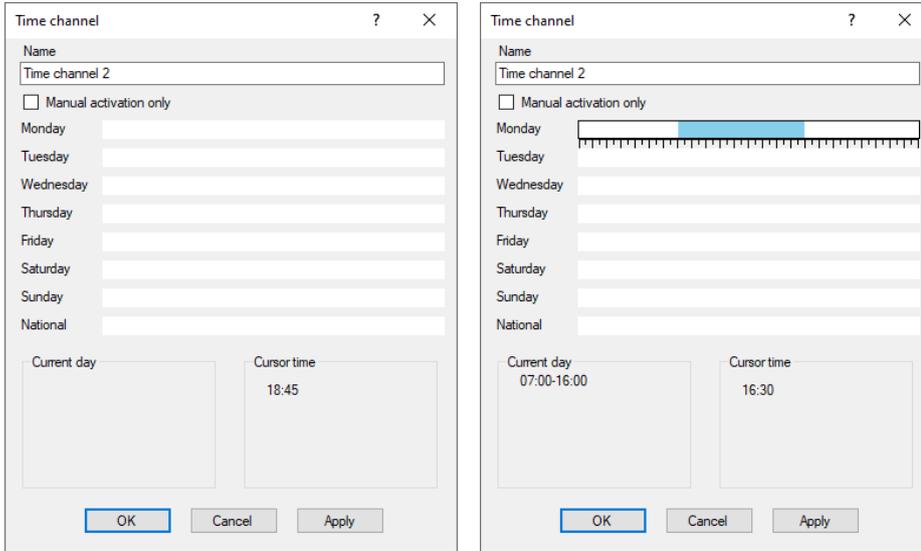


Left: The "Time channel 2" dialog box without any programming done.

Right: One time interval is programmed for the Monday (time channel 2 is "on" 07:00 – 16:00).

- **Name:** "Time channel n" is default. Normally not changed but an informative text can be added for example office hours.

Technical warnings, external faults, time channels (external and internal), control groups, and zone groups must have unique names.

- **Manual activation only:** Only valid for Input type "Manual activation of time channel" or with the Swiss fire brigade panel.
- **Monday to National:** Place the cursor (the "arrow") in the white day field (e.g. Monday). In the "Cursor Time" area (down to the right) is the actual cursor time displayed. Move the cursor in the day field. In the "Cursor Time" area will the corresponding time be displayed. In the correct time position (for example 07:00) click the left mouse button and drag the cursor to the right (or left) to the next time position (for example 16:00) and drop the cursor. There will now be a box in the day field indicating the time interval when the time channel is "on". The time interval is also displayed in the "Current Day" area (down to the left). A time interval can be edited by dragging the whole interval (or the left / right side of it) to the left or right in the day field. Alternatively, double click the time interval box in the day field to open a dialog box for easier time editing:

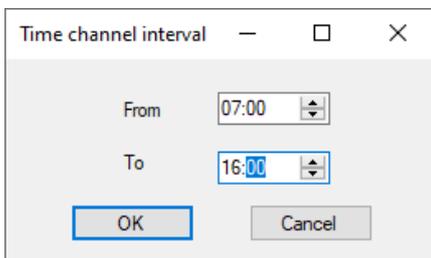


In this dialog it is possible to set the time interval to a full day by entering 00:00-00:00.

- **Current day:** The programmed time intervals (when the time channel is "on") for the selected day, are shown here.
- **Cursor time:** The cursor position (time) in the day field respectively, is shown here.

For each day, five time intervals can be programmed. A time interval can be copied in one day field and pasted into another day field. See also section [15.3.5. NATIONAL HOLIDAYS](#) on page 131.


15.3.3. ALARM ALGORITHMS

The following is not valid for detectors in Advanced mode. This section is only valid for the alarm algorithms where the fire judgement is made in the CIE.

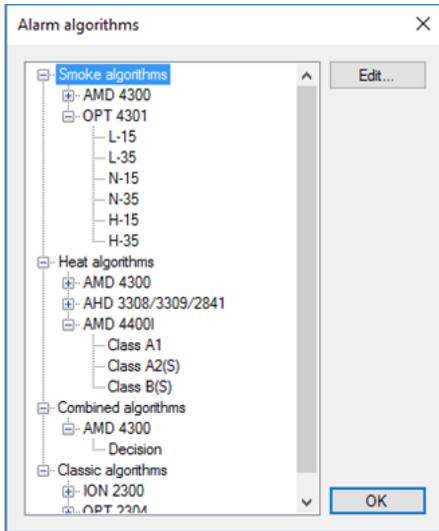

All the different algorithms for the different detector types are shown in the tree view to the left.

- Click + to expand and - collapse the tree view.
- Select one algorithm and click **Edit** and a dialog box displays depending on the selected algorithm:

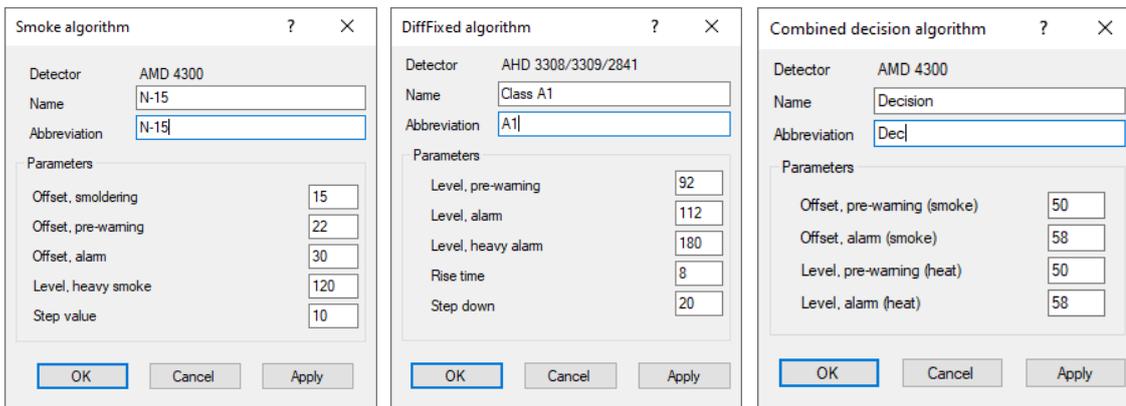

Smoke algorithm N-15 for 4301 / 4401, Heat algorithm Class A1 for 3308 and Combined Decision algorithm Dec for 4300 / 4400 respectively. All in NORMAL mode.

- Detector:** Shortening and Type number.
OPT = Analog photoelectric (optical) smoke detector
AHD = Analog heat detector
AMD = Analog Multi Detector).
- Name:** Name of the algorithm. Normally not changed.
- Abbreviation:** The algorithm abbreviation (< six characters) as shown in the EBLOne display, Sensor values menu > > . Normally not changed.

PARAMETERS FOR SMOKE ALGORITHMS

Valid for the detectors 4300 / 4400 and 4301 / 4401. All in NORMAL mode.

Offset is a fixed value added to the week average sensor value to get the "alarm" level respectively, for example week average sensor value 0.1 + offset 3.0 = 3.1 = the fire alarm level (equivalent to 3.1 % obscuration per meter). The step value gives the alarm delay time to the algorithm respectively.

See section [7.2. NORMAL MODE ALGORITHMS – SMOKE DETECTORS](#) on page 29.

The following example is for the N-15 algorithm for the 4301 detector. The values for other algorithms are different.

- **Offset, smouldering:** Offset value, default 15 = 1.5%/m.
- **Offset, pre-warning:** Offset value, default 22 = 2.2%/m.
- **Offset, alarm:** Offset value, default 30 = 3.0%/m.
- **Level, heavy smoke:** Heavy smoke level, default 150 = 15%/m.
- **Step value:** Default 10.

Changing these parameters will affect the sensitivity and detection time and should be done by authorized personnel only! A special password is required to change the parameters for fire alarm.

PARAMETERS FOR HEAT ALGORITHMS

Valid for the detectors 3308 / 3309 / 4408 / 4409 and the multi detectors 4300 / 4400. All in NORMAL mode.

The "heat alarm" levels are fixed, which means there are no offset values. The sensor values can be 0-200, which is equivalent to 0-100 °C. The rise time and step down gives a rate-of-rise function (used in the A1 algorithm only).

See section [7.3. NORMAL MODE ALGORITHMS – HEAT DETECTORS](#) on page 37.

The following example is for the A1 algorithm for the 3308 / 3309 / 4408 / 4409 detector. The values for other algorithms are different.

- **Level, pre-warning:** Level, default 92 (46 °C)
- **Level, alarm:** Level, default 112 (56 °C)
- **Level, heavy alarm:** Level, default 180 (90 °C)
- **Rise time:** Default 8
- **Step down:** Default 20.

Changing these parameters will affect the sensitivity and detection time and should be done by authorized personnel only! A special password is required to change the parameters for fire alarm.

PARAMETERS FOR COMBINED DECISION ALGORITHM

Valid for the detectors 4300 / 4400. All in NORMAL mode.

Explanation Offset, see [PARAMETERS FOR SMOKE ALGORITHMS](#) on page 130.

Explanation Level, see [PARAMETERS FOR HEAT ALGORITHMS](#) on page 130.

The following example is for the Decision algorithm for the 4300 detector.

- **Offset, pre-warning:** Offset value, default 50 = 5.0%/m.
- **Offset, alarm:** Offset value, default 58 = 5.8%/m.
- **Level, pre-warning:** Level, default 50 °C.
- **Level, alarm:** Level, default 58 °C.

Changing these parameters will affect the sensitivity and detection time and should be done by authorized personnel only! A special password is required to change the parameters for fire alarm.

15.3.4. OUTPUT SIGNAL PERIODS


See section [10.14.5. OUTPUT SIGNAL PERIOD](#) on page 53.

15.3.5. NATIONAL HOLIDAYS


Up to twenty national holidays can be set for the whole system.

National holidays can be added one by one:


Click with the left mouse button on a date in the calendar (on the right side).

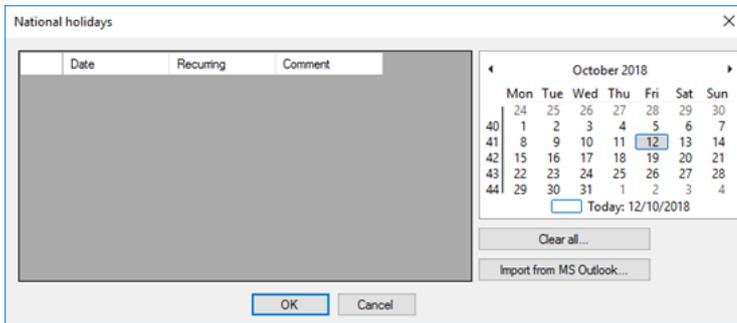

A row with that date will be added in the list (on the left side).

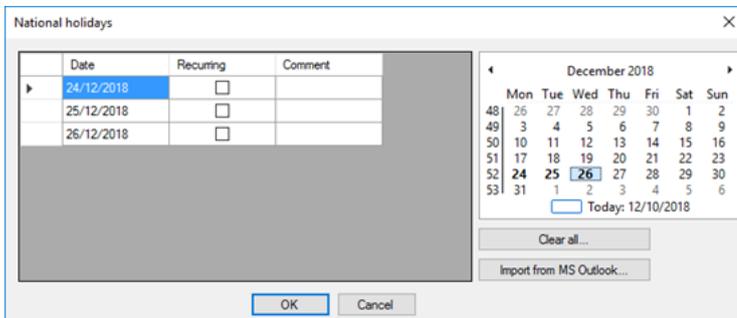

To delete a date in the list, click on the very left column for that date to select a row. The complete row will turn blue. Press delete. To delete all selected dates, press **Clear all**.

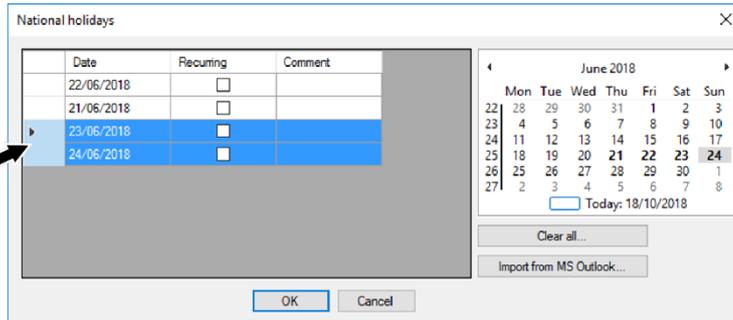

If Microsoft® Outlook® is installed on your PC the national holidays can be automatically added in the list by clicking **Import holidays from Outlook...** Mark the checkbox "Recurring" if a holiday recur the same date every year, for example Christmas Day, Boxing Day and so on.

The National holidays have first to be imported to Microsoft® Outlook. The number and dates of national holidays varies between different countries.

ON/OFF times for each time channel (1 - 14) and every day of the week (incl. national holidays) have to be set.

15.3.6. TWO ZONE DEPENDENCE


See section [11.5.1. TWO ZONE DEPENDENCE](#) on page 75.

15.3.7. ZONE GROUPS

See section [11.16. ZONE GROUPS](#) on page 86.

15.3.8. SYSTEM INFORMATION

In this dialog box you can read the following information:

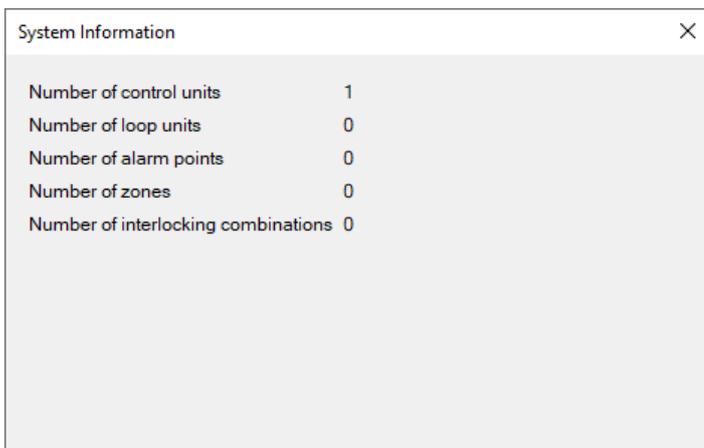

This is what has been programmed so far in the system. The information will be updated when units and so on are added or deleted.

15.3.9. EDIT ALARM TEXTS

The user definable alarm text for each alarm point can be created / edited in the alarm point dialog box respectively or via the menu: **System** menu / **Edit Alarm texts**. See section 11.2. ALARM TEXTS on page 68.

15.3.10. USER DATA

To log on to the CIE and/or the Gateway a User name and a password are required.

Up to ten different User names with corresponding passwords can be defined for any of the three different User level Types.

User data						
	Username	Initials	Password	Fire alarm access	EBLWeb access	Access type
▶	Information only	IO	000000	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Information only
	Building officer	BO	111111	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Building officer
	Service personnel	SP	222222	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Service personnel
				<input type="checkbox"/>	<input type="checkbox"/>	Information only
				<input type="checkbox"/>	<input type="checkbox"/>	Information only
				<input type="checkbox"/>	<input type="checkbox"/>	Information only
				<input type="checkbox"/>	<input type="checkbox"/>	Information only
				<input type="checkbox"/>	<input type="checkbox"/>	Information only
				<input type="checkbox"/>	<input type="checkbox"/>	Information only
				<input type="checkbox"/>	<input type="checkbox"/>	Information only
				<input type="checkbox"/>	<input type="checkbox"/>	Information only

OK Cancel

User level Types:

- **Information only:** gives access to the Status menu  and Settings menu . (Level 2B according to EN54-2.)
- **Building officer:** gives access to the menus Test , Disable , Settings , Status , and Maintenance . (Level 2C according to EN54-2.)
- **Service personnel:** gives access to all menus. (Level 3A according to EN54-2.)

For more information regarding user names, passwords, user levels, logon to a control unit, etc. see EBLOne Operating Instructions, MEW03042.

It is highly recommended to change the default user names and passwords. If the same user names and passwords shall be used for the Gateway put checkmarks in the "EBLWeb access" column.


15.3.11. CONTROL GROUPS

Create control groups for activation of outputs. See section 10.14.6. CONTROL EXPRESSION on page 56.

Maximum 100 control groups.

15.4. THE TOOLS MENU

The EBLWin menu "Tools" is used, when the PC is connected to the EBLOne control unit, for example to download / backup SSD. Some commands are disabled and greyed out if you have not logged on to the control unit.

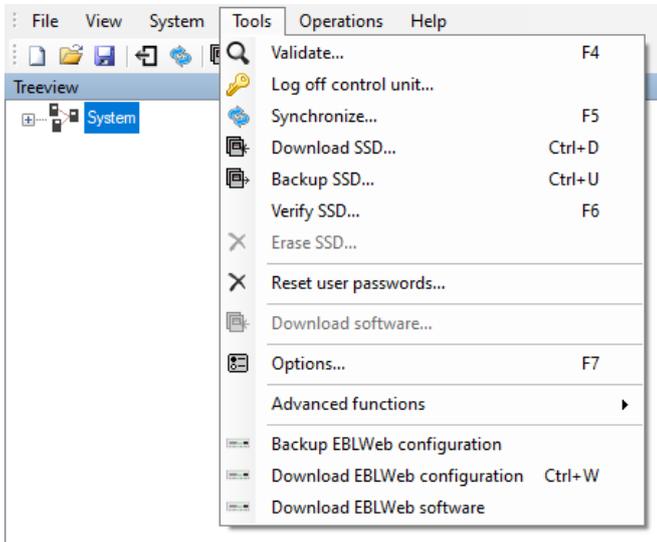

15.4.1. VALIDATE

The SSD is validated automatically before downloaded to the EBLOne but can also be done via this menu.

15.4.2. LOG ON CONTROL UNIT

Log on / Log off to an EBLOne. During logon EBLWin will compare the PC:s clock with the clock in the control unit. If the difference is more than five minutes a message box will be shown allowing the user to set the clock in the control unit to the PC:s clock.

An EBLWin key 5094 must be plugged in a USB port on the PC / Laptop. Make sure you have the EBLWin key driver installed on your computer. The latest HASP driver can be downloaded from <https://cpl.thalesgroup.com/software-monetization/sentinel-drivers>.

15.4.3. DOWNLOAD SSD

(When connected and logged on to an EBLOne.) For downloading of SSD to one EBLOne control unit.

15.4.4. BACKUP SSD

(When connected and logged on to an EBLOne.) For backup (upload) of SSD from the EBLOne control unit. Backup can also be done from the SSD created by the Wizard.

15.4.5. VERIFY SSD

(When connected and logged on to an EBLOne.) The SSD stored in the EBLOne control unit is compared with the SSD open in EBLWin. If they are the same, the checksums should also be the same.

15.4.6. ERASE SSD

(With EBLOne in boot mode, see procedure SET THE MAIN BOARD IN BOOT MODE on page 147.)

The SSD stored in the EBLOne control unit will be erased. Also the SSW (see Operating Instructions) will be erased.

An EBLWin key 5094 must be plugged in a USB port on the PC / Laptop. Make sure you have the EBLWin key driver installed on your computer. The latest driver can be downloaded from <https://cpl.thalesgroup.com/software-monetization/sentinel-drivers>.

15.4.7. RESET USER PASSWORDS

(When connected and logged on to the EBLOne.) If any password has been changed via the control unit menu or via a Gateway, it will be reset to the password downloaded via the SSD, i.e. the passwords in the EBLWin dialog box "User data".

15.4.8. DOWNLOAD SOFTWARE

(When connected and not logged on to the EBLOne). For download of S/W to the EBLOne control unit.

- EBLOne control unit - .bin file

For more information about downloading S/W via EBL Firmware Manager, see MEW02584.

15.4.9. OPTIONS

EBLWin settings. A Convention is selected the very first time EBLWin is opened. Can be changed if Level 2 is selected, see below. EBLWin language can be selected.

15.4.10. ADVANCED FUNCTIONS

Can be one of three alternatives:

- No Level selected: Alarm algorithm parameters cannot be changed.
- Level 1 selected: All alarm algorithm parameters except the fire alarm parameters can be changed.
- Level 2 selected (which require a special password): All alarm algorithm parameters can be changed. The convention for the open installation can be changed.

15.4.11. BACKUP EBLWEB CONFIGURATION

(When connected to the Gateway – TCP/IP.) Backup of the Gateway configuration.

15.4.12. DOWNLOAD EBLWEB CONFIGURATION

(When connected to the Gateway – TCP/IP.) Download of the Gateway configuration.


For more information on the Gateway, see chapter 8. GATEWAY – RS232 INTERFACE on page 39.

15.4.13. DOWNLOAD EBLWEB SOFTWARE

(When connected to the Gateway – TCP/IP.) Download of the Gateway software (S/W).

For more information on the Gateway, see chapter 8. GATEWAY – RS232 INTERFACE on page 39.

15.5. THE OPERATIONS MENU

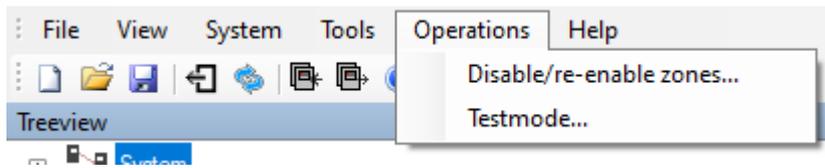

15.5.1. DISABLE / RE-ENABLE ZONES


To the right of the tree view, the "Disable / re-enable zones" tab can be available. Zones in a range (from zone - to zone) can be disabled/re-enabled. Time setting can be used to re-enable automatically.

15.5.2. TESTMODE

To the right of the tree view, the "Testmode" tab can be available.

15.6. COM LOOP ICON POP-UP MENU

The functions that are greyed out will need log in.

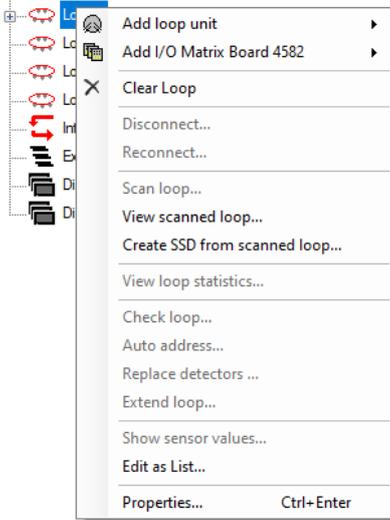

15.6.1. ADD LOOP UNIT


For information, see [5. COM LOOP UNITS](#) on page 17.

MOVE LOOP UNIT


Loop units can be moved between the main loop and the SUB-loops.

In the tree view, select the units to be moved (selected unit is marked blue). Press, and hold down, the button on the mouse, and drag the selected units between the main loop and the SUB-loop.

If several units are selected, the selected units need to be in sequence number.

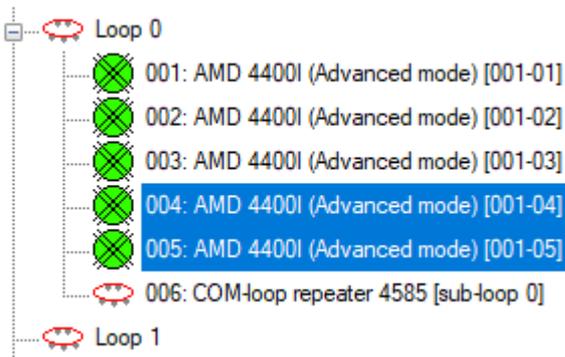

Two units are selected to be moved.

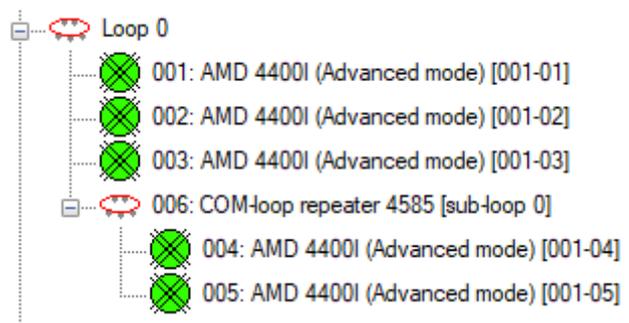

The units are moved to the SUB-loop.

The loop units sequence number must be in numerical order, see [5.2.1. SEQUENCE NUMBER](#) on page 20. When the loop units are moved between the main loop and the SUB-loop the sequence numbers will be rearranged automatically.

15.6.2. ADD I/O MATRIX BOARD 4582

Obsolete. See older version of Planning Instruction for information.

15.6.3. CLEAR LOOP

Will clear the loop from all units in EBLWin.

15.6.4. DISCONNECT

Disables the COM loop from EBLWin.

15.6.5. RECONNECT

Re-enables a disconnected COM loop from EBLWin.

15.6.6. SCAN LOOP

Scan the COM loop from EBLWin. Scan loop function is used with Loop tester 1105.

15.6.7. VIEW SCANNED LOOP

Import a scanned COM loop xml-file to view the loop in EBLWin.

15.6.8. CREATE SSD FROM SCANNED LOOP

Adds the units that are scanned on the COM loop to the SSD.

15.6.9. VIEW LOOP STATISTICS

Possibility to view, save and print all loop statistics for one loop. The information is automatically updated every 5th second.
Number of pollings is the number of pollings / "questions" sent out by the control unit to all the units connected on the COM loop.
Parity fault is the received number of parity faults and % (faults in relation to pollings).
Number of bit faults is the received number of bit faults and % (faults in relation to pollings).
Number of no replay faults is the received number of answer faults / no answers and % (faults in relation to pollings).
Number of bit length fault is the received number of bit length faults and % bit length faults in relation to the pollings.

Item	Value
Date time	2023-01-12 10:37:59
Number of polls	0
Number of parity faults	0
Number of bit faults	0
Number of no reply faults	0
Number of bit length faults	0
Loop current	0 mA
Loop resistance	25 Ohm

15.6.10. CHECK LOOP

See section 11.22. CHECK LOOP on page 90, for more information.

15.6.11. AUTO ADDRESS

See section 11.23. AUTO ADDRESS on page 103, for more information.

15.6.12. REPLACE DETECTORS

See section 11.24. REPLACE DETECTORS on page 106, for more information.

15.6.13. EXTEND LOOP

See section 11.25. EXTEND LOOP on page 107, for more information.

15.6.14. SHOW SENSOR VALUES

Possibility to view, save and print all sensor values for one loop.

Time	Name	Technical number	Zone-address	Text	Momentary (smoke)	Weekly avg. (smoke)	Performance factor (smoke)	Min (smoke)	Max (smoke)	Momentary (heat)
2023-02-08 12:24:45	AMD 4400I (Advanced mode)	000001	001-01		0.0	0.0	0.0	0.0	0.0	0.0
2023-02-08 12:24:47	OPT 4401I (Advanced mode)	000003	001-02		0.0	0.0	0.0	0.0	0.0	0.0
2023-02-08 12:24:48	AMD 4400 (Advanced mode)	000005	001-03		0.0	0.0	0.0	0.0	0.0	0.0

15.6.15. EDIT AS LIST

This function offers possibility to edit the properties of all units on one loop in a list, instead of opening the properties window of each unit.

Address	Name	SCI Sequence No	Zone	Address	Text	Disable time channel	Alert annunciation time channel	Dependent time channel
1	AMD 4400I (Advanced mode)	0	1	1		Always off	Always off	Always off
2	ASB 4479	0	0	0				
3	OPT 4401I (Advanced mode)	1	1	5		Always off	Always off	Always off
4	Visual alarm device with isolator 4381	2	0	0				
5	AMD 4400 (Advanced mode)	0	1	4		Always off	Always off	Always off

15.6.16. PROPERTIES



Properties for COM-loop.

See [20.1. CALCULATION OF CABLE LENGTH IN EBLWin](#) and [21.1. TOTAL CURRENT CONSUMPTION FOR LOOPS](#).

15.7. LOOP UNIT ICON POP-UP MENU

In the tree view, right click on a loop unit icon.

The loop unit icon pop-up menu is depending on the functions of the loop unit.

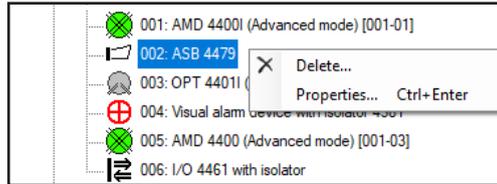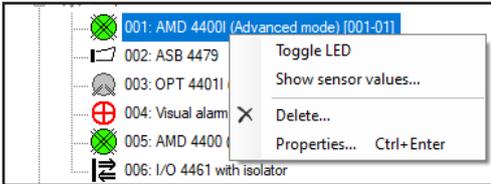


15.7.1. TOGGLE LED

It is possible to identify a loop unit by turning on/off its LED via EBLWin.


The following units support the function "Toggle LED": 2840, 2841, 3308, 3309, 4400, 4400I, 4401, 4401I, 4402, 4408, 4409, 4433, 4439, 4461, 4462, 4611, 4614, 4464, 4466, and 4585.

The unit must be set to NORMAL mode or Advanced mode.

- In EBLWin, go to the loop unit in the tree view.
- Right click.
- Select item 'Toggle LED'.

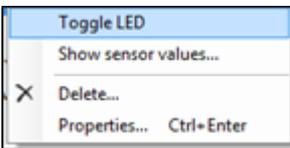

- The LED on the unit is lit as if it would be indicating a fire alarm, steady or flashing, depending on which type of unit. In EBLWin tree view the 'Toggle LED'-function is indicated by 'LED ON' for the activated loop unit.

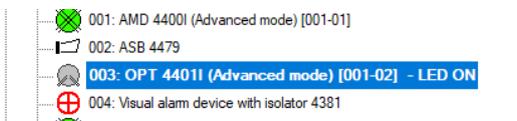

- To de-activate the function, right click the on the loop unit and select item 'Toggle LED' again.

Only one LED at a time can be lit, per control unit. If a LED is turned on while another one is already on the first one turns off. If a LED is turned on, and then not turned off, it will turn off automatically after one hour.

If the control unit is in fire alarm state, the toggle LED function is not available.

If the control unit goes into fire alarm state due to another alarm point, while a LED is lit, the LED will turn off.

15.7.2. SHOW SENSOR VALUES

Possibility to view, save and print the sensor value for one sensor, in graph or table.

15.7.3. DELETE

Delete the unit.

15.7.4. PROPERTIES

Each addressable unit has a properties window.

Here it is possible to set for example; technical address, zone address, algorithm, input type, output type, and control argument.

Two examples of properties windows.

16. DOWNLOAD SSD

The PC program EBLWin is used for creating the Site Specific Data (SSD) and to download it to the EBLOne control unit. When the installation is ready, all units connected and the power is turned on, the SSD download can take place.

16.1. VERSION CONTROL FOR SSD DOWNLOAD


When the Download SSD window is opened in EBLWin, EBLWin checks that the SSD file originates from the SSD in the control unit. The check is started automatically when the download SSD window is opened. It is not possible to start SSD download until the check is completed (or timeout occurs).

If the check shows that the SSD doesn't match the SSD in the control unit, there will be a dialog window, asking if the download shall proceed anyway.

- a) Connect the PC to the USB port (type "C") in one control unit.
- b) Start EBLWin and open the wanted installation.
- c) Log on to the control unit via the PC (EBLWin).

An EBLWin key 5094 must be plugged in a USB port on the PC / Laptop. Make sure you have the EBLWin key driver installed on your computer. The latest HASP driver can be downloaded from <https://cpl.thalesgroup.com/software-monetization/sentinel-drivers>.

- d) In EBLWin, go to **Tools** menu / **Download SSD...** Select the control unit.

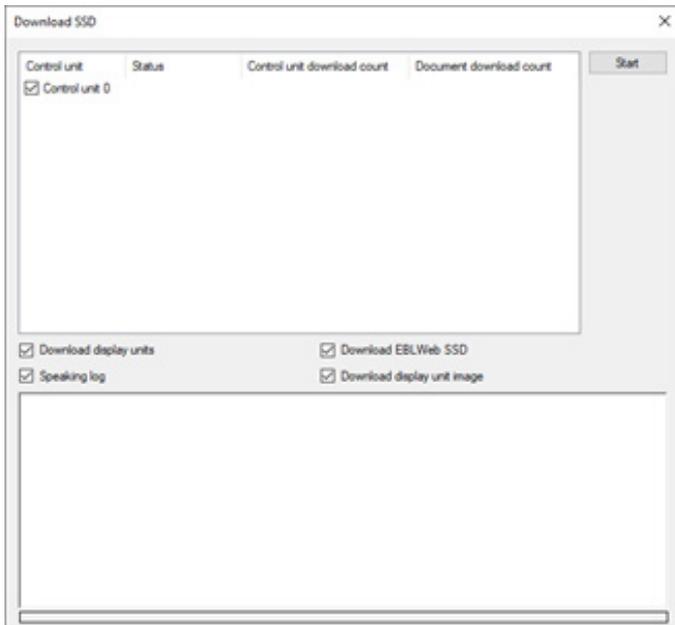

- e) Click **Start** to start the download. A progress bar will indicate the download.

- f) "Control unit download count" / "Document download count" numbers should match.
See 16.1. VERSION CONTROL FOR SSD DOWNLOAD on page 142.

The download is not completed until the following box is shown:



- g) Click OK.

After the SSD download the control unit will restart. A number of faults might then be generated, for example due to not connected units.


DISCONNECTED AT STARTUP

In the COM loop Properties dialog box it is possible to select the option "Disconnected at startup". The COM loop will then be disabled directly after the download restart and therefore not generate any faults.

A COM loop "Disconnected at startup" can be re-connected via Disconnect menu  >  >  but it will then be disconnected again after next SSD download. Finally the SSD for that control unit has to be downloaded again with the option "Disconnected at startup" not selected.


16.2. DOWNLOAD TO CONTROL UNIT

Start the SSD download from EBLWin according to section [16. DOWNLOAD SSD](#) on page 142. A text message will be shown in the control unit display: "SSD Downloading". When the download is completed and the control unit restart, a fault message will be shown on the event tab page:

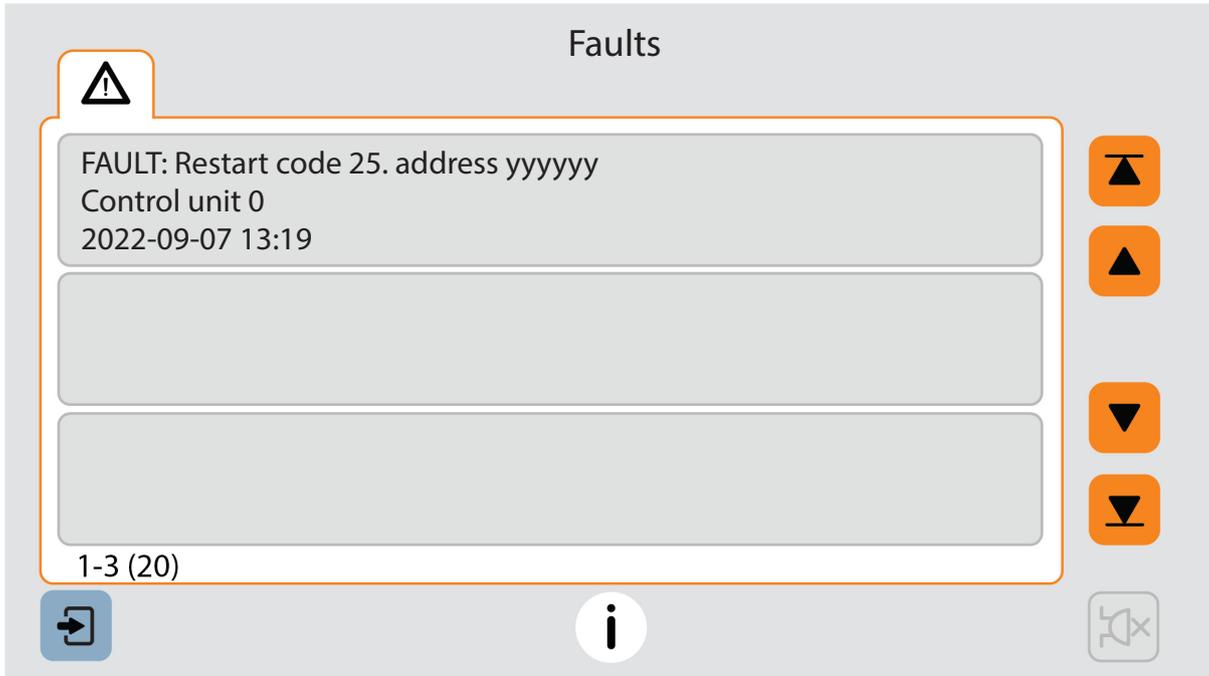

Code 25 indicates a normal restart after the SSD download.

Acknowledge the restart fault. If the download was not ok another fault will be generated.

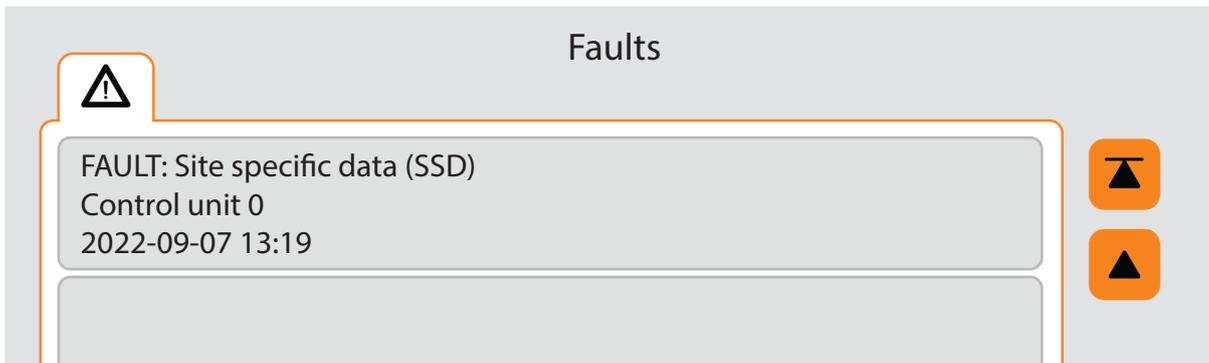

This text message means that the SSD have not been downloaded properly. Then a new download must be performed.

16.3. ALARM TEXTS DOWNLOAD

Each alarm point, zone and zone line input can have a unique user definable alarm text programmed via EBLWin. All alarm texts are included in the SSD, and downloaded with the SSD, via EBLWin.

See also section [11.2. ALARM TEXTS](#) on page 68.

17. DOWNLOAD SOFTWARE (S/W)

The latest software (S/W) version of the EBLOne system program is factory downloaded before the delivery. Due to continual development and improvement, different S/W versions can be found.

The valid S/W version for the main board, can be read in the Control unit information menu  >  > , or via EBLWin. On site, new S/W can be downloaded via EBLWin.

Spare part boards are normally delivered without S/W. Manual boot mode is required the first time software is downloaded to the board.

17.1. FIRMWARE MANAGER

To download a new software (system program) version, a PC, EBLWin, and EBL Firmware Manager are used. The .bin file that shall be downloaded contains software for the main board and a text file.


EBL Firmware Manager program is installed separately, and is available in different versions, see Technical description MEW02584. The procedure below describes download with EBL Firmware manager version 1.3.4 or newer.

EBLOne, require EBL Firmware Manager version 1.3.2 or newer to download S/W, however from EBLOne 3.6 the Firmware Manager version 1.3.4 or newer is highly recommended.

Visual C++ Redistributable Packages must be installed on your computer before downloading software. Download C++ from this page: <https://www.microsoft.com/en-us/download/details.aspx?id=40784>

The "USB driver for 5054 and EBLOne" must be installed on your computer before using the EBL Firmware manager. The driver can be downloaded from www.panasonic-fire-security.com.


- a) Connect the PC to the USB connector in the CIE and start EBLWin. Do not logon.
- b) Check that the EBLWin key is plugged in.
- c) Select **Tools** menu / **Download Software...** to open the **EBL Firmware Manager**.
- d) Select the EBLOne / Display unit (5054) v. \geq 3.4 tab.

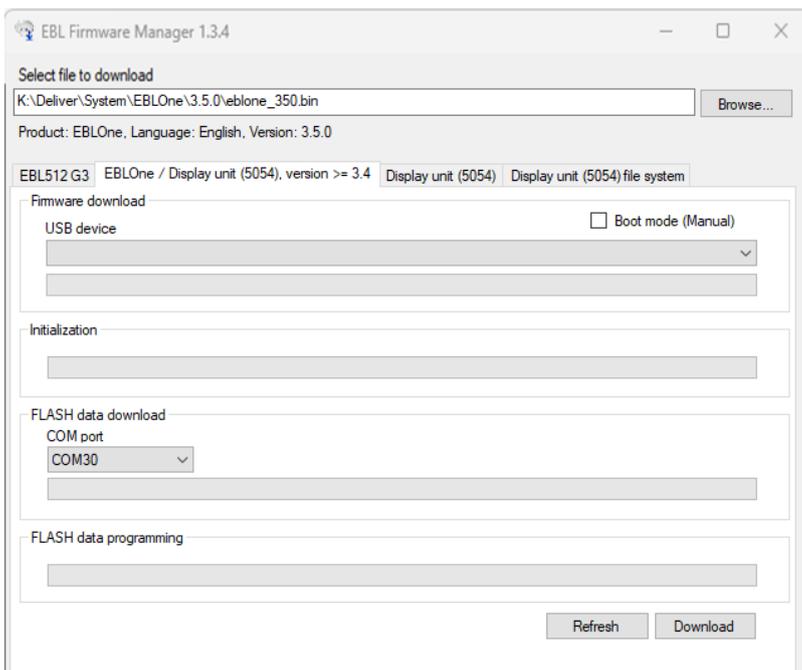

- e) Click **Browse** and select the path and the Software file name, for example eblone_380.bin (380 = version 3.8.0).
- f) Select the COM port to be used on your PC.

Check in Control Panel / Device Manager / Ports (COM & LPT).


- g) Click **Download** to start the download. The progress bars will indicate for each step of the download.

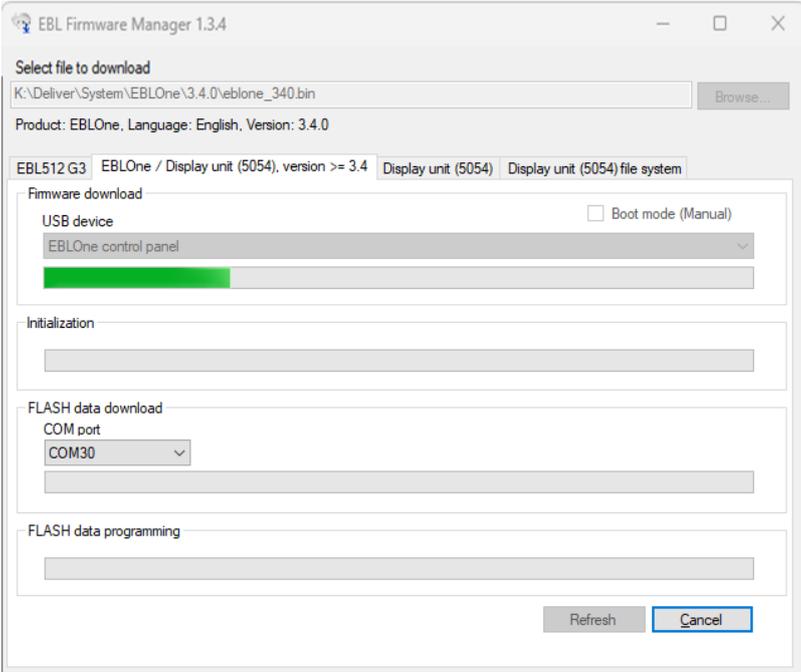

The SW download procedure goes through five steps:

1. Putting the CPU in boot mode
 - **Boot mode (Manual) unchecked:** Automatic boot mode by command from EBL Firmware Manager
 - **Boot mode (Manual) checked:** Automatic boot mode shall normally be used but it requires a running software in the unit. If that is not the case, then manual boot mode must be used, see [DOWNLOAD FIRMWARE WITH MANUAL BOOT MODE](#) on page 147.
2. Download of the actual software to the CPU:s internal flash memory. This download is performed using the CPU as a USB DFU device. During this time the display is black because the CPU can not communicate with the display when it is in boot mode.
3. The CPU is restarted and the downloaded software starts up. The display turns on with a grey background but since the data in the external flash memory is inconsistent with the software nothing can be shown on the display.
4. Download of texts, images and other data to the external flash memory. This download is performed using the normal COM-port.
5. Waiting for the external flash memory to finish its programming sequence.

When the download is completed, the following dialog box is shown.

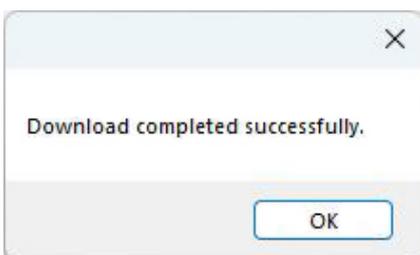


- h) Click OK.

After the SW download the display unit will restart.


DOWNLOAD FIRMWARE WITH MANUAL BOOT MODE

If something unforeseen happens and the software can not be downloaded, whit the procedure above, it is possible to download the software by setting the unit in boot mode manually.

- a) Set the main board in boot mode, see SET THE MAIN BOARD IN BOOT MODE on page 147.
- b) Check the checkbox 'Boot mode (Manual)' and click Refresh.
- c) Select the unit in the USB device dropdown.
- d) Click **Download** to start the download.

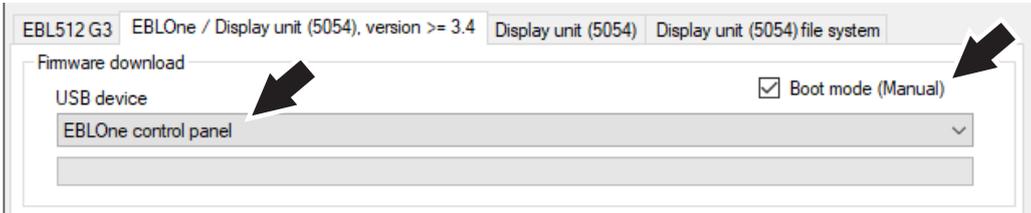

- e) When the download of the internal memory is finished and the unit has started up the following dialog is shown:

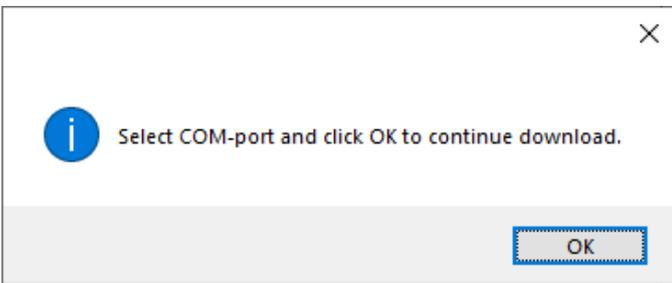


- f) Select the COM-port and click **OK**. The download will now continue.

Check in Control Panel / Device Manager / Ports (COM & LPT) | USB Serial Device (COMx).

SET THE MAIN BOARD IN BOOT MODE

The main board may need to be manually set in boot mode.

- a) Shunt the jumper on JP5, see arrow.
- b) Make a restart by making a power off / power on restart.
- c) Remove BOOT jumper.

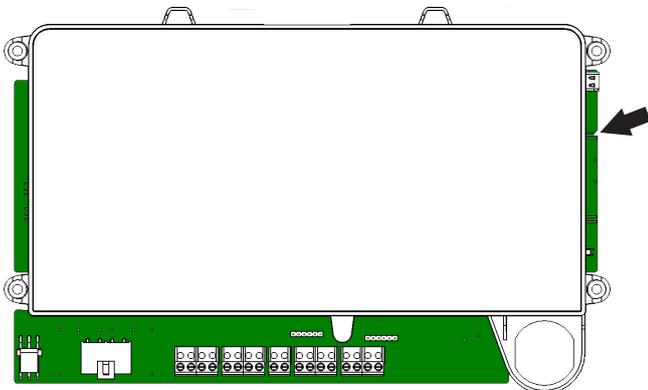

18. S/W VERSIONS

Due to continual development and improvement, different S/W versions can be found.

Different S/W versions can be found on different markets.

The S/W versions listed below were the valid ones when this document was written (the date of this document or date of revision).

S/W for:	Latest version	Required version
2000	3.8.0	3.8.0
EBLWin	3.8.0	3.8.0
5088 Gateway	3.8.0	3.8.0

The EBLWin version and the EBLOne and Gateway S/W version must be the same, at least the first two digits; 3.3.x -- 3.3.x.

19. CABLE TYPES

A fire alarm installation is a safety installation and it is important that the cables used are of correct types and according to national regulations, e.g. regarding cable colour, method of mounting, etc. Fire alarm cables should, when possible, be installed as far away from other cables as possible, in order to avoid disturbances from these.

The maximum cable length is depending on the cable type (area, twisted / not twisted pairs, screen / no screen), the units' current consumption, etc.

19.1. COM LOOP CABLES

Loop topology is used for highest safety, i.e. the cable, connected in the control unit, returns back to the control unit. In case of a break on the loop, communication in two directions starts.

See section [20.3. DIAGRAM OF CABLE LENGTH](#) on page 154 and the Technical description for the CIE.

Cable length is depending on the type and number of loop units, and so on. See chapter [20. COM LOOP CABLE LENGTH](#) on page 151.

Recommended halogen-free & flame-proof cable type:

COM loop: EQQYB Easy 2x1 mm

Feeder line: EQQYB Easy 10x2x1mm (twisted pair)

The cable type have the pair capacitance 70nF/km AT 800Hz, conductor resistance 24.5 ohm/km and the attenuation 0.6dB/km AT 800Hz.

If screened cable is used, the screen shall be connected together in each loop unit. The screened cable shall also be terminated in both ends to the CIE earth point.

In each loop unit, connect the screen so that the unscreened wires are as short as possible and twisted > six turns.

19.2. CONVENTIONAL ZONE LINE CABLES

Inputs to Multipurpose I/O unit 4461.

ELQRB 2 x 0.6 mm (0.3 mm²) or equivalent. Max. 50 ohm cable resistance (= 400 m cable length).

Max 50 nF conductor capacitance, max 1.0 mA detector current consumption.

19.3. ALARM DEVICE CABLES

Alarm devices (sounders, etc.)

ELQRB 2 x 0.6 mm (0.3 mm²) or equivalent.

ELQRB 10 x 2 x 1 mm (0.75 mm²) or equivalent, when feeder line is required.

19.4. OTHER CABLES

External indicator (LED), door release magnets, etc. E.g: ELQRB 2 x 0.6 mm (0.3 mm²) or equivalent.

20. COM LOOP CABLE LENGTH

Depending on the type of units and the number of units, the total current consumption will vary and this will affect the cable length. The units should be distributed as even as possible on the COM loop.

20.1. CALCULATION OF CABLE LENGTH IN EBLWin

In EBLWin it is possible to get an approximate calculation of the cable length. EBLWin will notify if the current consumption is too high.

Right click on the com loop in EBLWin. Select Properties...The dialog window 'Properties for COM-loop' will open.

In the Cable length tab, it is possible to:

- Add the number of external LED's on the loop.

Maximum 5 external LEDs on the loop will be lit at the same time.

- Add input for conductor resistance
- Add input for feeder line conductor resistance
- Add input for feeder line length
- Move the position of the last unit (1) in A-direction and the last unit (2) in B-direction on the loop by dragging the circles. The distance is altered.

Approx. possible COM loop cable length and max allowed COM loop resistance and max allowed COM loop SB conductor resistance is calculated automatically based on above input parameters.

The COM loop SB conductor resistance is calculated with respect to the fact that all isolator resistance is located on the SA line.

By adding a SUB-loop to the COM loop, the cable length can be extended by up to 1100 m.

Properties for COM-loop

Name: Loop 0

Disconnected at startup


Cable length | Summary of loop units

Number of 2218 on the loop	0
Number of 4418 in NORMAL mode on the loop	0
Conductor resistance	24.5 ohm/km
Feeder line conductor resistance	24.5 ohm/km
Feeder line length	200 m
Approx. possible COM loop cable length	1848 m
Max allowed COM loop resistance	110 Ohm
Max allowed COM loop SB conductor resistance	55 Ohm

Diagram labels: Feeder line 200 m, Loop 858 m, 448 m.

Buttons: OK, Cancel, Apply

Arrows 1 and 2 point to circles on the loop diagram.

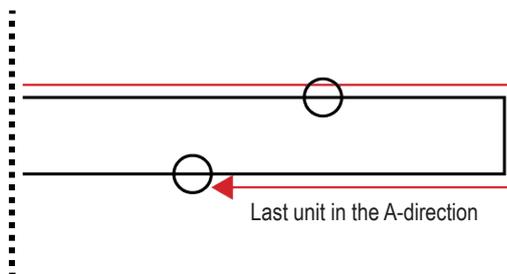


Press Apply to calculate new value input.

It is possible to switch the loop resistance monitoring on/off via a checkbox when level 1 is activated.

To disable the function 'Monitor loop resistance':

- a) Go to EBLWin menu Tools / Advanced functions / Level 1.
- b) Activate Level 1. The checkbox 'Monitor loop resistance' will appear in the properties for COM loop.

Checkbox not marked = This function is disabled, which means the loop resistance will not be monitored

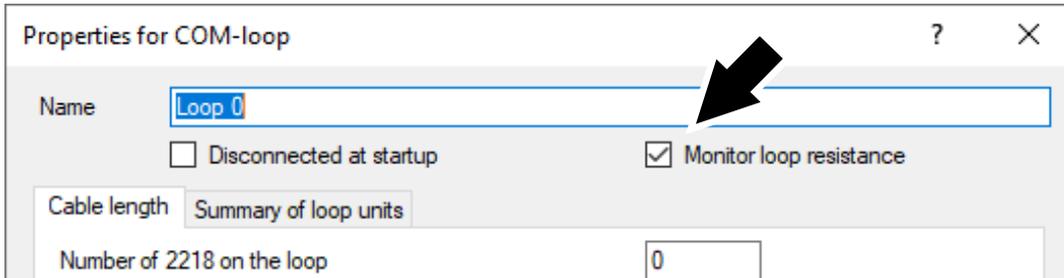

20.2. CALCULATION OF CABLE LENGTH WITH GRAPHS

See the graphs in [20.2.1. GRAPHS - MAXIMUM CONDUCTOR RESISTANCE](#) on page 153.

The information in this chapter is for reference only. The values calculated by EBLWin shall be followed.

One of the graphs in the figure has to be used depending on which type of units that are connected to the COM loop. Start checking the terms below for the Graphs.

Maximum loop current: 350 mA

Voltage on the loop terminals: 19V - 30V

YELLOW GRAPH

This graph shall normally be used.


BLUE GRAPH

Must be used when the loop contains at least one 4461 unit where the monitored input is used as zone line input. Must also be used when the loop contains at least one 4381.

20.2.1. GRAPHS - MAXIMUM CONDUCTOR RESISTANCE

Graphs showing the total conductor resistance in relation to the COM loop units' total current consumption.

Maximum conductor resistance

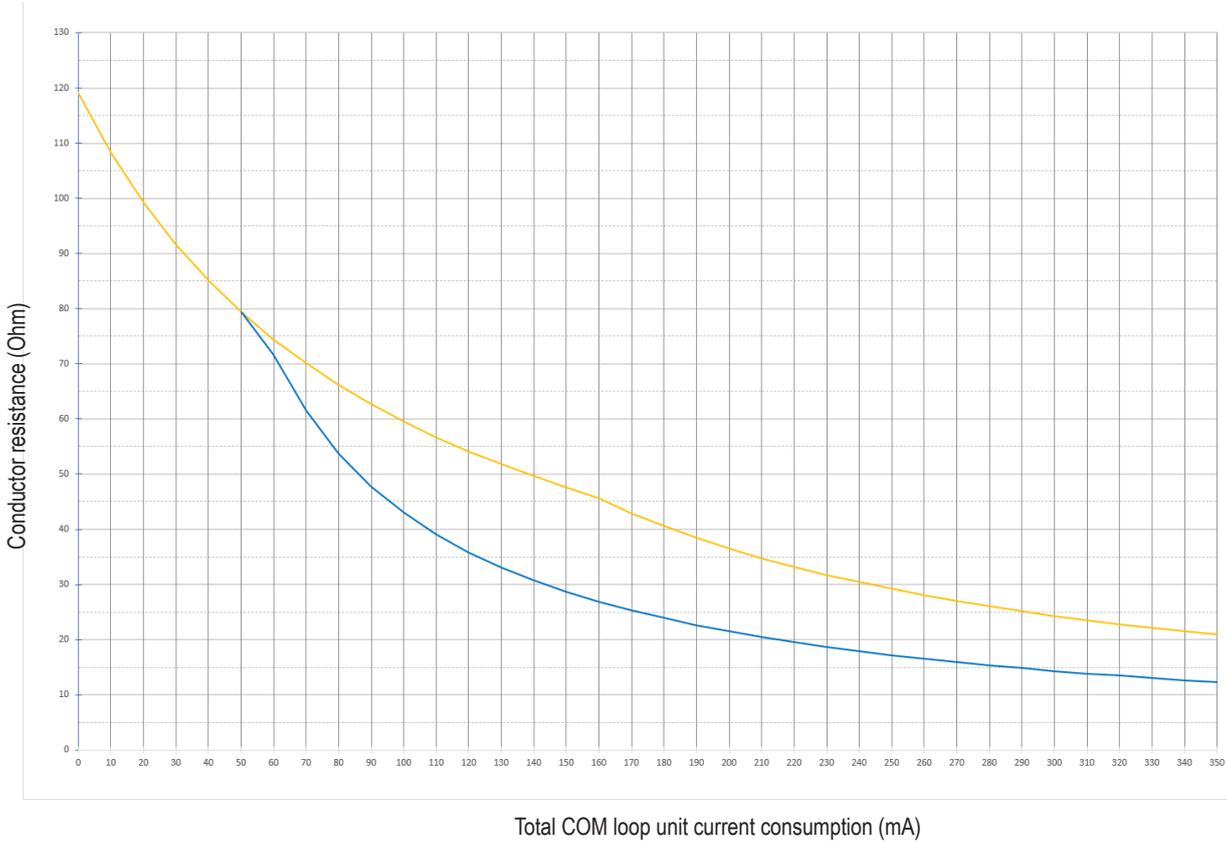


- Normal
- With 4461 used as zone line input or loop contains 4381

The loop resistance and the cable length must not exceed the values in the graph.

The loop resistance will be:

$$R = 2 \times r_{c-c} + 0.08 \text{ ohm for each short circuit isolator}$$

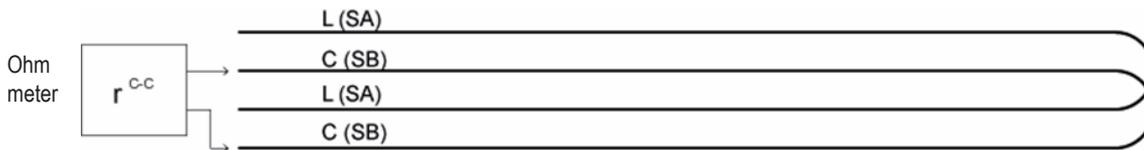


20.3. DIAGRAM OF CABLE LENGTH

The number and type of units, cable installation, external disturbances, might affect the cable resistance and capacitance and also the communication.


All calculated values are consequently approximate values.

- A) Last unit when communication in A-direction
- B) Last unit when communication in B-direction
- LA Cable length when communication in A-direction
- LB Cable length when communication in B-direction
- EBL EBLOne
- DB Distribution box
-  Detector / alarm point

NO FEEDER LINE

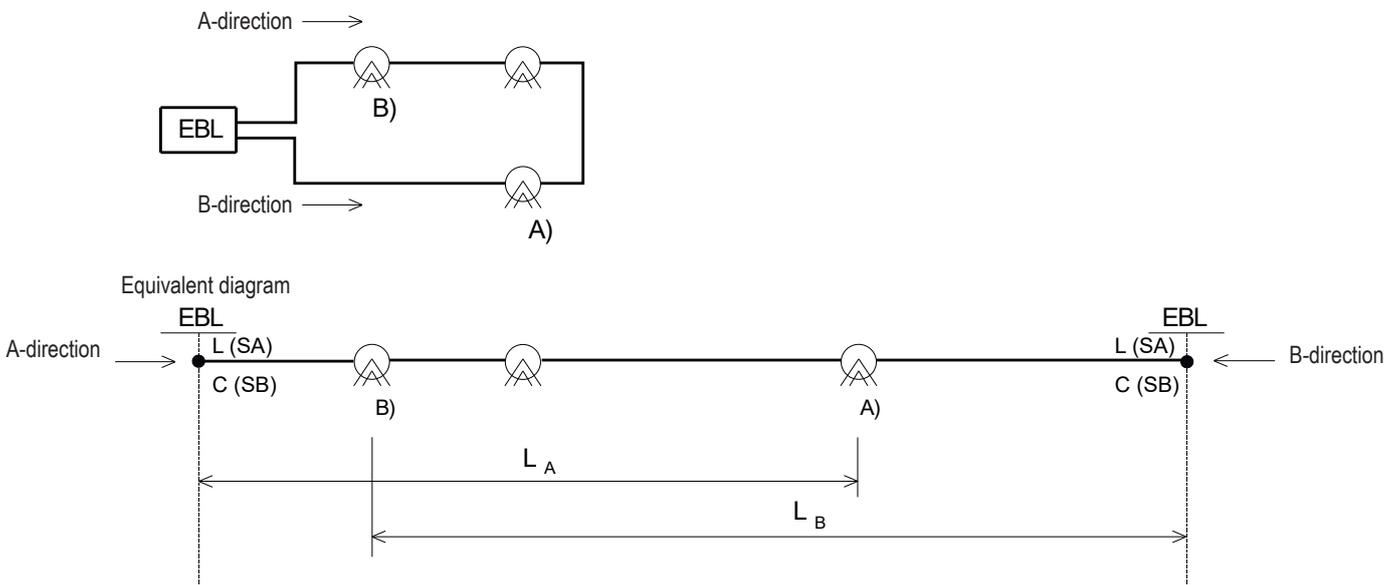

WITH FEEDER LINE

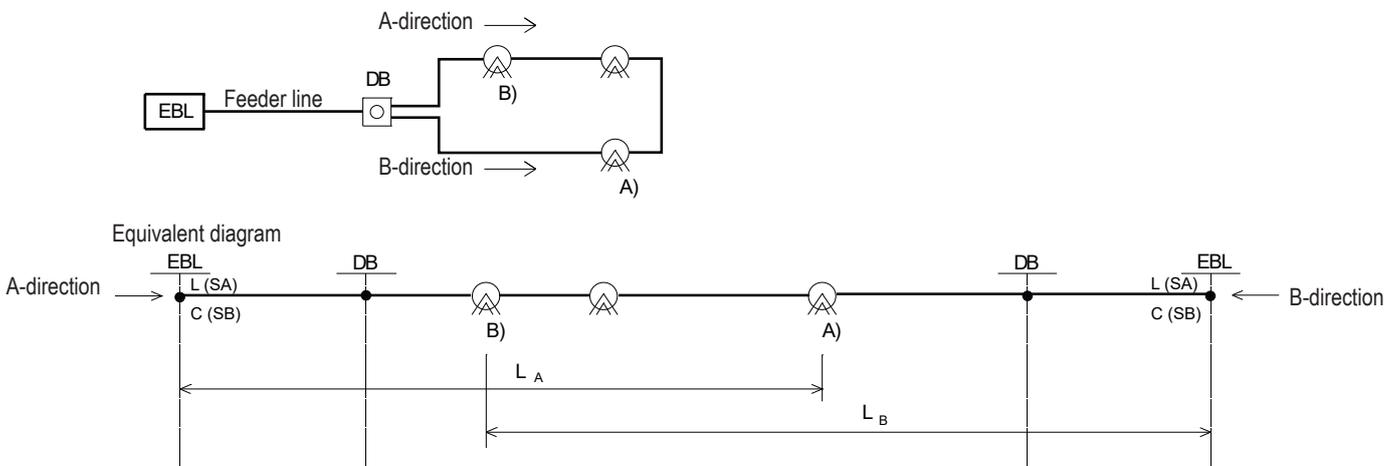

21. CURRENT CONSUMPTION

In EBLWin it is possible to get a calculation of the current consumption for the loops, control units, and External power supply. EBLWin will notify if the current consumption is too high.

The current consumption for each unit is found in the Technical Description respectively.

21.1. TOTAL CURRENT CONSUMPTION FOR LOOPS

Right click on the com loop in EBLWin. Select Properties...The dialog window 'Properties for COM-loop' will open. The window will show the quiescent and maximum current consumption for the COM loop units connected on that COM loop.

In the Summary of loop units tab, it is possible to:

- View the amount of each type of loop unit.
- View the quiescent current consumption of each type of loop unit.
- View the maximum current consumption of each type of loop unit.
- View the total of each of these categories on the main loop.

Type	Amount	Quiescent consumption	Max consumption
OPT 4401	1	0,3	1,3
AMD 4400I	1	0,3	1,3
4585	1	5,7	5,7
Total	3	6,4	8,4

The current consumption for the main loop will not include the current consumption for the SUB-loop. To see the current consumption for the SUB-loop, select Properties for the COM-loop repeater 4585.


Maximum 5 activated zone interfaces per COM loop, in order to save current consumption on the COM loop. When the sixth zone interface goes into alarm state the control unit will automatically disable it after latching the alarm. This applies to unit 4461.

Maximum 5 external LEDs per loop will be lit at the same time. The current consumption for the external LEDs will be included in the 'Total' current consumption.

21.2. INTERNAL CURRENT CONSUMPTION FOR CONTROL UNITS

Right click on the control unit in EBLWin. Select Properties... The dialog window `Control unit properties` will open. In the Current consumption, internal tab, it is possible to:

- View the calculated internal current consumption based on what is configured in the site-data; loop-units, Gateway, and so on.

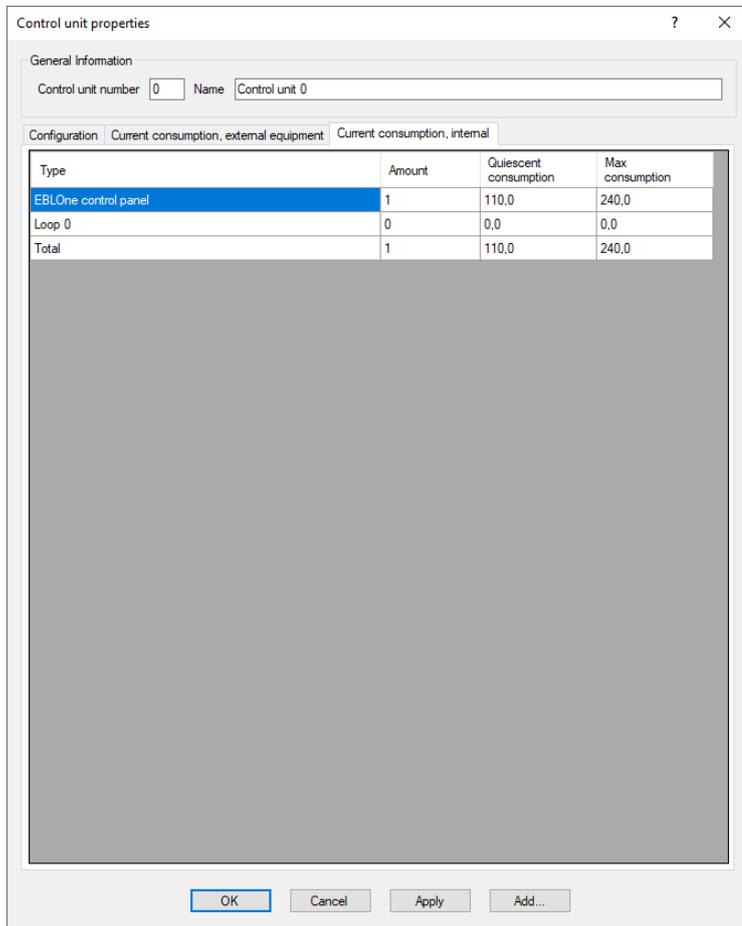

21.3. EXTERNAL CURRENT CONSUMPTION FOR CONTROL UNITS

Right click on the control unit in EBLWin. Select Properties... The dialog window `Control unit properties` will open.

In the Current consumption, external equipment tab, it is possible to:

- Add input for external consumption values for output S1. Either directly on respective output or in Control Unit properties.
- Add input for external equipment consumption values for 24V output for routing/external equipment.
- Add description text for routing/external equipment and ATR/FTR outputs. The description text will be shown in the installation report.

Control unit properties

General Information
Control unit number: 0 Name: Control unit 0

Configuration | Current consumption, external equipment | Current consumption, internal

	Quiescent	Alarm
Output S1	0 mA	0 mA
PS1		
24V Output PS1 Routing Equipment	0 mA	0 mA
Description	<input type="text"/>	
PS2		
24V Output PS2 External Equipment	0 mA	0 mA
Description	<input type="text"/>	
Alarm transmitter ATR	<input type="text"/>	
Description	<input type="text"/>	
Fault transmitter FTR	<input type="text"/>	
Description	<input type="text"/>	

Buttons: OK, Cancel, Apply, Add...

Press Apply to calculate new value input.

CURRENT CONSUMPTION FOR CONTROL UNITS

Right click on the control unit in EBLWin. Select Properties...The dialog window `Control unit properties` will open.

In the Configuration tab, it is possible to:

- View the Calculated total current consumption for the control unit. It is a sum of the configuration, the internal and external consumption.
- Calculate required battery capacity by input of required backup time. The "Total required battery capacity" calculation is based on one battery.

Control unit properties

General Information
Control unit number: 0 Name: Control unit 0

Configuration | Current consumption, external equipment | Current consumption, internal

Misc
 Use Prewarning

Current consumption

	Quiescent	Alarm
	110 mA	240 mA

Battery

	Quiescent	Alarm
Required battery backup time	24 hr	30 min
Required battery capacity	6.21 Ah	0.28 Ah
Total required battery capacity	6.49 Ah	

OK Cancel Apply Add...

Press Apply to calculate new value input.

If the battery calculation shows a need for more than 17 Ah, a second battery is needed.

21.4. CURRENT CONSUMPTION FOR EXTERNAL POWER SUPPLY

Right click on the External power supply in EBLWin. Select Properties...The dialog window `4466 External power supply` will open. In the dialog window it is possible to:

- Add input for external current consumption values
- Add input for required battery backup time
- View the calculated required battery capacity
- View the calculated total required battery capacity

4466 External power supply

General Information

Technical address Name

Short circuit isolator

Sequence number

Current consumption

	Quiescent	Alarm
	<input type="text" value="0"/> mA	<input type="text" value="0"/> mA

Battery

	Quiescent	Alarm
Required battery backup time	<input type="text" value="24"/> hr	<input type="text" value="30"/> min
Required battery capacity	<input type="text" value="0"/> Ah	<input type="text" value="0"/> Ah
Total required battery capacity	<input type="text" value="0"/> Ah	

OK Cancel Apply Add...

Press Apply to calculate new value input.

21.5. VALIDATE RESULTS

Go to Tools menu / Validate to open the tab 'Validate results'.

In this tab it is possible to view if the current consumption is too high.

Offending object	Category	Fault description
control unit 00, voltage output 0	Warning	Current consumption is empty for output in use.
control unit 00, loop 0	System error	Current consumption is too high. Limited to 350 mA
	Information	Validation completed.

It is possible to save the Validate result as an HTML file. When the Validate result is saved as HTML, a new tab will be opened.

If Microsoft Excel is installed on the computer, it is also possible to export the Validate result to Microsoft Excel, where the list can be sorted.

Deviations Selected loop Validate results **Validate results**

Validate results

Offending Object	Category	Fault Description
control unit 00, voltage output 0	Warning	Current consumption is empty for output in use.
control unit 00, voltage output 1	Warning	Current consumption is empty for output in use.
control unit 00, voltage output 2	Warning	Current consumption is empty for output in use.
control unit 00, voltage output 3	Warning	Current consumption is empty for output in use.
	Information	Validation completed.

This report was generated by EBLWin 3.1.0, 2023-03-21 09:34.

Date _____

Signature _____

- Back
- Forward
- Save background as...
- Set as background
- Copy background
- Select all
- Paste
- Create shortcut
- Add to favorites...
- View source
- Encoding >
- Print...
- Print preview...
- Refresh
- Export to Microsoft Excel**
- Send to OneNote
- Properties

21.6. CURRENT CONSUMPTION REPORT

It is possible to create a current consumption and battery report that can be printed.

- a) Go to File menu / Report / Current consumption.
- b) Add a file name and press Save. The report will appear as a tab in EBLWin.

Deviations Selected loop **Untitled**

Untitled - Current consumption report

Control unit 0

Total required battery capacity: 2.76 Ah

Current consumption

Total

Quiescent	Active
110 (mA)	240 (mA)

Battery

	Quiescent	Active	Total
Required battery backup time	24 hr	30 min	
Required battery capacity	2.64 Ah	0.12 Ah	2.76 Ah

Current consumption, internal

	Quiescent	Active
EBLOne control panel	110 mA	240 mA
Loop 0	0 mA	0 mA
Total	110 mA	240 mA

Note!

Current consumption, external equipment

	Quiescent	Active	Description
Voltage Output 1	0 mA	0 mA	
24V Output PS0 Routing Equipment	0 mA	0 mA	

The Current consumption report will present:

- Total
- Battery
- Internal
- External equipment
- Loop 0
- External power supply 4466 units

To print a report, right click on the report page and select print...

Some national regulations require reports regarding current consumption, with the measured value, not the calculated. In such a case an ampere meter shall be used to read a true value.

Turn off the main power source (230 V AC) and use a "clamp current meter" on one of the wires between one of the batteries and the main board, to read the true total control unit current consumption.

21.7. CURRENT CONSUMPTION FOR UNITS – OVERVIEW

This chapter is for reference only. EBLWin performs all calculations automatically.

The different loop units have different current consumption, and some units have much higher current consumption in "active state".

To check the current consumption on the COM loops, cable lengths, etc. the tables below can be used. See also chapter [20. COM LOOP CABLE LENGTH](#) on page 151.

To get a total current consumption overview and to check if the battery capacity is enough, the tables below can be used. The current consumption is normally shown at nominal voltage (24 V DC), in Normal state (quiescent) and in Alarm state (active). See also chapter [22. POWER SUPPLY](#) on page 166.

A grey row in the tables = obsolete unit, can be found in old installations.

CIE units	Normal state (mA)	Alarm state (mA)
Control unit 2000 ¹	110	240
Gateway 5088	75	75

The control unit values above are measured during battery back-up.

1) Backup battery powered. COM loops and ext. equipment not included.

COM-loop units	Normal state (mA)	Alarm state (mA)
Analog heat detector 3308 + analog base 3312xx ²	0.3	2.3
Analog heat detector, enclosed 3309	0.2	1.7
Analog multi detector 4400 + analog base 3312xx	0.3 ³	1.3 ⁴
Analog multi detector 4400I + analog base 4412xx	0.3 ³	1.3
Analog smoke detector 4401 + analog base 3312xx	0.3 ³	1.3 ⁴
Analog smoke detector 4401I + analog base 4412xx	0.3 ³	1.3
Analog multi detector with CO 4402 + analog base 3312xx	0.3 ³	1.3 ⁴
Analog heat detector 4408 + analog base 3312xx ²	0.3	2.3
Analog heat detector, enclosed 4409	0.2	1.7
Addressable manual call point with isolator 4433 / 4439	1.6	2.7
Addressable manual call point type B with isolator 4443 / 4444	1.6	2.7
Local Alarm Acknowledgement Unit 4445	2	5
Addressable base station for wireless units 4620	6	6
Aspirating smoke detector Aspect GRIZZLE AE2010 G-P	2.1	2.1
Aspirating smoke detector Aspect LAZEER AE2010 L-P	2.1	2.1
230 VAC relay output unit 4460	1.7	1.7
Addressable multipurpose I/O unit with isolator 4461	4.3 5.8 ⁵	4.3 15 ⁵
Addressable 2 inputs unit with isolator 4462	≤ 3.0	≤ 3.0
Two voltage output board 4464	5.3	5.3
External power supply 4466	6.0	6.0
Addressable siren with isolator 4487	2.5	10
Addressable sounder base 3379	0.75	max. 2.5 ⁶
Addressable sounder base 4479	≤ 0.75	max. 3.5 / 1.5 <small>LOW POWER</small>
Addressable VAD with isolator 4381	1.6	8

Max 5 activated zone interfaces per COM loop, in order to save current consumption on the COM loop. This applies to unit 4461.

- 2) External indicator (LED) current consumption. 2216: add 2 mA. 2217 / 2218: add 1 mA.
- 3) Plus 0.025 mA if green polling LED is used.
- 4) Plus 0.5 mA if External indicator (LED) is used (e.g. 2218).
- 5) Only if the input In 0 is used as a zone line input
- 6) High sound output: 4.5 mA.

COM-loop units	Normal state (mA)	Alarm state (mA)
Addressable wall VAD with isolator 4480	2.5	max. 65
Addressable ceiling VAD with isolator 4481	2.5	max. 65
Addressable wall VAD with siren 4482	2.5	max. 68
External indicator 4418	1.6	5.0
Light indicator 4383	1.5	3.5 ± 0.5
COM-loop repeater 4585	< 6	< 6
Exit light MX 25	2.3	2.3
Exit light MX 40	2.3	2.3
Emergency light MX Light	2.3	2.3

Other units	Normal state (mA)	Alarm state (mA)
Routing equipment (Fire brigade tx / Fault tx) Acc. to the producer	Acc. to the producer	Acc. to the producer
Alarm devices (sounders, etc.)	0	Acc. to the producer
Door release magnets	Acc. to the producer	0

21.8. CURRENT CONSUMPTION – THEORY

This chapter is for reference only. As long as all values are entered by the user EBLWin performs all calculations automatically.

The total current consumption for each control unit, excluding battery charging current, has to be calculated. This is in order to get a current consumption overview so that the rectifier will not be overloaded and to check / calculate the required battery capacity.

There is no battery charging during fire alarm.

The current consumption values in each Technical description respectively can be used to calculate the following current consumptions:

- I^{CN} = current consumption for the control unit in normal state. Including the COM loop units. Not including the battery charging current.
- I^{RN} = current consumption for all external equipment in normal state. For example display units, door release magnets, relays, routing equipment and so on.
- I^{CA} = current consumption for the control unit in alarm state. Including the COM loop units. Not including the battery charging current.
- I^{RA} = current consumption for all external equipment in alarm state. For example display units, door release magnets, relays, routing equipment and so on.

21.8.1. COMMENTS REGARDING (I^{TN})

The total EBLOne current consumption in Normal (quiescent) state: $I^{TN} = I^{CN} + I^{RN}$

I^{TN} must be < 0.41 A otherwise the battery charger may not get enough current..

21.8.2. COMMENTS REGARDING (I^{TA})


The total EBLOne current consumption in Alarm (activated) state: $I^{TA} = I^{CA} + I^{RA}$

I^{TA} has to be < 1.5 A.

For the total EBLOne current consumption in relation to backup time, see tables in section [22.3. SECOND POWER SOURCE – BATTERIES](#) on page 167.

22. POWER SUPPLY

22.1. POWER SUPPLY OVERVIEW

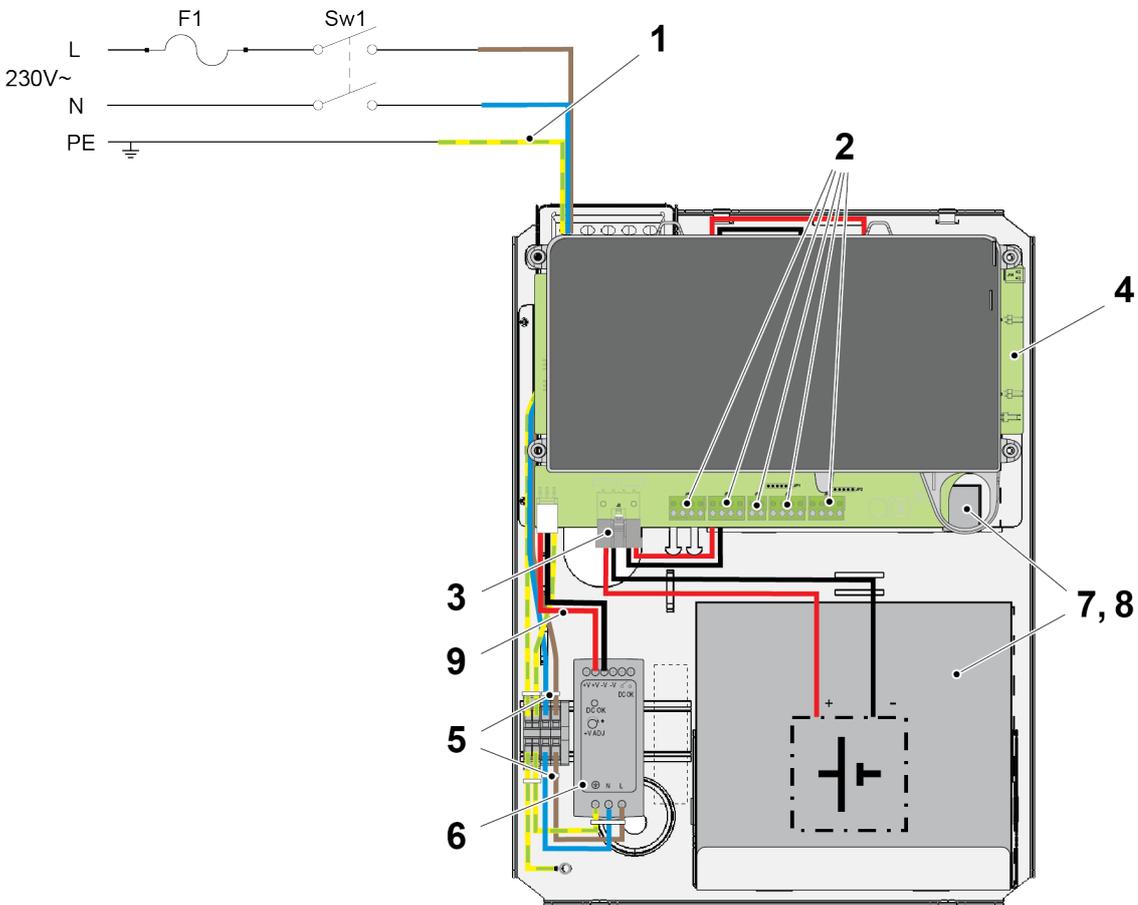

Power supply function in CIE	Min / max voltage	Min / max current
1) Mains, 230 V AC	195 V / 253 V AC	
2) Output current for continuous use. (I_{max}^a) Output current for continuous use, no battery charging. (I_{max}^b) Output voltage	22.0 / 25.0 V DC	300 mA 1150 mA
3) Battery charging current from main board to the battery.	10.0 - 14.5V, Nom 13.65V	Max 1.3 A
4) Main board	-	110 mA / 240 mA
5) Cable tie to keep the 24V DC conductors well separated from the mains conductors	-	-
6) Power supply, 230V AC, 1.1 A / 24V DC, 1.7A	-	-
7) Internal batteries 2 x 12V, 17 Ah or 1 x 12V, 17 Ah	-	-
8) Battery supply, by loss of 230V AC. Rlmax: 0.5 Ω / battery	10.2 / 14.5V	-
9) Internal Power Supply Output	23.8 V / 24.2 V	Max 1.7 A

22.2. MAIN POWER SOURCE - RECTIFIER

Normally the EBLOne control unit is powered by the built-in power supply, a rectifier, 230V AC / 24V DC $\pm 1\%$, 1.7 A. Allowed input voltage is 100-240V AC. The output voltage is 24 V with a tolerance of $\pm 1\%$.

The output voltage is factory set to 24 V. On the rectifier is a potentiometer for output voltage adjustment ($\pm 10\%$) available. Do not use this potentiometer unless the output voltage is not 24 V.

22.3. SECOND POWER SOURCE – BATTERIES

The batteries are not included in the CIE.

By loss of 230 V AC the control unit is powered by backup batteries, one or two sealed lead-acid batteries, VRLA cells, 12 V, 17 Ah. There is space in the EBLOne control unit for the batteries, 12 V, 17 Ah,

- MAX physical size 168 x 182 x 78 mm (H x L x W) inside CIE.
- Internal batteries shall fulfil UL94-V1 or better, including a relevant VRLA battery safety standard (IEC, EN, UL).
- Only batteries with a specified "Final voltage" of 10.5 V must be used.
- Max operating temperature during charging: 50°C
- The batteries shall be marked with their type designation and code or number identifying the production period.

The batteries and the rectifier are connected to the main board, which also handles the charging of the batteries.

Battery wiring must fulfill IEC 60332, 60695-11-21, or UL2556 (Flammability test). The European Standard EN 62368-1 and national regulations must be followed.

Battery charging will be turned off during fire alarm condition.

22.3.1. BATTERY CAPACITY - THEORY

Find out the required battery backup time, according to national regulations / customer demands, in normal state and in alarm state. Calculate the battery capacity required in normal state (QN) and the battery capacity required in alarm state (QA) respectively.

- $Q_N \text{ (Ah)} = I_{TN} \text{ (A)} \times \text{battery backup time in normal state (h)}$
- $Q_A \text{ (Ah)} = I_{TA} \text{ (A)} \times \text{battery backup time in alarm state (h)}$

The total battery capacity @ 24V $Q = Q_N + Q_A \text{ (Ah)}$

Since the batteries operate at 12V and the switch that switches 12V to 24V has an efficiency of 85% the total installed battery capacity will be $Q_{\text{batt}} = Q \times 2 / 0.85 \text{ (Ah)}$

The electrical capacity of the batteries varies with ambient temperature and discharge current. Furthermore the battery voltage at the end of a discharging period is not the same as at the start. For this reason it is wise to round up the calculated capacity and add 10%, as safety margin.

If the ambient temperature is below 20 °C the safety margin has to be even larger since the electrical capacity of the batteries decreases. At 0 °C add 30% and at 10 °C add 20% to the calculated capacity.

22.3.2. BATTERY CHARGING

According to EN54-4, section 5.3.1 b): The charger shall be designed and rated so that a battery discharged to its final voltage can be recharged to at least 80% of its rated capacity within 24 hours and to its rated capacity within another 48 hours.

If the EN54-4 section is to be fulfilled, the battery capacity of the backup batteries is limited to 2x17 Ah.

However, batteries of larger capacity are possible to use, but will not be recharged within the prescribed time interval. This results in an EN54 violation.

Batteries of smaller capacity than 17 Ah, can be used but it must be checked that the batteries can be charged with 1.3A since this is the current used during the charge current step.

Too high charging current can cause abnormal internal heating which may damage the batteries.

22.3.3. BATTERY CHARGING FUNCTION

Battery charging is performed in two steps:

- 1) **Constant current.** The charging current is constant 1.3 A until the charging voltage reaches 14.5 V.
- 2) **Constant voltage.** The charging voltage is reduced from 14.5 to something between 13.3 and 14.1 V, depending on the temperature, and will be constant at this level until the batteries are fully charged.

When the battery is fully charged the stand-by "charging current" is very low (almost 0 for a new battery but increases with battery age) and the "charging voltage" will stay constant (fixed) at the "step 2" level, until the batteries have been discharged and have to be charged again. A new charging cycle will then start. The duration of "step 1" and "step 2" respectively is depending on the condition of the battery when the charging starts.

22.3.4. SECURITY FUNCTIONS

The battery charging will be turned off if the current from the rectifier to the Main board exceeds 1.5 A. The battery charging will remain turned off as long as the EBLOne current consumption exceeds 0.6 A. The following fault message will be shown:

FAULT: Control unit xx high current consumption

In case of charger out of work the following fault message will be shown:

FAULT: Charger control unit xx

In order to not damage the batteries, the voltage output will be switched off at approximately 10.3 V. This only happens in case of no main power source (230 V AC). That means the backup batteries are used as power source.

If the battery voltage is below 10 V, the battery charging will not start. The batteries are then damaged and have to be changed.

In case of no mains and after a time delay of 1-300 minutes (programmable in EBLWin but max. 30 min. according to the EN54-4 standard), the following fault message will be shown:

FAULT: Mains, control unit xx

23. SYSTEM LIMITATIONS

23.1. USER DEFINABLE TEXTS

All alarm points can have its own "alarm text" in EBLOne.

Technical warnings, external faults, time channels (external and internal), control groups, and zone groups must have unique names.

23.2. CIE

Item	CIE
General fire alarm via progr. input	100
External fault via progr. input	50
Programmable inputs	128
Programmable outputs (= control expressions)	200
Technical warnings	100
Interlocking Combinations	100
Presentation numbers / alarm points that can be presented in the display(s) in case of fire alarm	256
Presentation numbers that can be programmed	256
Zones that can be programmed	128
Faults	300
Disabled zones	256
Disabled alarm points (zone/address) + Disabled COM loops (Zone/address disabled via time channel not included.)	200
Disabled outputs (Control outputs disabled via output type not included.)	200
Disabled interlocking outputs (Interlocking outputs disabled via menu Output types  >  >  are not included.)	100
Sensors activating SERVICE signal	200
Max. number of LAA zones (Max. 5 detectors per LAA zone.)	100
Control groups	100

23.3. RESERVED ADDRESSES

The addresses 254 and 255 will be reserved for auto addressing purpose and cannot be used. If these addresses are used there will be a fault in the "Validity check".

24. COMMISSIONING THE SYSTEM

This chapter describes the correct sequence to install, set and check your system.

Make sure to read the complete Technical description for each unit included in the system before commissioning the system.

PREPARATIONS AND MOUNTING

- a) Draw the wiring for the system.
- b) Mount and connect the CIE according to Technical description for the CIE.

SET THE COM LOOP ADDRESS and SET THE MODE

- c) Set the address and mode to all units according to the Technical description for each unit.

INSTALLATION AND WIRING

- d) Connect the units to the loop according to the Technical description for each unit.

CONNECTIONS

- e) Connect the system to the mains.

PROGRAMMING IN EBLWIN

- f) Program the system in EBLWin version 3.8.X.

SOFTWARE

- g) If necessary, download software to the control unit. See chapter [17. DOWNLOAD SOFTWARE \(S/W\)](#) on page 145.

The CIE is always delivered with the latest software version.

GATEWAY

- h) Download software to the gateway. Make sure the software version matches the control unit software, at least two first digits X.Y.Z. See chapter [8. GATEWAY – RS232 INTERFACE](#) on page 39.

CHECK

- i) See chapter [11.22. CHECK LOOP](#) on page 90.

Before downloading the SSD to the system, use the function check loop and handle if any faults.

DOWNLOADING SSD

- j) Download configuration to the gateway.
- k) Download SSD to the system. EBLWin version matches the control unit software, at least two first digits X.Y.Z. See chapter [16. DOWNLOAD SSD](#) on page 142.

TEST

When the system is commissioned and running, all alarm points, inputs, outputs, and so on shall be tested. System tests, connected external systems included, shall be tested.

DOCUMENTATION

Installation documents and test reports shall be prepared after the tests.

The documentation shall be saved and printed for the inspection and handover of the system.

All other actions / requirements according to national regulations shall be fulfilled.

DOCUMENT NAME: PLANNING INSTRUCTIONS 3.8.0
DOCUMENT NUMBER: MEW03041
DATE OF ISSUE: 2025-02-25
REV: 1
DATE OF REVISION: 2025-03-31

Panasonic Fire & Security Europe AB

Jungmansgatan 12
SE-211 11 Malmö
SE
Tel: +46 (0)40 697 70 00